

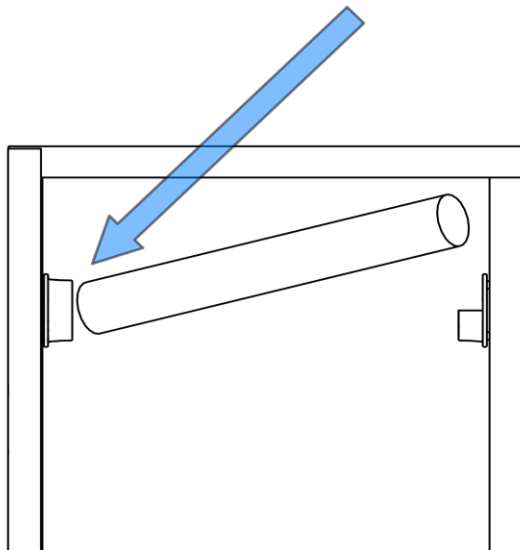


Coat Rod Installation Instruction

Open unit to install coat rod

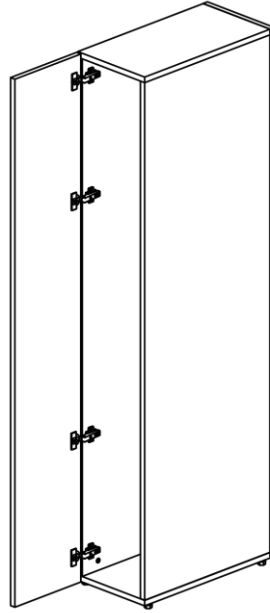

Angle coat rod into coat rod cup

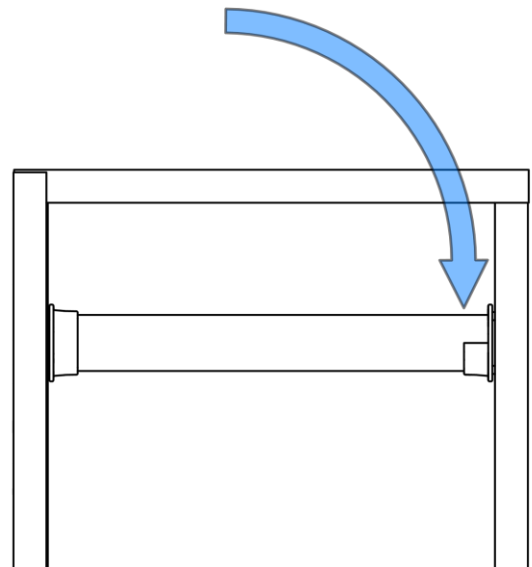

Rotate coat rod down into coat rod support