 



Height Adjustable Laptop Table Installation Instructions

Date	Page No.	Description of change	Name
09/28/2026	1-5	Released	S. Powers





Thermofoil Worksurface

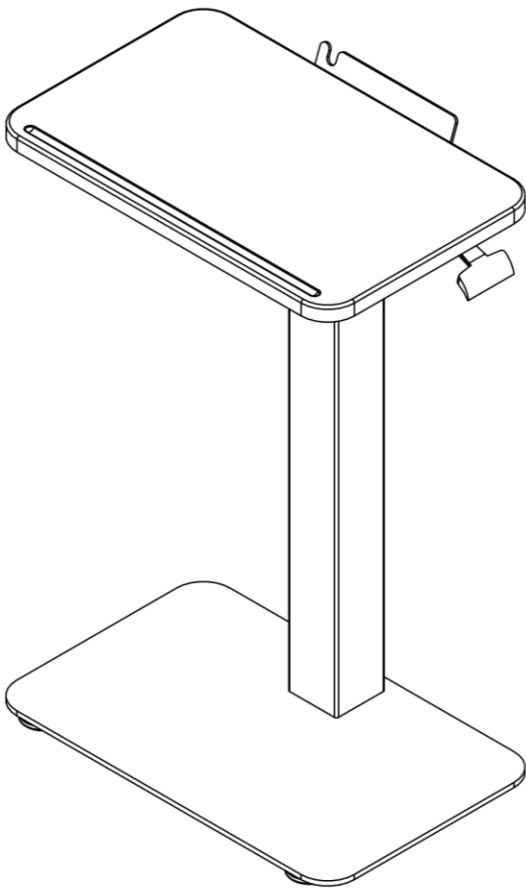

 TFL Worksurface

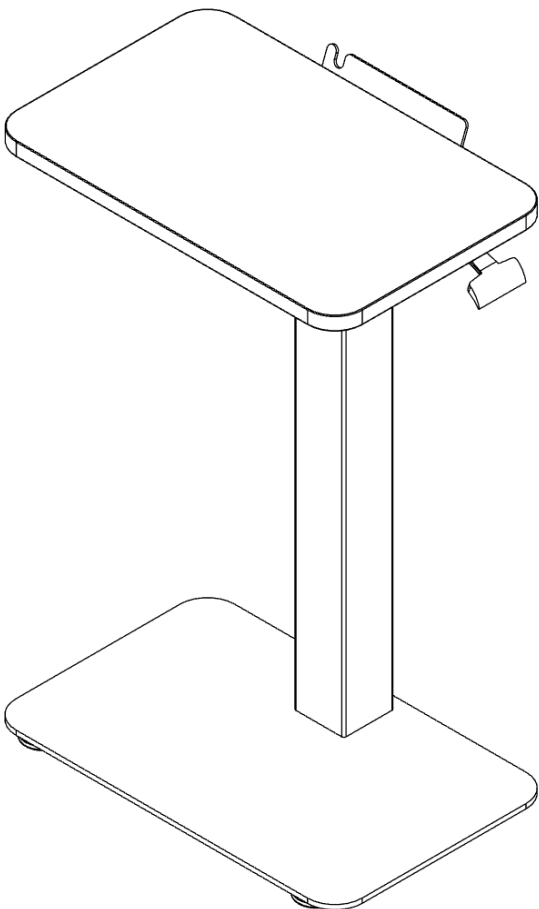


    Height Adjustable Laptop Table Installation Instructions

Item	Replacement Part number	Circle Sheet Part Number	Description	Image
P1	RP-LTT70X70-xx (xx = BK, MS or WH black, metallic silver or white)	RP-LTT70X70-xx (xx = BK, MS or WH black, metallic silver or white)	Height Adjustable Laptop Table Column	
P2	RH-V23115	RH-V23115	Glide 50mm Dia x 8mm	
P3	RH-V23115-AB	RH-V23115-AB	Adhesive Backing 50mm Dia	
P4	P-LTTBPHA	RP-LTTBPHA	Base Plate	
P5	RH-91294A246	RH-91294A246	M6 x 1mm x 45mm Flat Head Hex Screw	
P6	P-LTTTPHA	RP-LTTTPHA	Top Plate	
P7	T-LTR	RW-LTTTHA (TFL)	TFL Worksurface	TFL Thermofoil 
		MODLTTTHA (Thermofoil)	Thermofoil Worksurface (with pencil tray)	
P8	RH-QS0934-I	RH-QS0934	#9 x 3/4" Flat Head Screw	

Height Adjustable Laptop Table Installation Instructions

 
Step 1: Tighten the lever using the adjustment nuts until it's taut. Then, attach to the column and extend the column to verify that the column is functioning correctly. (The column may stick on the first use)

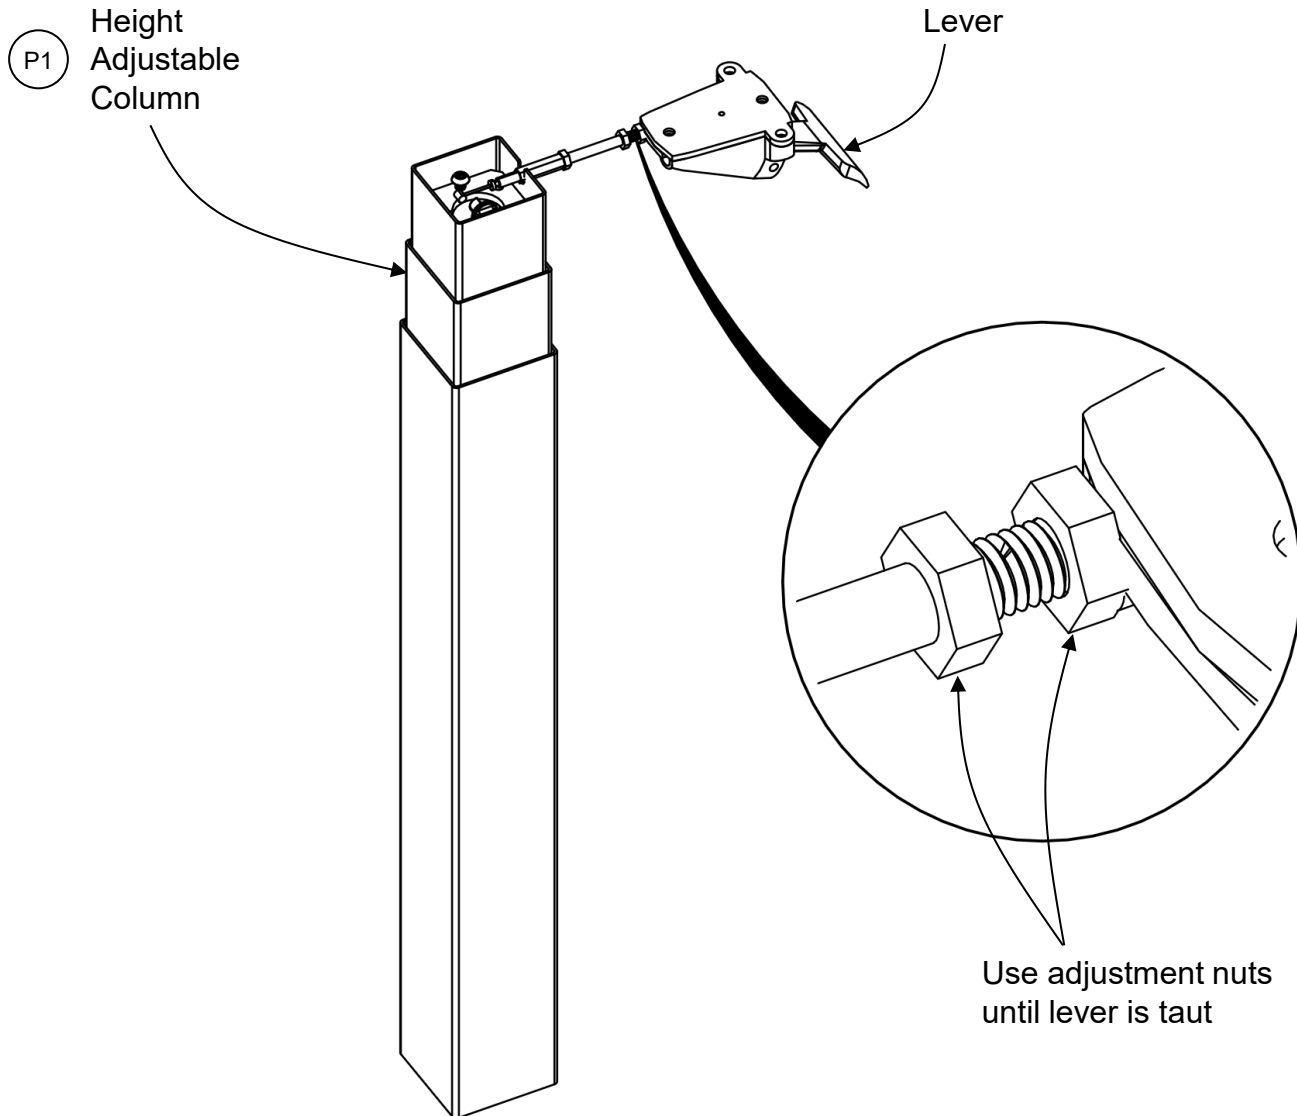


Height Adjustable Laptop Table Installation Instructions

Step 2: Remove backing from one side of adhesive and apply to glide. Then remove second backing from adhesive and apply glides to base plate.

 
Adhesive backing (qty 4)

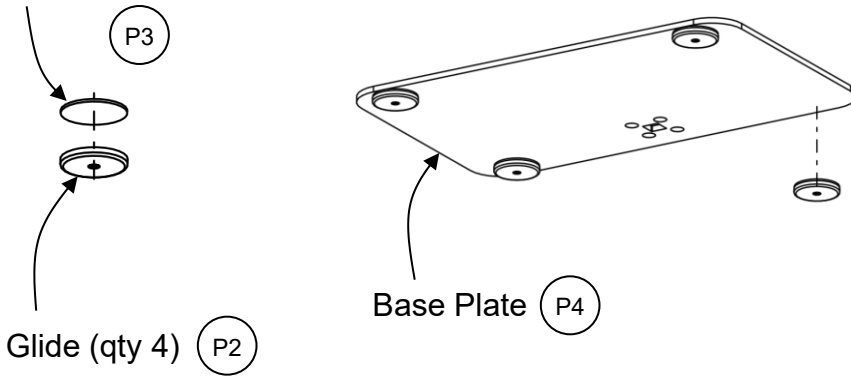

Locate glides approximately as shown

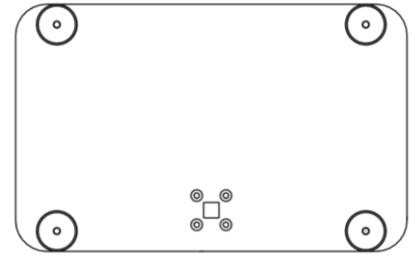 


 Step 3: Install the base plate to the height adjustable column.

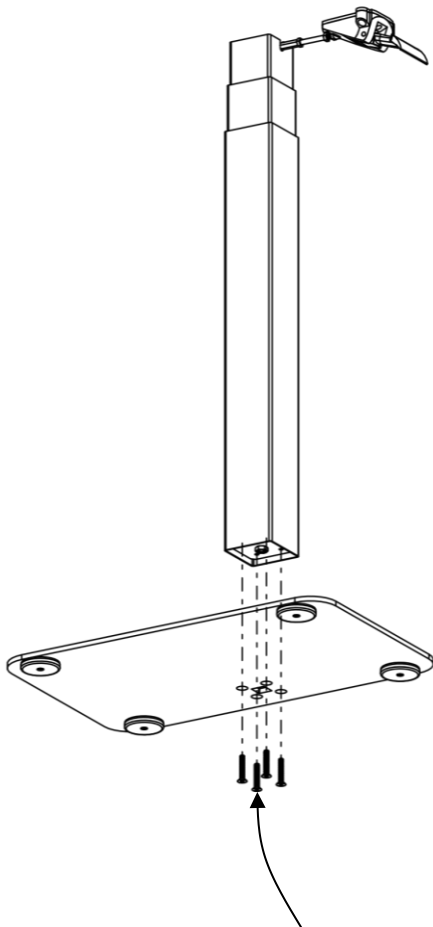


P5 M6 x 1mm x 45mm long Flat Head Screw 4 mm Hex Drive 4 places

 Step 4: Install the top plate to the height adjustable column.

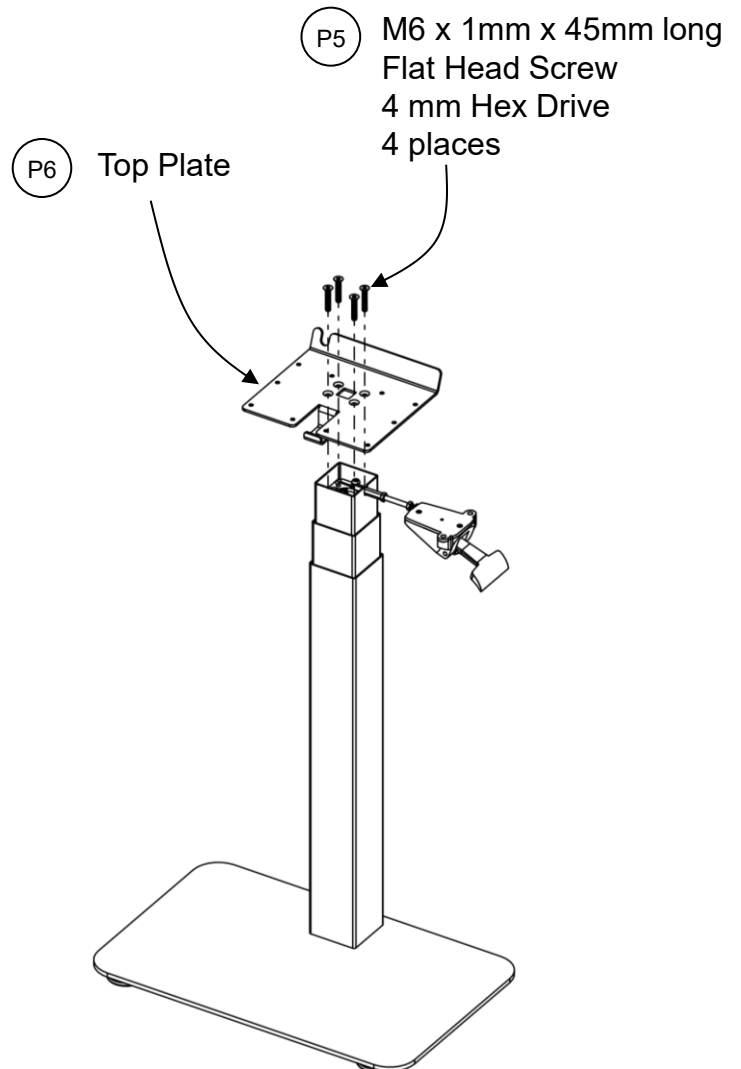

Height Adjustable Laptop Table Installation Instructions

 Step 5: Install tabletop to top plate, aligning pilot holes to top plate

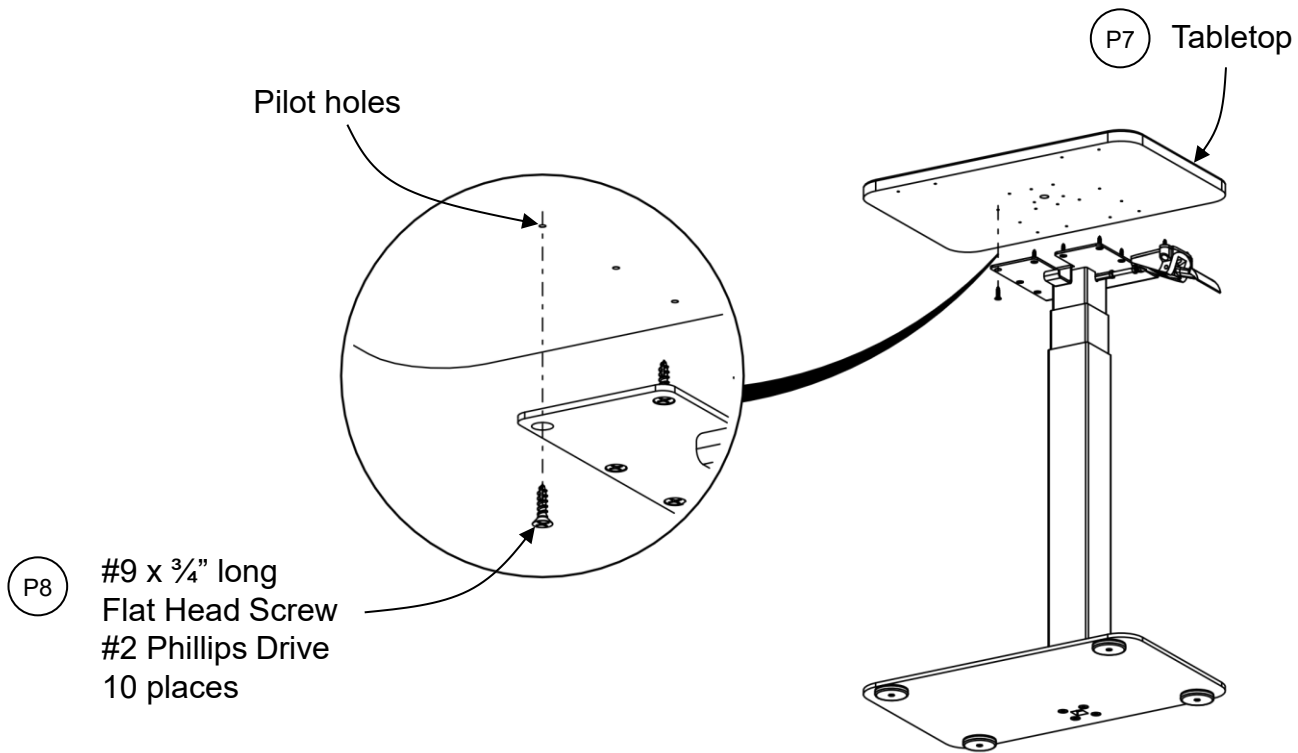

Step 6: Secure lever to tabletop.

