





Divi System Main Installation




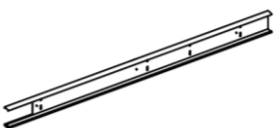
Date	Page No.	Description of change	Name
07/07/2025	1-51	Released	S. Powers
10/17/2025	5-6	Fix images on P39 – P42	P. Day
09/04/2026	50	Added Divi Door Shroud Instruction	S. Powers

Table of Contents	
Wall Mount Kit	Pg. 7-11
Panel Alignment	Pg. 12-15
Staging Raceway Base Covers	Pg. 16
Corner Connection Bracket	Pg. 17
In Line Power Pole – End of Run	Pg. 18-22
In Line Power Pole – 2 Way	Pg. 23-27
In Line Power Pole – 3 Way	Pg. 28-32
In Line Power Pole – 4 Way	Pg. 33-37
Double Channel Power Pole	Pg. 38-44
Electrical – Receptacle Mount Base In Feed	Pg. 45
Electrical – Outlets and Jumpers	Pg. 46
Raceway Endcap	Pg. 47
Raceway Shrouds	Pg. 48
Raceway Covers	Pg. 49
Door Shrouds	Pg. 50
Endcap Topcaps	Pg. 51
Support and Worksurfaces	Pg. 52





Divi System Main Installation

Item	Replacement Part number	Circle Sheet Part Number	Description	Image
P1	P-VLHFPBxx (xx = nominal in.)	RP-VLHFWBxx (xx = nominal in.)	Divi Wall Mount Hanger Frame Base	
P2	P-VLHFPCxx (xx = nominal in.)	RP-VLHFWCxx (xx = nominal in.)	Divi Hanger Frame Cover	
P3	P-VLECA3	RP-VLECA3	Endcap Topcap	
P4	RP-VSHxx (xx = nominal in.)	RP-VSHxx (xx = nominal in.)	Hinge	
P5	P-VLWMTC	RP-VLECAW3	Wall Mount End Topcap	
P6	P-VKRCPxxxx (xxxx = nominal in. and color)	RP-VKRCPxxxx (xxxx = nominal in. and color)	Raceway Base Cover	
P7	P-DVCB	RP-DVCKxx (xx = color)	Corner Connection Bracket Kit	
P8	RE-HS1058F	RE-HS1058F	#10-24 x 5/8" Pan Head Thread Cutting Screw	
P9	P-VSPPIILxx (xx = nominal in.)	RP-VSPPIILxx (xx = nominal in.)	In Line Power Pole Shell	
P10	P-VSEORS	RP-VSEORS	End of Run Power Pole Shroud	






Divi System Main Installation

Item	Replacement Part number	Circle Sheet Part Number	Description	Image
P11	P-VSPPIIL2	RP-VSPPIIL2	2 Way Power Pole Shroud	
P12	P-VS180SM	RP-VS180S	3 Way Power Pole Shroud	
P13	P-VSPPIILCxx (xx = nominal in.)	RP-VSPPIILCxx (xx = nominal in.)	In Line Power Pole Cover	
P14	A-VSPPCP	RA-VSPPCP	In Line Power Pole Coupler	
P15	RP-MXHS83214A-I	RP-MXHS83214A	#8-32 x 5/16" Pan Head Screw	
P16	A-VSPPDxx (xx = nominal in.)	RA-VSPPDxx (xx = nominal in.)	In Line Power Pole Divider	
P17	TSP838-A	TSP838-A	#8 x 3/8" Pan Head Drilling Screw	
P18	P-VSPPCS	RA-VSPPCS	In Line Power Pole Ceiling Shroud	
P19	A-PPGAS	RA-PPGAS	Plastic Retainer	
P20	P-PPSUN	RA-PPSUN	Double Channel Power Pole Shell	



Divi System Main Installation

Item	Replacement Part number	Circle Sheet Part Number	Description	Image
P21	A-PPBDV1	RA-PPBDV	Double Channel Power Pole Mounting Bracket	
P22	A-KEYBN2	RA-KEYBN	#8-32 Acorn Nut	
P23	A-PPCP	RA-PPCP	Double Channel Power Pole Coupler	
P24	A-PPDUN	RA-PPDUN	Double Channel Power Pole Divider	
P25	A-PPCV	RA-PPCV	Double Channel Power Pole Cover	
P26	A-PPCS	RA-PPCS	Double Channel Power Pole Ceiling Shroud	
P27	P-DLSEOR	RP-VLECxx (xx = color)	Raceway Endcap	
P28	P-DLBS3W	RP-VSDS3W90	3 Way 90° Raceway Shroud	
P29	P-DLBS90	RP-VSDS90	2 Way 90° Raceway Shroud	
P30	P-DLBS45	RP-VLBS45M	2 Way 45° Raceway Shroud	

Divi System Main Installation

Item	Replacement Part number	Circle Sheet Part Number	Description	Image
P31	P-DLBS60	RP-VLBS60M	2 Way 60° Raceway Shroud	
P32	RH-SMBMTP17834I	RH-SMBMTP17834B	#8-32 x 3/4" Pan Head Screw	
P33	WPS-UNCT24L	RWPS-UNCT24L	24" Cantilever Left	
P34	WPS-UNCT30L	RWPS-UNCT30L	30" Cantilever Left	
P35	WPS-UNCT24R	RWPS-UNCT24R	24" Cantilever Right	
P36	WPS-UNCT30R	RWPS-UNCT30R	30" Cantilever Right	
P37	WPS-UNCT24S	RWPS-UNCT24S	24" Shared Cantilever	
P38	WPS-UNCT30S	RWPS-UNCT30S	30" Shared Cantilever	
P39	WPS-SSSAL	RWPS-SSUNL	Side / Rear Support Bracket Left	
P40	WPS-SSSAR	RWPS-SSUNR	Side / Rear Support Bracket Right	


Divi System Main Installation

Item	Replacement Part number	Circle Sheet Part Number	Description	Image
P41	WPS-CT10L	RWPS-CT3L	10" Shelf Cantilever Left	
P42	WPS-CT10R	RWPS-CT3R	10" Shelf Cantilever Right	
P43	RH-QS0978-I	RH-QS0978	#9 x 7/8" Flat Head Screw	
P44	RC-HDST	RC-HDST	Double Sided Tape	
P45	P-DVDBSL90	RP-VSDBSL90	Divi Door Shroud 2-Way Left Hand	
P46	P-DVDBSR90	RP-VSDBSR90	Divi Door Shroud 2-Way Right Hand	
P47	P-DVDBS3W	RP-VSDBS3W	Divi Door Shroud 3-Way	




Customer must ensure structural integrity of the wall is sufficient to support the wall mounted product. Wall mounting hardware (toggle bolt anchors, toggle bolts, screws, etc.) to be verified by the Building's Engineer of Record, even if provided by AIS. Install mounting hardware per the hardware manufacturers instructions.


Step 1: Position and secure the Divi wall mount hanger frame to studs in a load bearing wall.

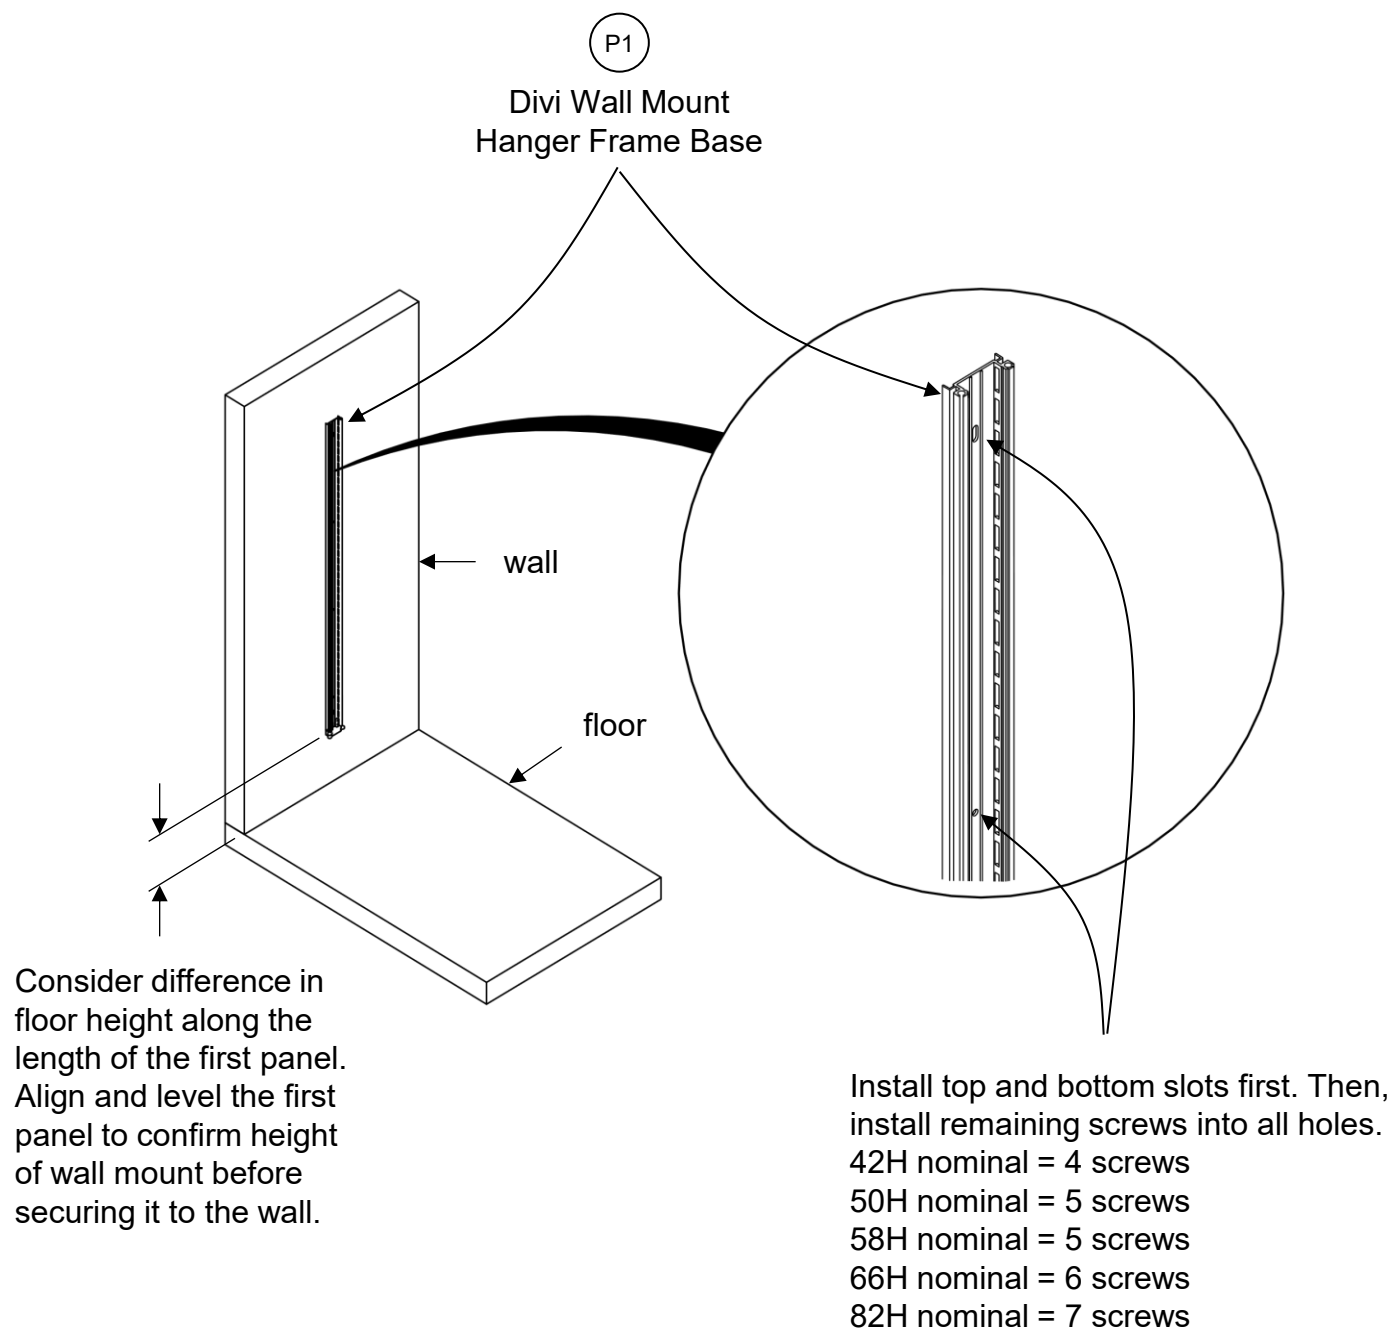

Step 2: Press Divi hanger frame cover into the hanger frame, making sure the cover is flush to the top.

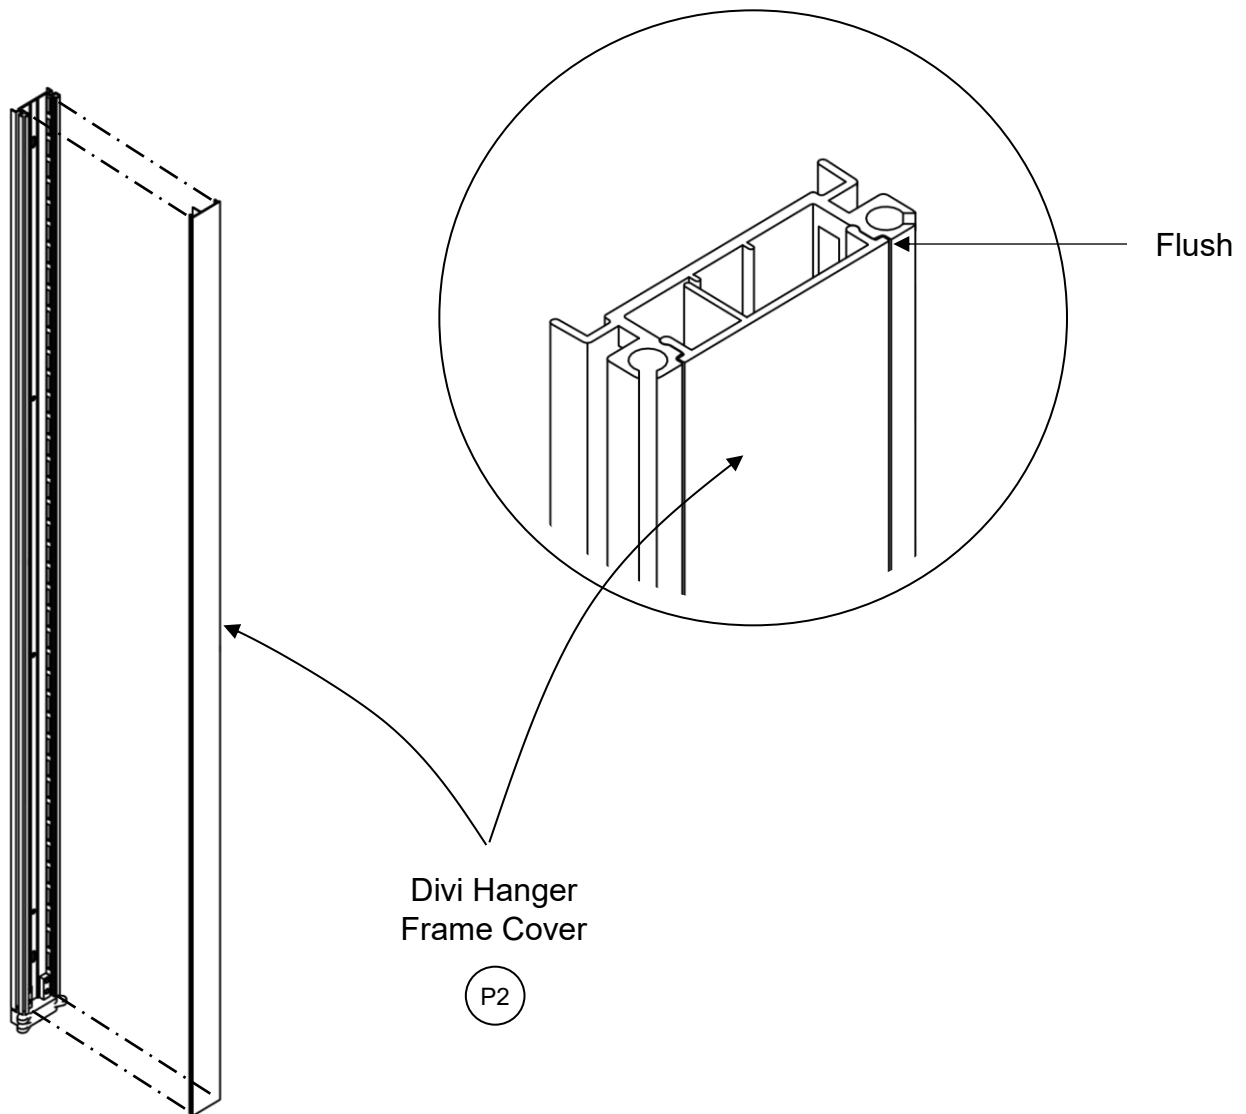

Step 3: Remove endcap top cap from the adjacent Divi panel.


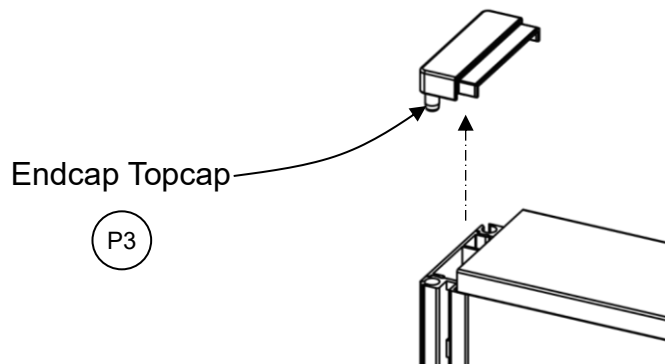


Step 4: Align the divi panel to the wall mount and install hinges.

See Chart below for length and quantity requirements. (note: always start with the shortest hinge)





TIP: Failure to hold panels aligned and plumb will make installation difficult

	HINGE LENGTH AND NUMBER OF HINGE SEGMENTS REQUIRED PER PANEL HEIGHT (NOTE: QUANTITIES FOR EACH SIDE OF PANEL)				
PANEL HEIGHT	12 ³ / ₄ "	20 ³ / ₄ "	28 ³ / ₄ "	36 ³ / ₄ "	52 ³ / ₄ "
42"	1	1			
50"		2			
58"		1	1		
66"		1		1	
82"		1			1

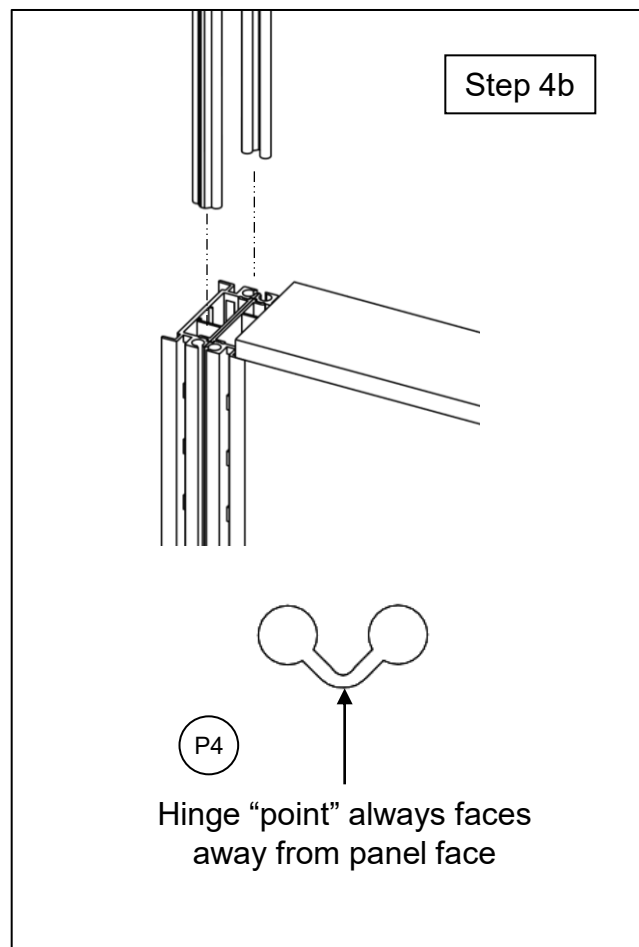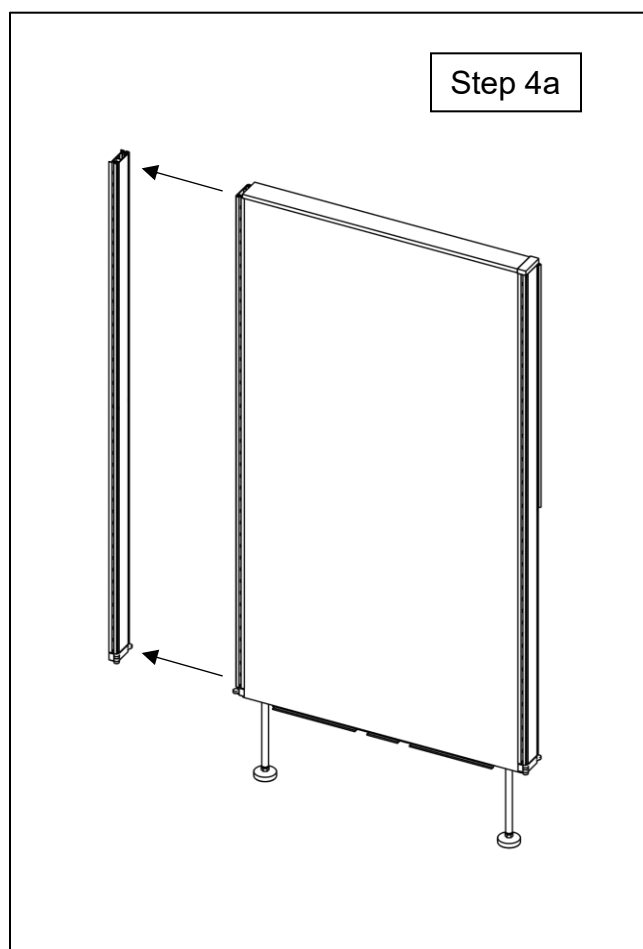

TIP: Use a non-marring mallet to GENTLY tap hinge down until flush with top of the hanger rail.

TIP: Use screwdriver as shown in Fig A

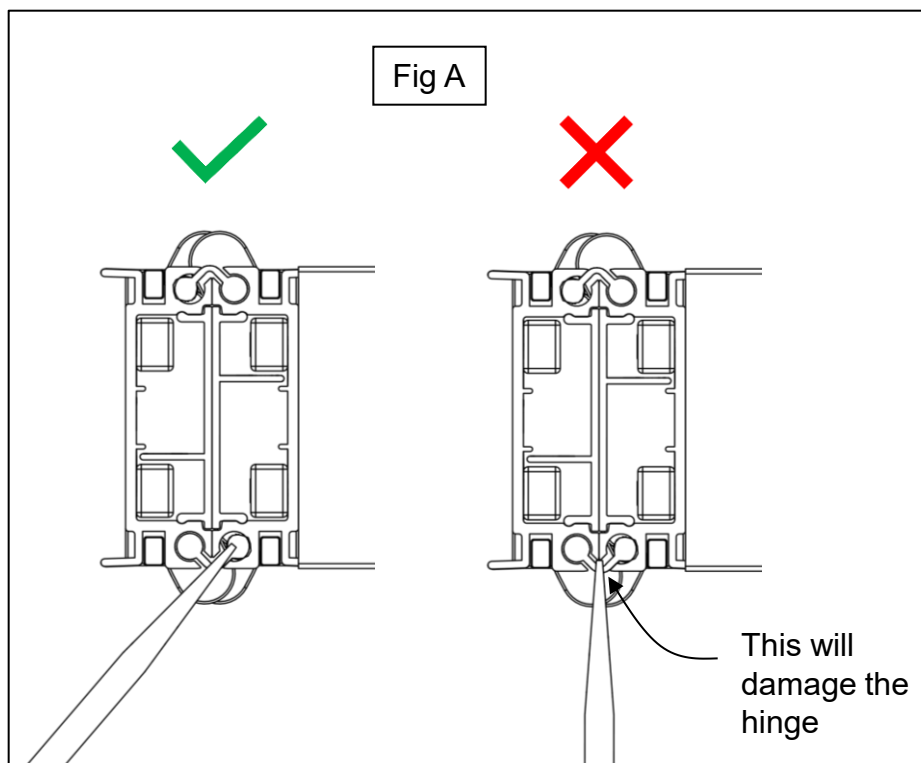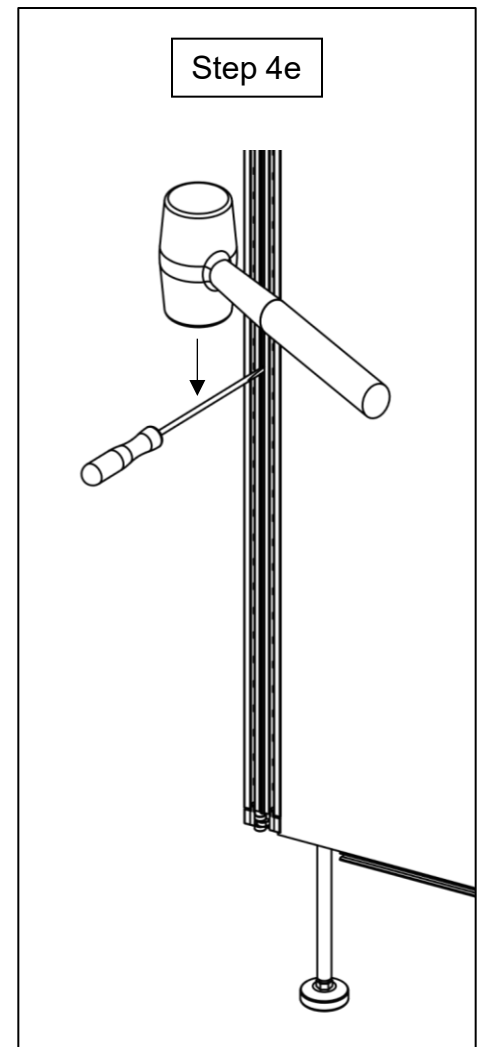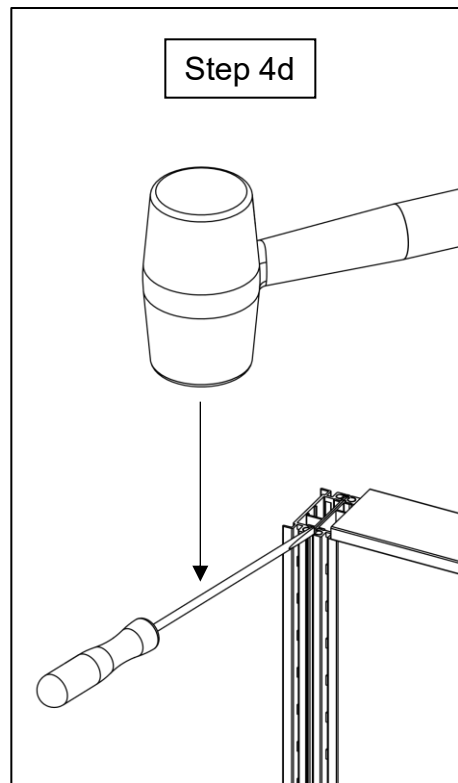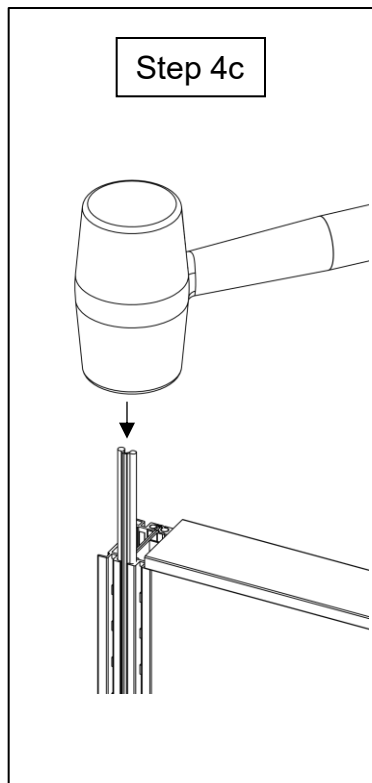


Step 5: Install end top caps




Lift end of panel topcap up ½" max.
Do not bend or crease topcap.
Install the endcap under the topcap.

P3

Endcap Topcap

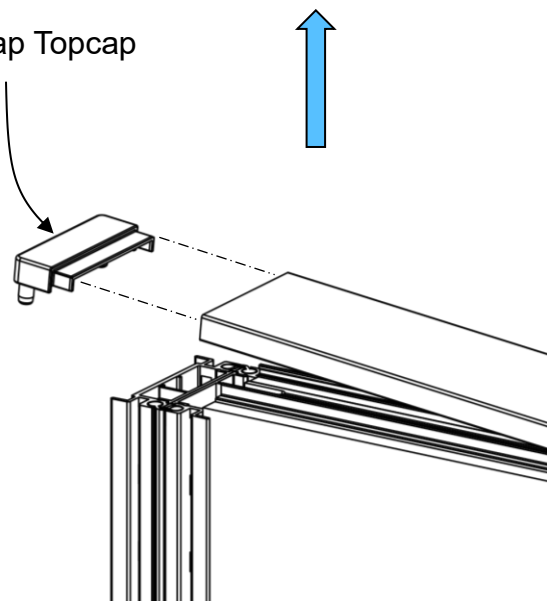


Use a non-marring mallet to GENTLY tap into place

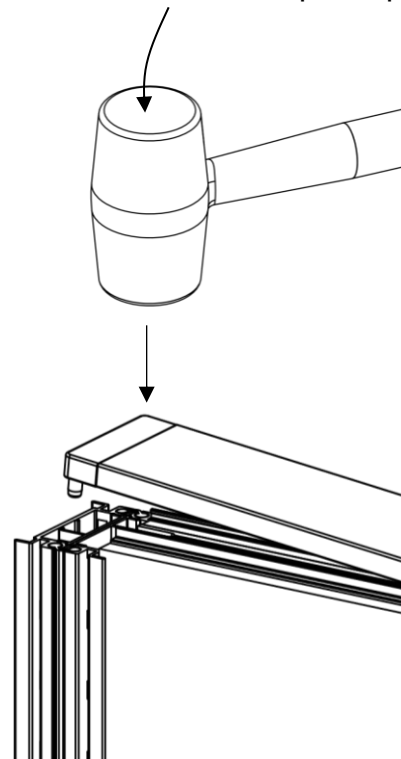


P5

Wall Mount
End Topcap

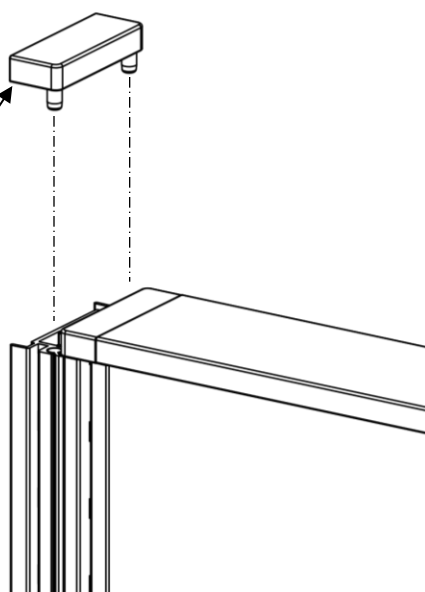



Step 1a: Align panels, making sure panels are flush and are in a straight line (180° to each other).

TIP: If possible, start at a 2-way connection closest to the highest point on floor to make leveling panels easier as you build.

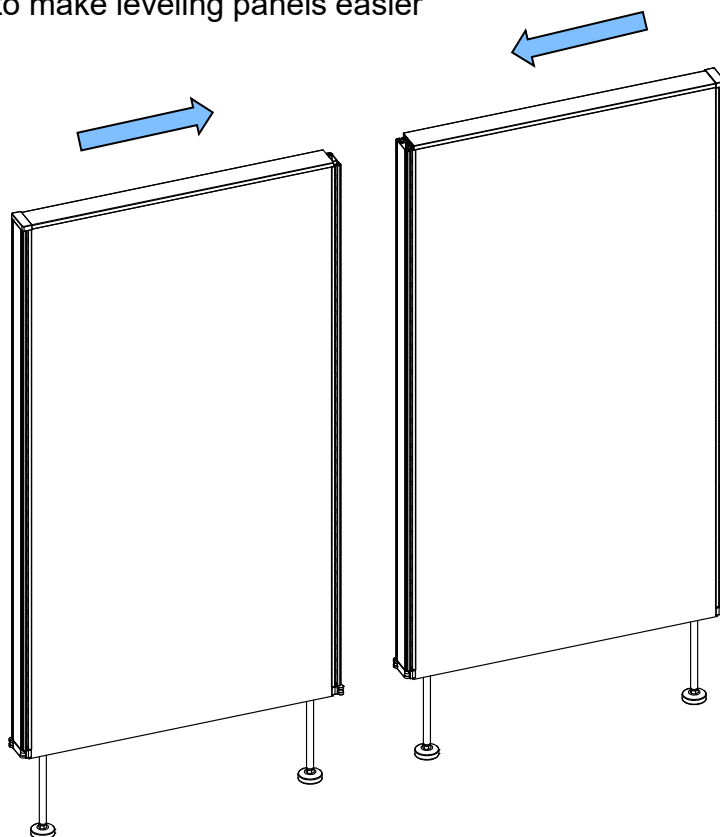


Step 1b: Horizontally align Vertical Alignment Tabs at the bottom of the Hanger Rail. Adjust glides to raise or lower panels as needed. Interlock tabs as shown here.

Note: Hanger Rail edges should ALMOST touch.
(see TOP VIEW)

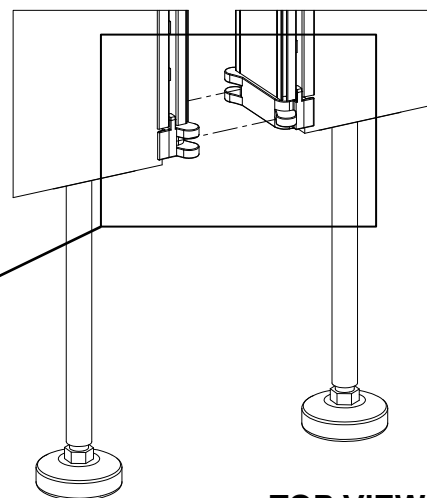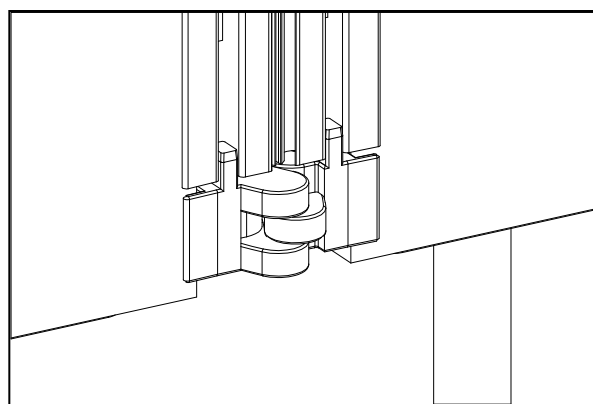

TOP VIEW

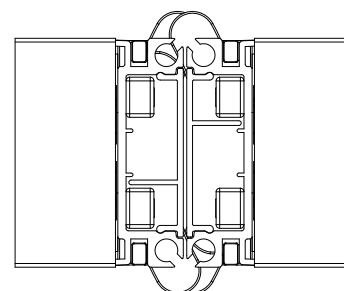


Divi System Main Installation

Step 2: Install Hinges. See Chart below for length and quantity requirements.
(note: always start with the shortest hinge)

TIP: Failure to hold panels aligned and plumb will make installation difficult


Use a non-marring mallet to GENTLY tap hinge down until flush with the top of the hanger rail.

Panel Alignment

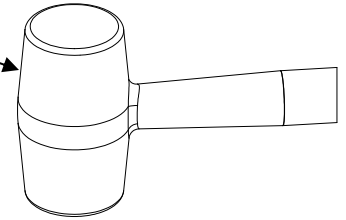

	HINGE LENGTH AND NUMBER OF HINGE SEGMENTS REQUIRED PER PANEL HEIGHT (NOTE: QUANTITIES FOR EACH SIDE OF PANEL)				
PANEL HEIGHT	12 3/4"	20 3/4"	28 3/4"	36 3/4"	52 3/4"
42"	1	1			
50"		2			
58"		1	1		
66"		1		1	
82"		1			1


Step 2b

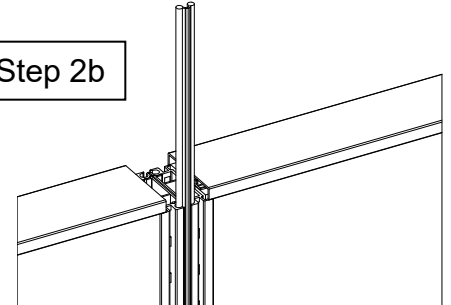

Hinge "point" always faces away from panel face

P4

Step 2a

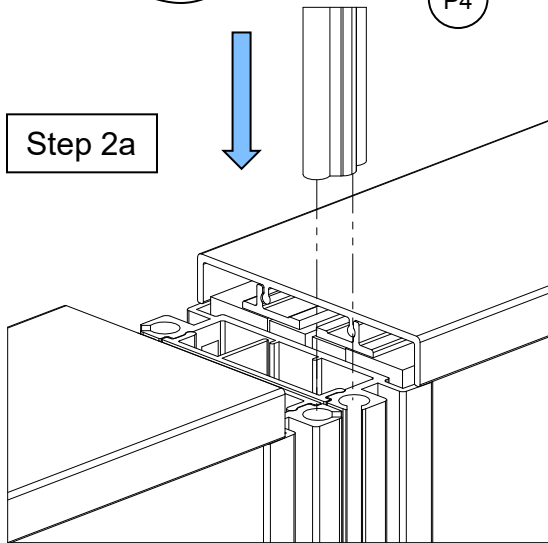

Step 2c

Use a screwdriver as shown in Fig D. GENTLY tap shaft of screwdriver until the hinge is seated at the bottom of the panel.



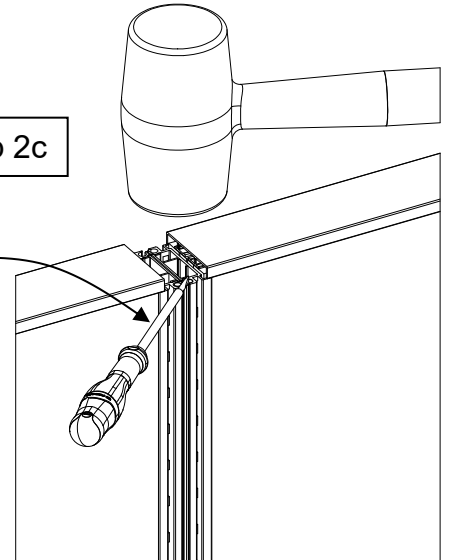


Fig D - CORRECT

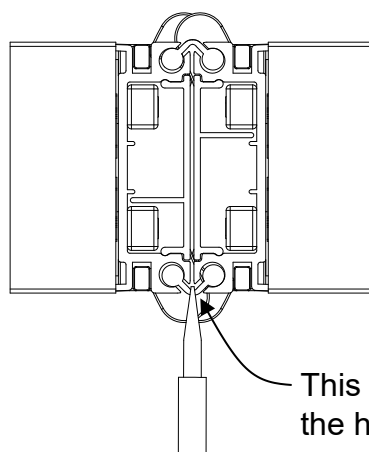


IN-CORRECT

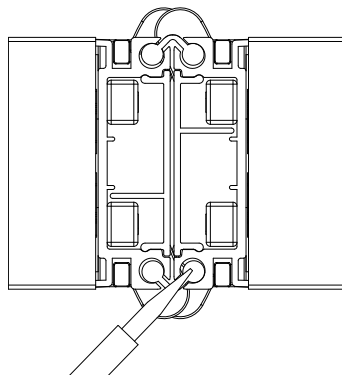

This will damage the hinge

Step 2d

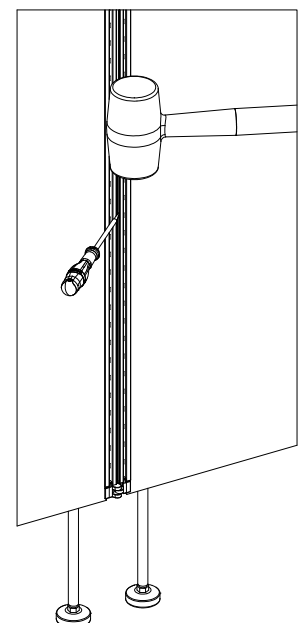

AI**S**

www.ais-inc.com


P-DVINSTRUCT08 Rev 09.04.2026

Divi System Main Installation

Panel Alignment

Straight line (180°)


Install hinges on both sides of hanger frame

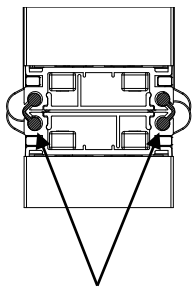




Hinge

2 way (90°, 60° or 45°)


Install hinges on one side of hanger frame, then rotate panels to appropriate angle

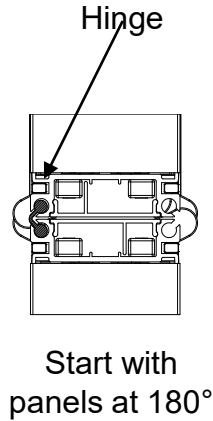


Start with panels at 180°

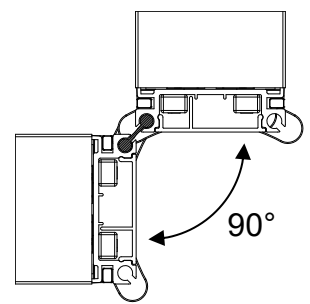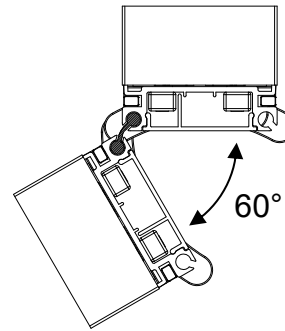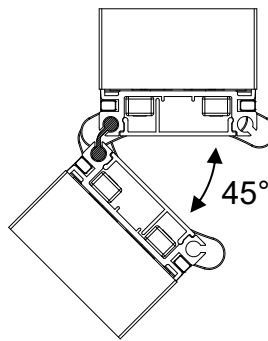


3 way (90°)

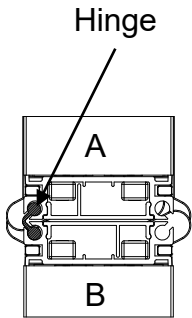


Start with panels at 180° and install one hinge combo

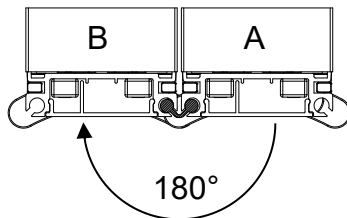

Rotate panel B 180°

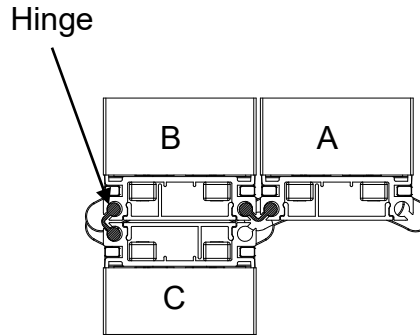


Install panel C and add hinge combo between panel B and C

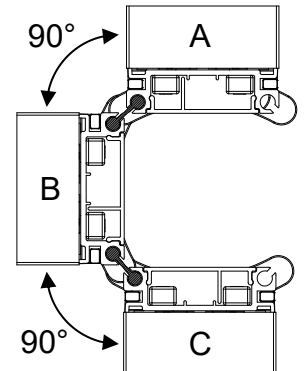


Rotate panels B and C 90°

3 way (120°)


TIP: If final hinge is difficult to install, you MAY need to cut hinge in shorter lengths to reduce friction

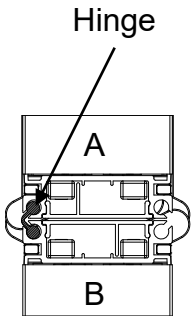


Start with panels at 180° and install one hinge combo

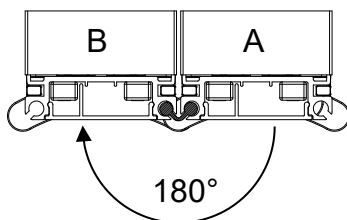


Rotate panel B 180°

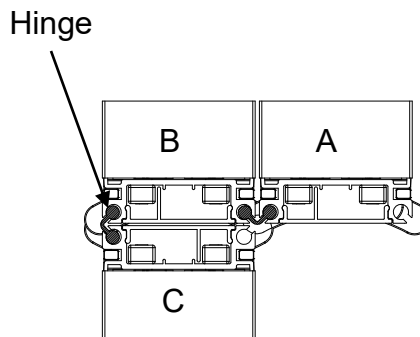

Install panel C and add hinge combo between panel B and C

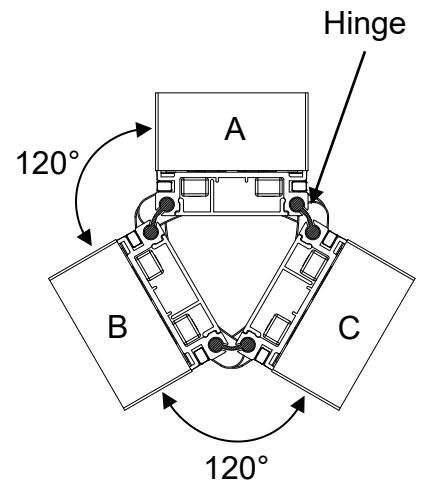


Rotate panels B and C 120° Then install third hinge combo between panel A and C

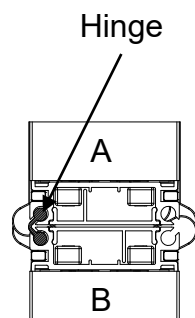


1. Start with panels at 180° and install one hinge combo


4 way (90°)

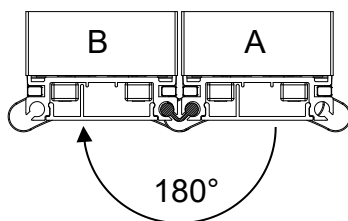


2. Rotate panel B 180°

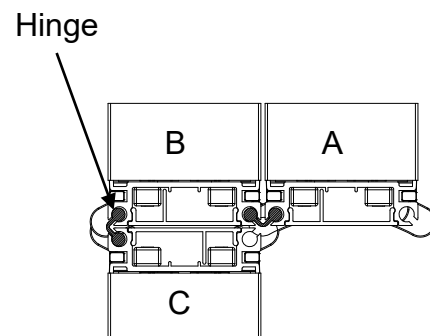


3. Install panel C and add hinge combo between panels B and C

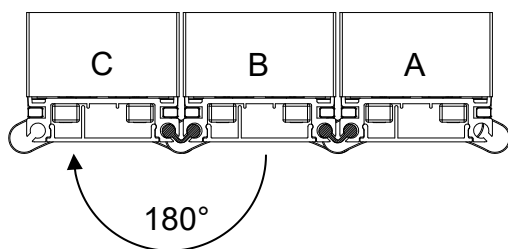


4. Rotate panel C 180°

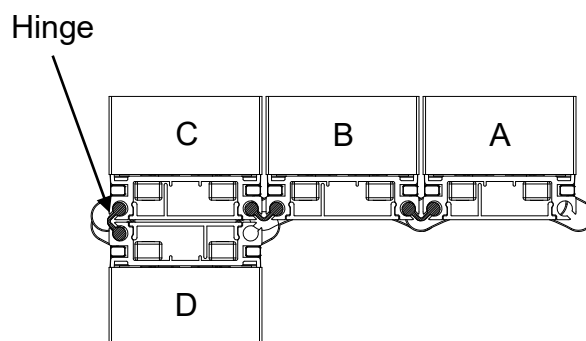


5. Install panel D and add hinge combo between panels C and D

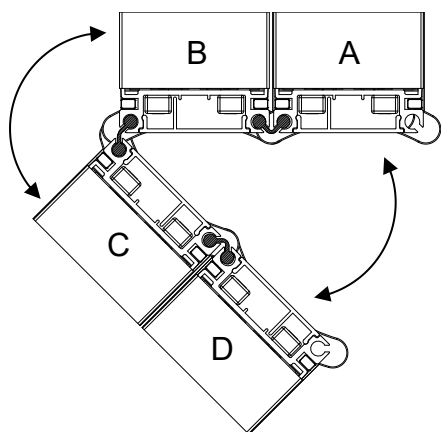

6. Rotate panel C Back around next to panel D and continue to rotate until Panel D touches Panel A

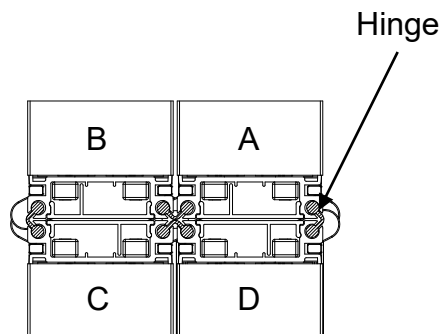


7. Install final hinge combo between panels A and D

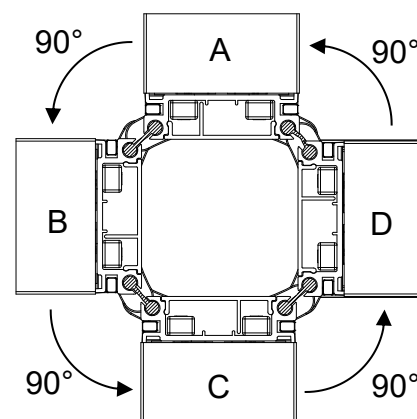



8. Rotate all panels until 4-way is at 90°

Step 1: Level Panels per standard practice using a flat ½" open end wrench

Step 2: Stage Base Covers as shown below. Do not close covers.

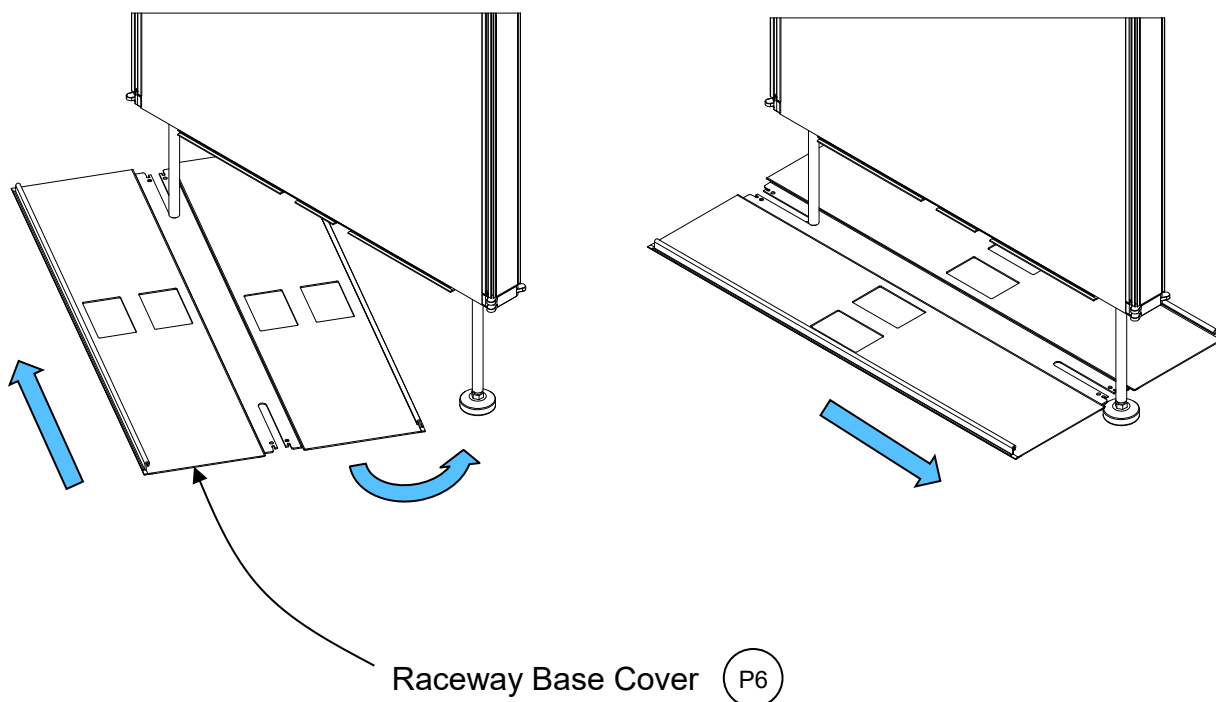


Corner connection brackets must be installed on 90° connections. Corner connection brackets are included with the panels and do not need to be ordered separately.

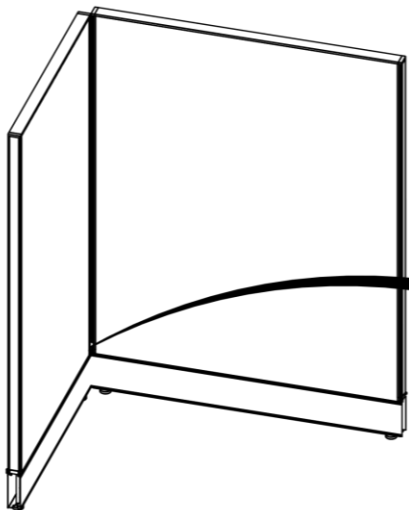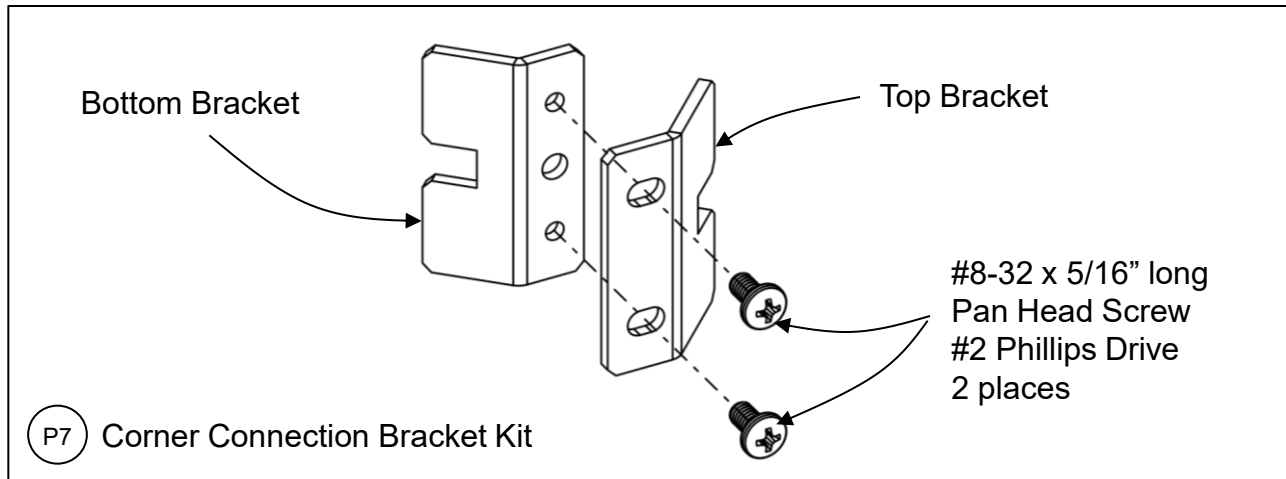


Note: Brackets should be installed within 4" of the top of the raceway.


1. Install bottom bracket.

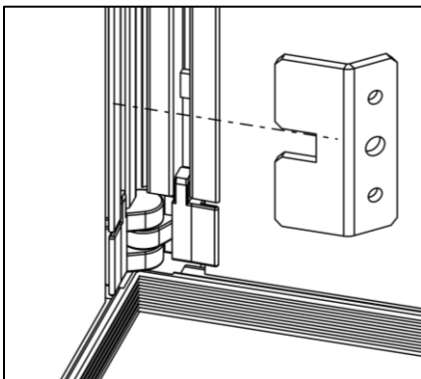


2. Install top bracket.

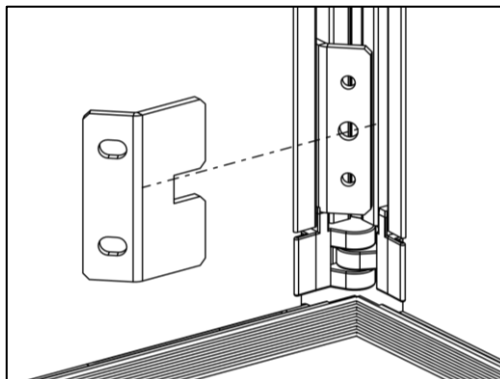


3. Secure with screws.

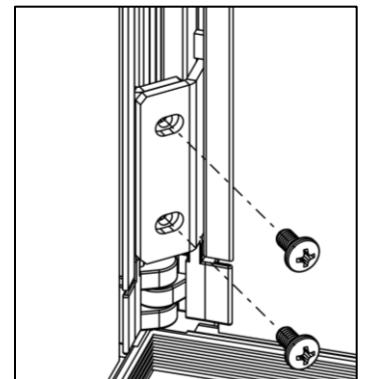

Step 1: Remove endcap topcap.

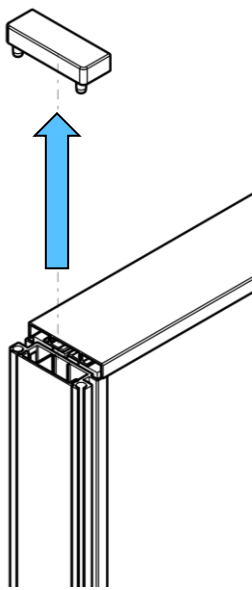


Step 2: Install the power pole shell adjacent to the hanger frames using hinges as specified below.

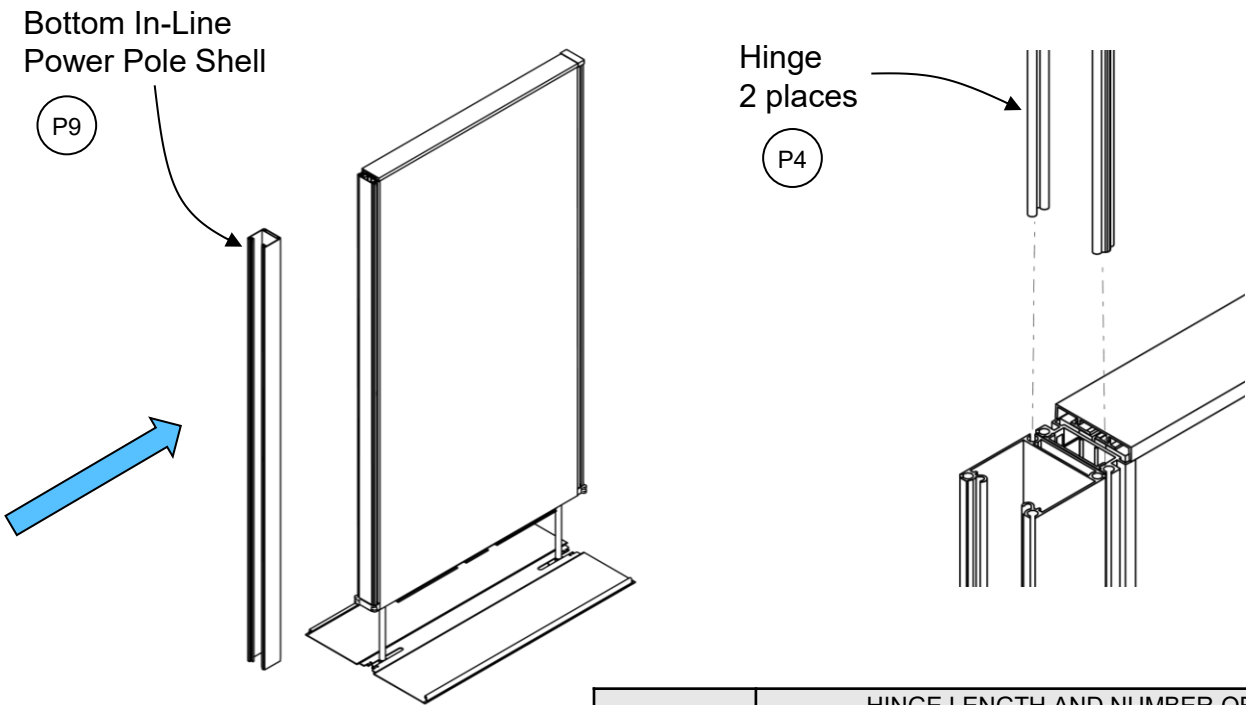


	HINGE LENGTH AND NUMBER OF HINGE SEGMENTS REQUIRED PER PANEL HEIGHT (NOTE: QUANTITIES FOR EACH SIDE OF PANEL)				
PANEL HEIGHT	12 3/4"	20 3/4"	28 3/4"	36 3/4"	52 3/4"
42"	1	1			
50"		2			
58"		1	1		
66"		1		1	
82"		1			1


Step 3: Slide the coupler into the power pole shell as shown and secure using (2) #8-32 x 5/16" screws.

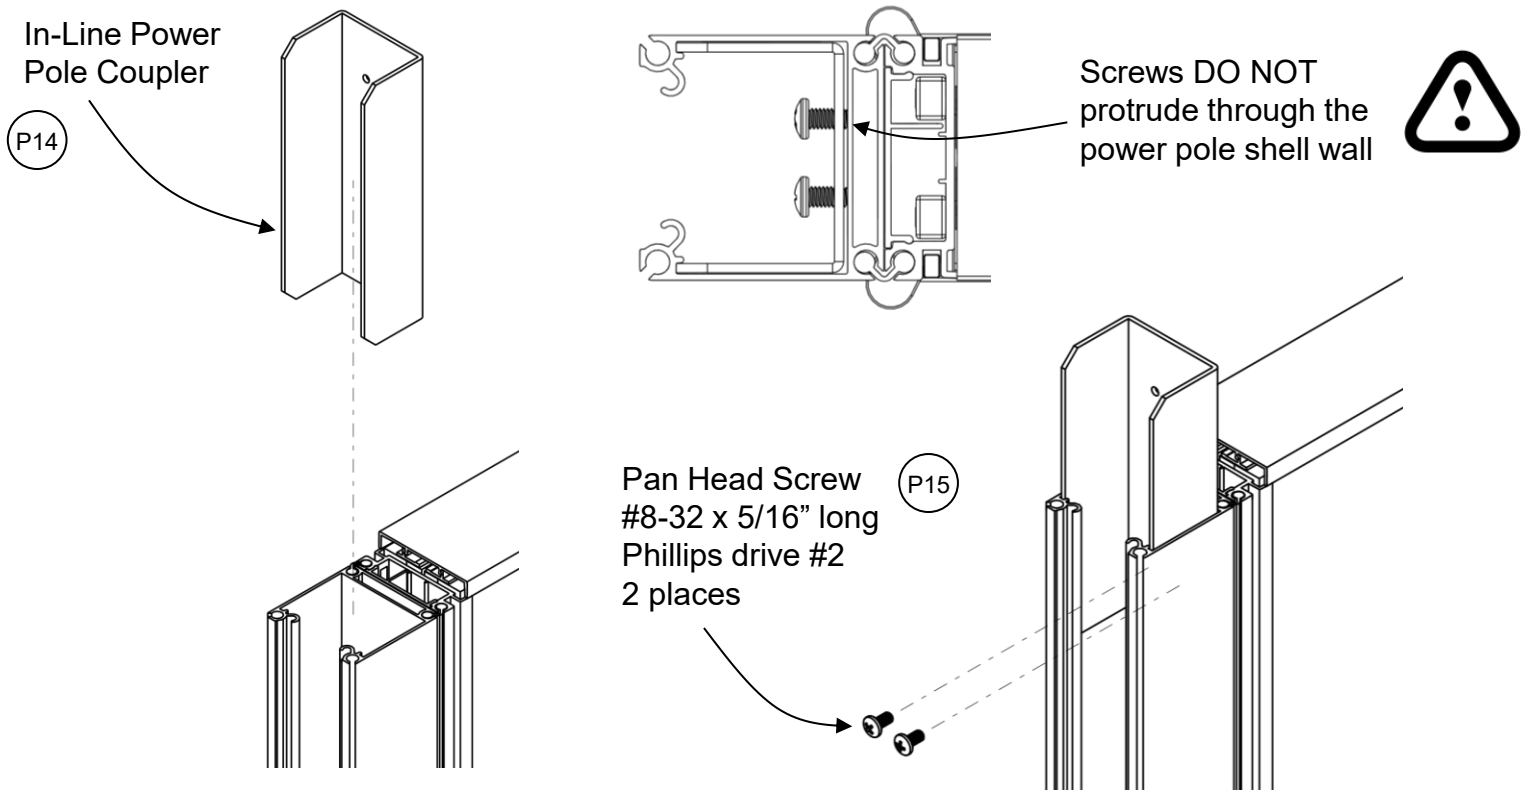


Step 4: Slide the top power pole shell over the coupler and secure using (2) #8-32 x 5/16" screws.

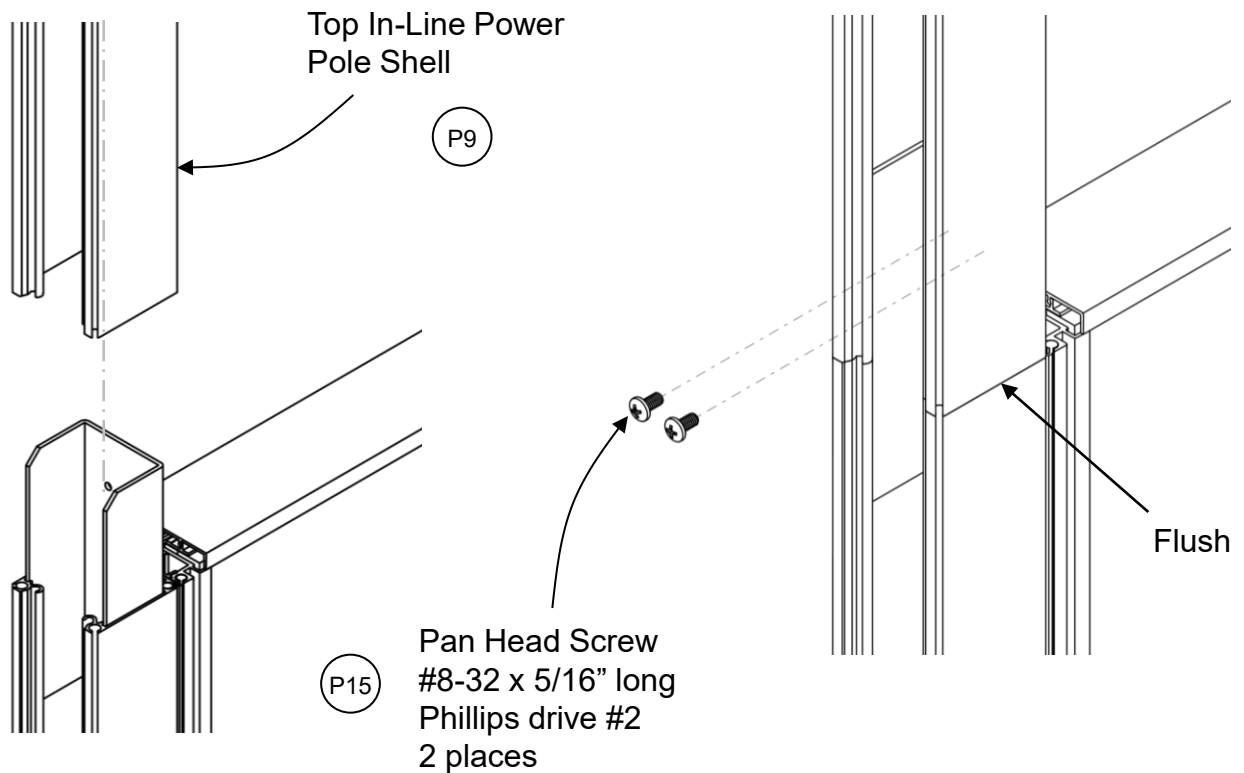


Step 5: Install the power pole dividers inside the power pole shell using #8 x 3/8" pan head drilling screws.

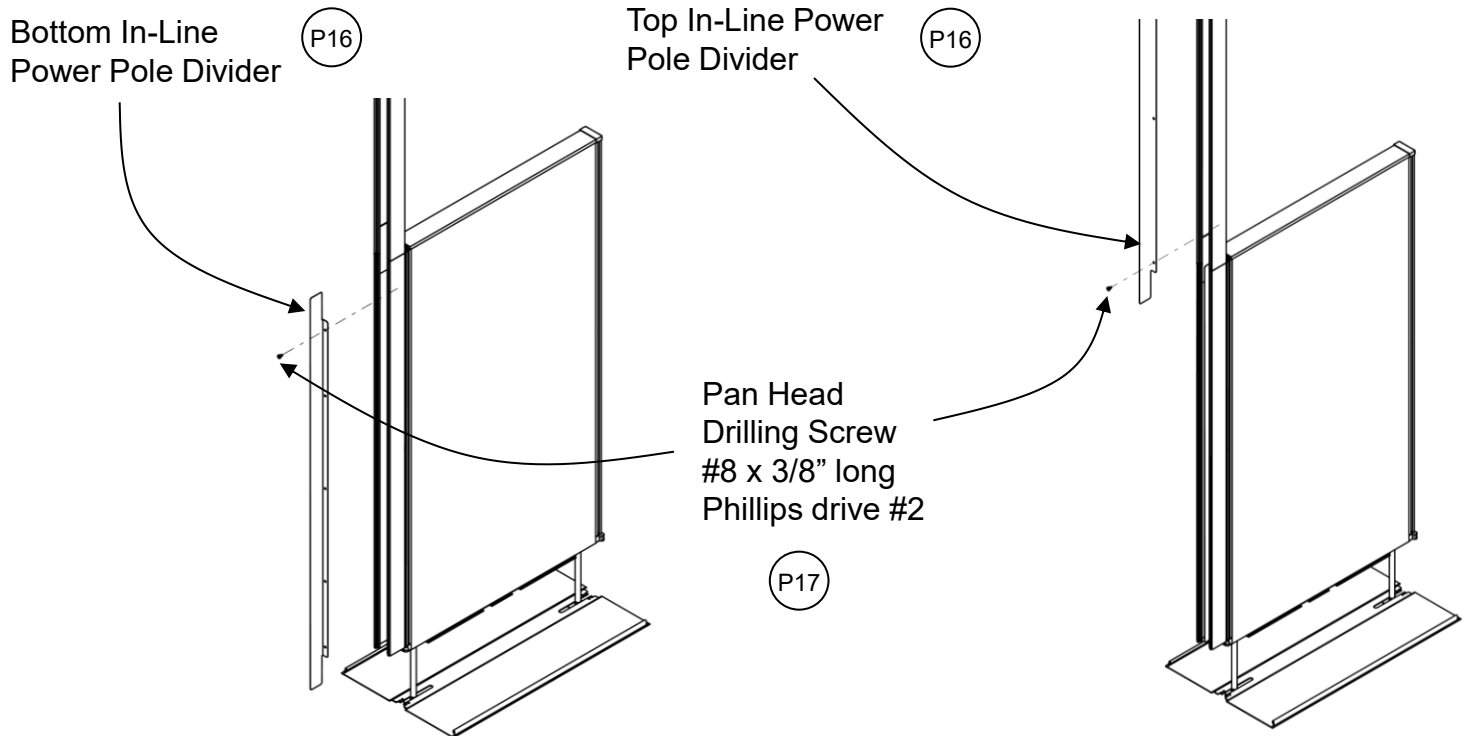


Step 6: Install the end of run shroud.

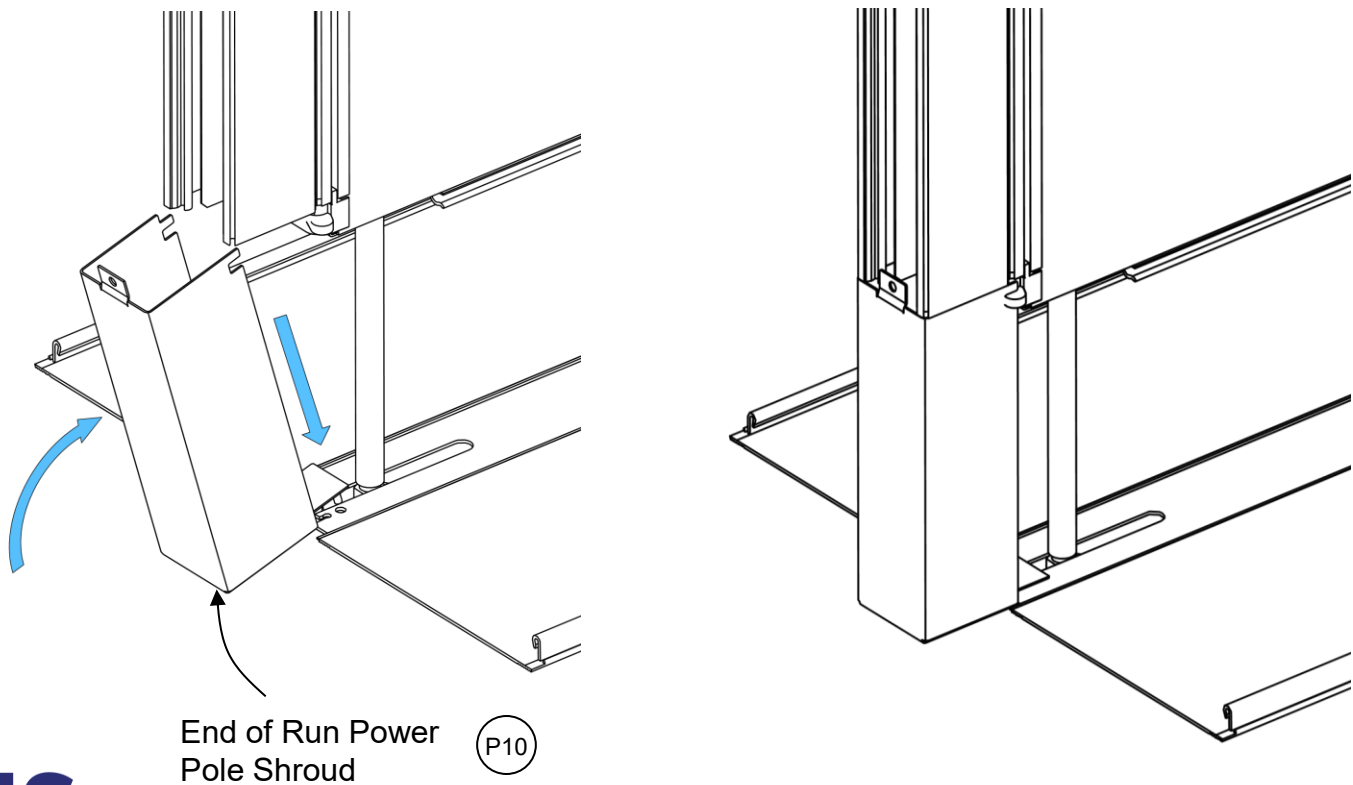


Step 7: Snap power pole covers onto the power pole, making sure they are flush with no gaps.

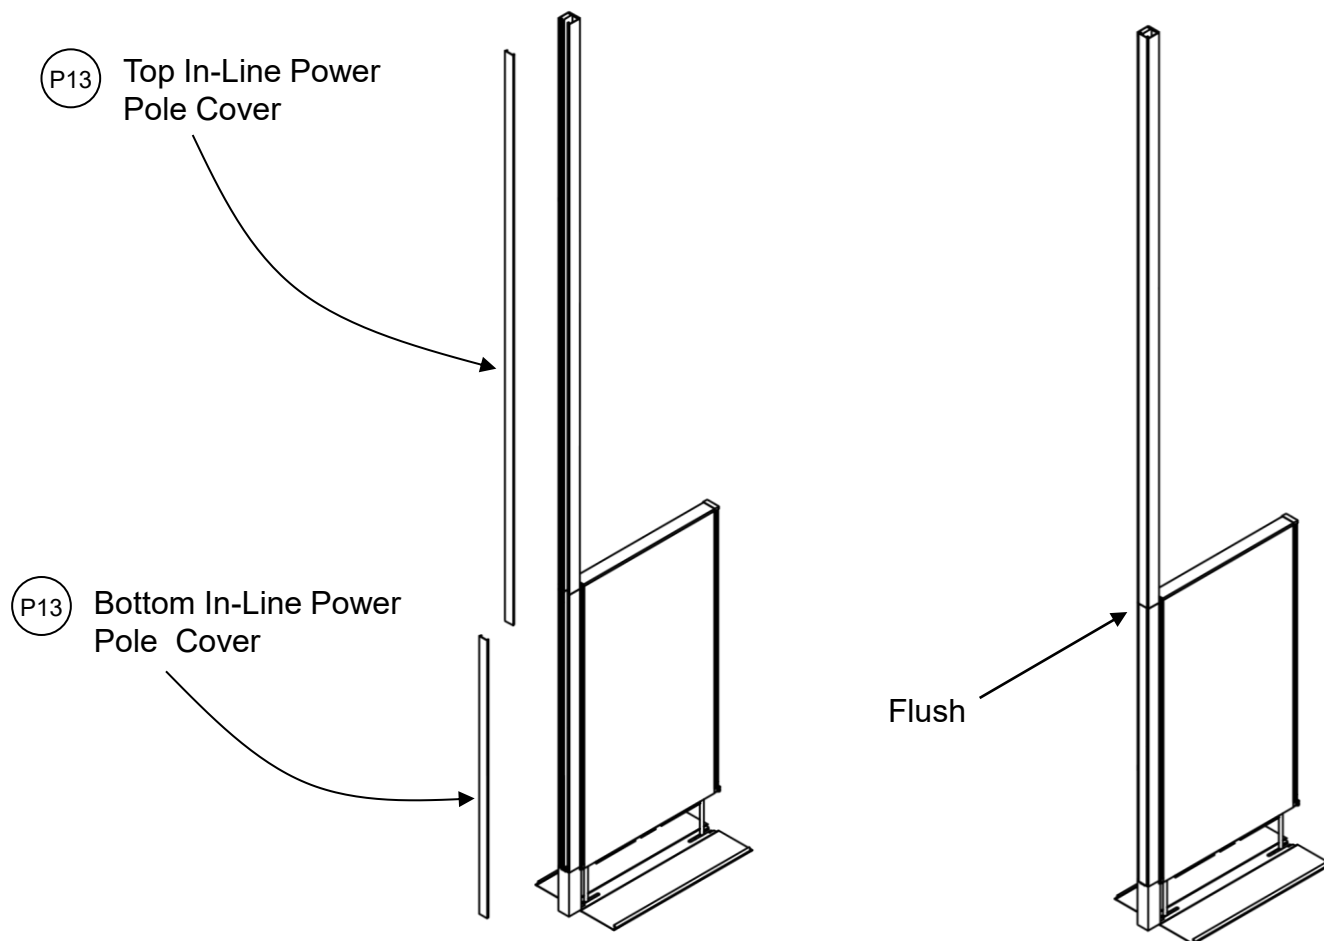


Step 8: Close raceway covers.

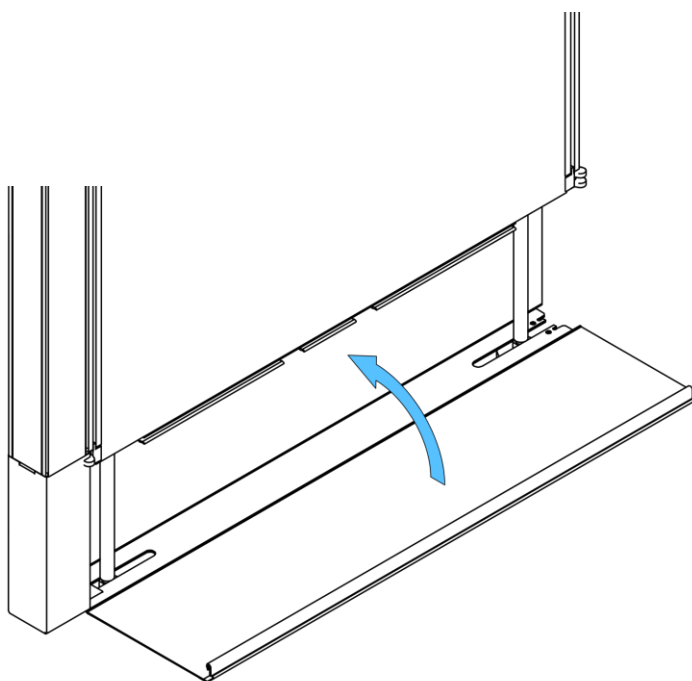


Step 9: Install ceiling shrouds.

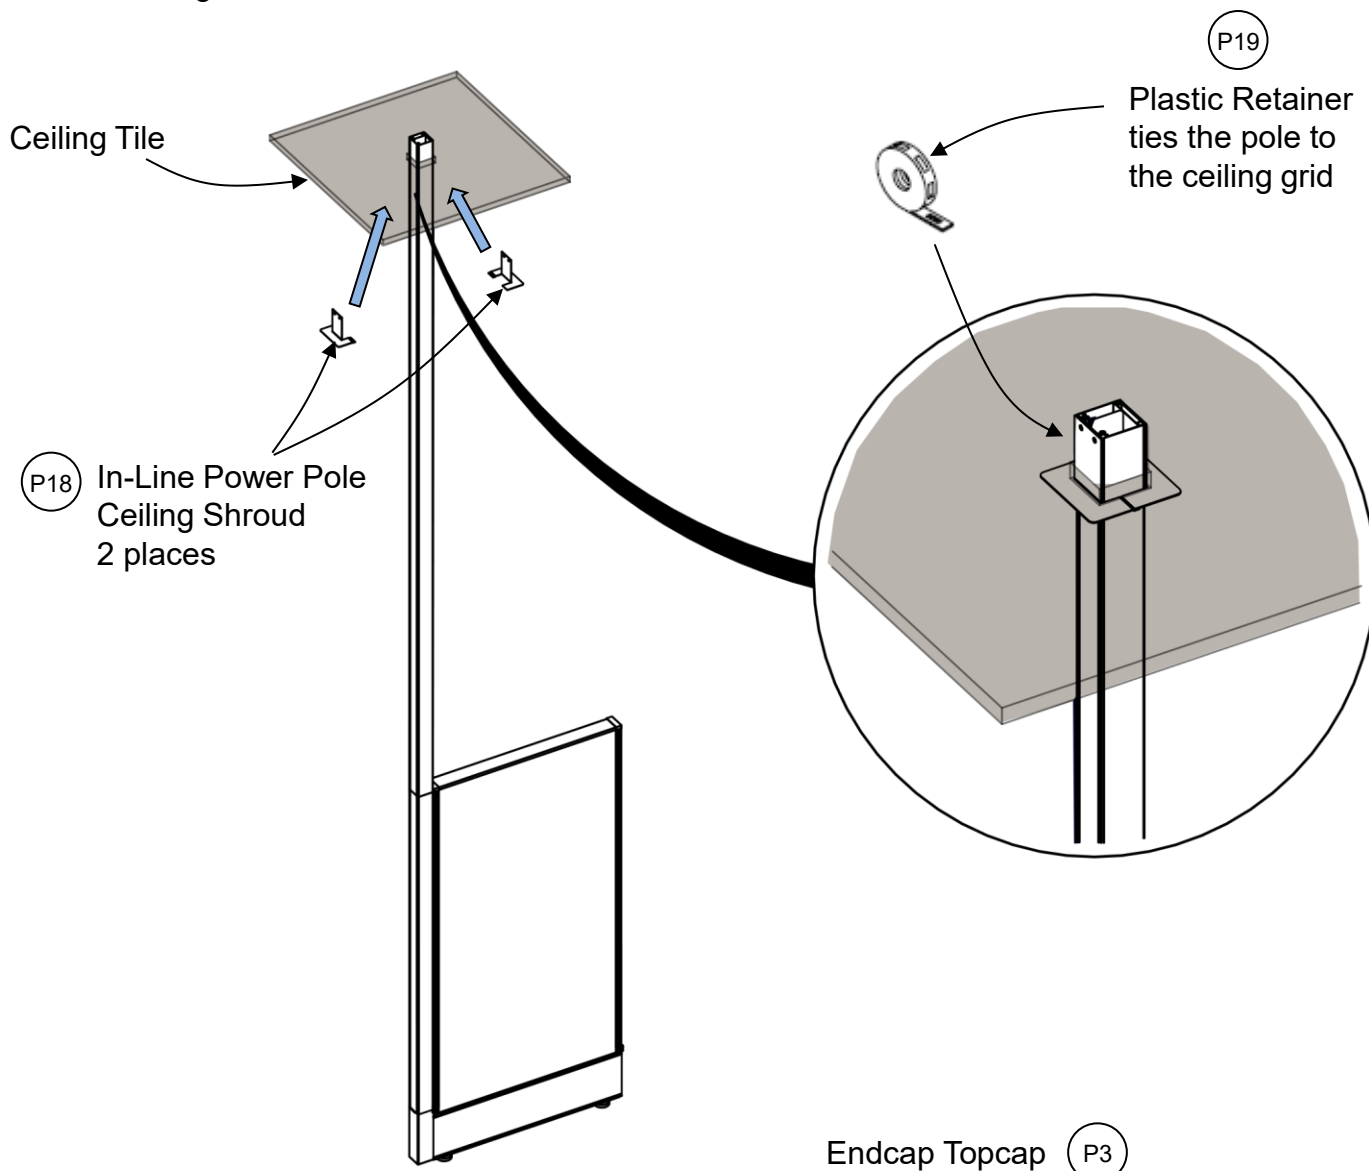



Step 10: Re-install endcaps

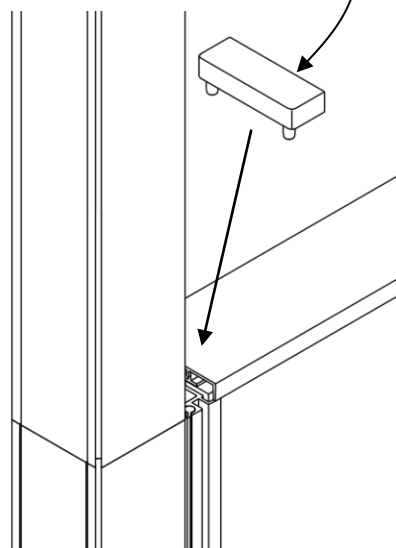

Step 1: Remove endcap top caps.

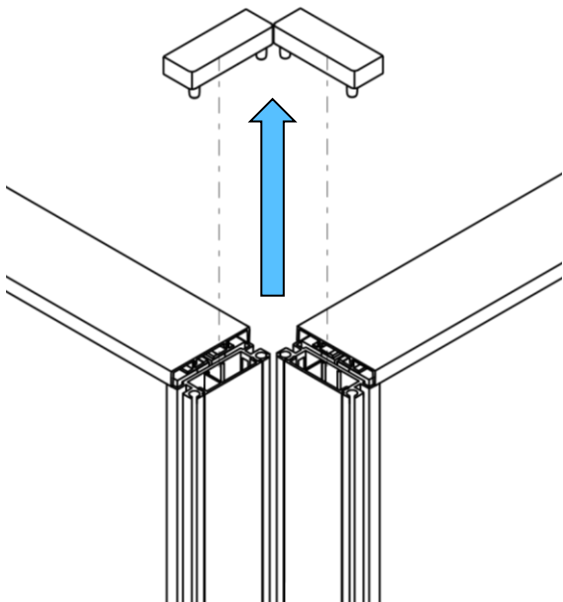


Step 2: Install the power pole shell adjacent to the hanger frames using hinges as specified below.

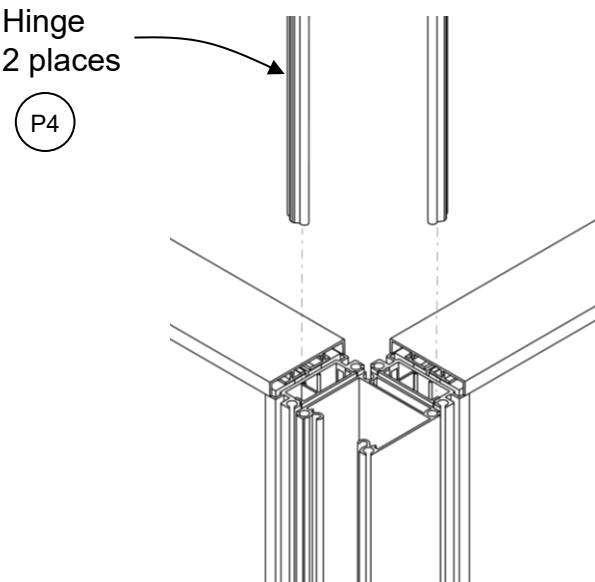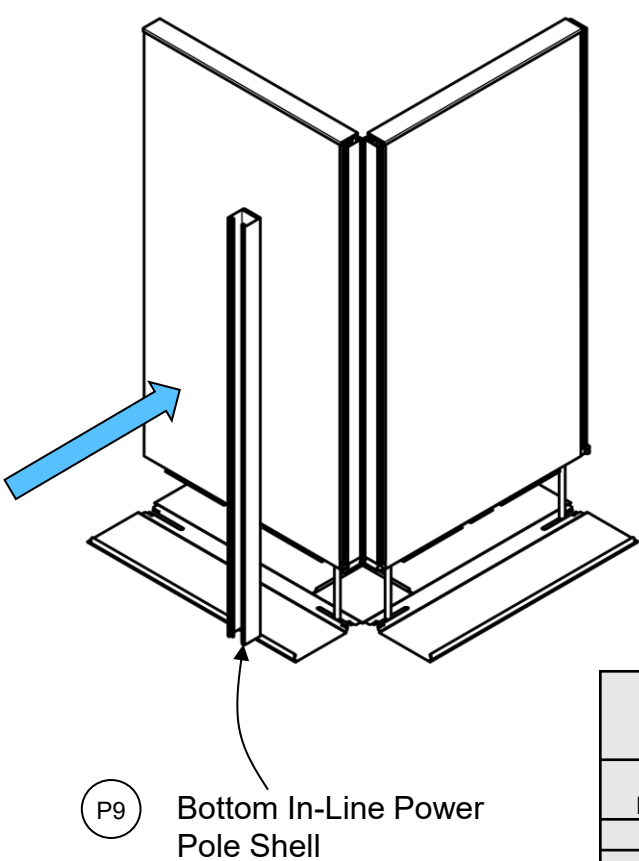


	HINGE LENGTH AND NUMBER OF HINGE SEGMENTS REQUIRED PER PANEL HEIGHT (NOTE: QUANTITIES FOR EACH SIDE OF PANEL)				
PANEL HEIGHT	12 3/4"	20 3/4"	28 3/4"	36 3/4"	52 3/4"
42"	1	1			
50"		2			
58"		1	1		
66"		1		1	
82"		1			1

Step 3: Slide the coupler into the power pole shell as shown and secure using (2) #8-32 x 5/16" screws.

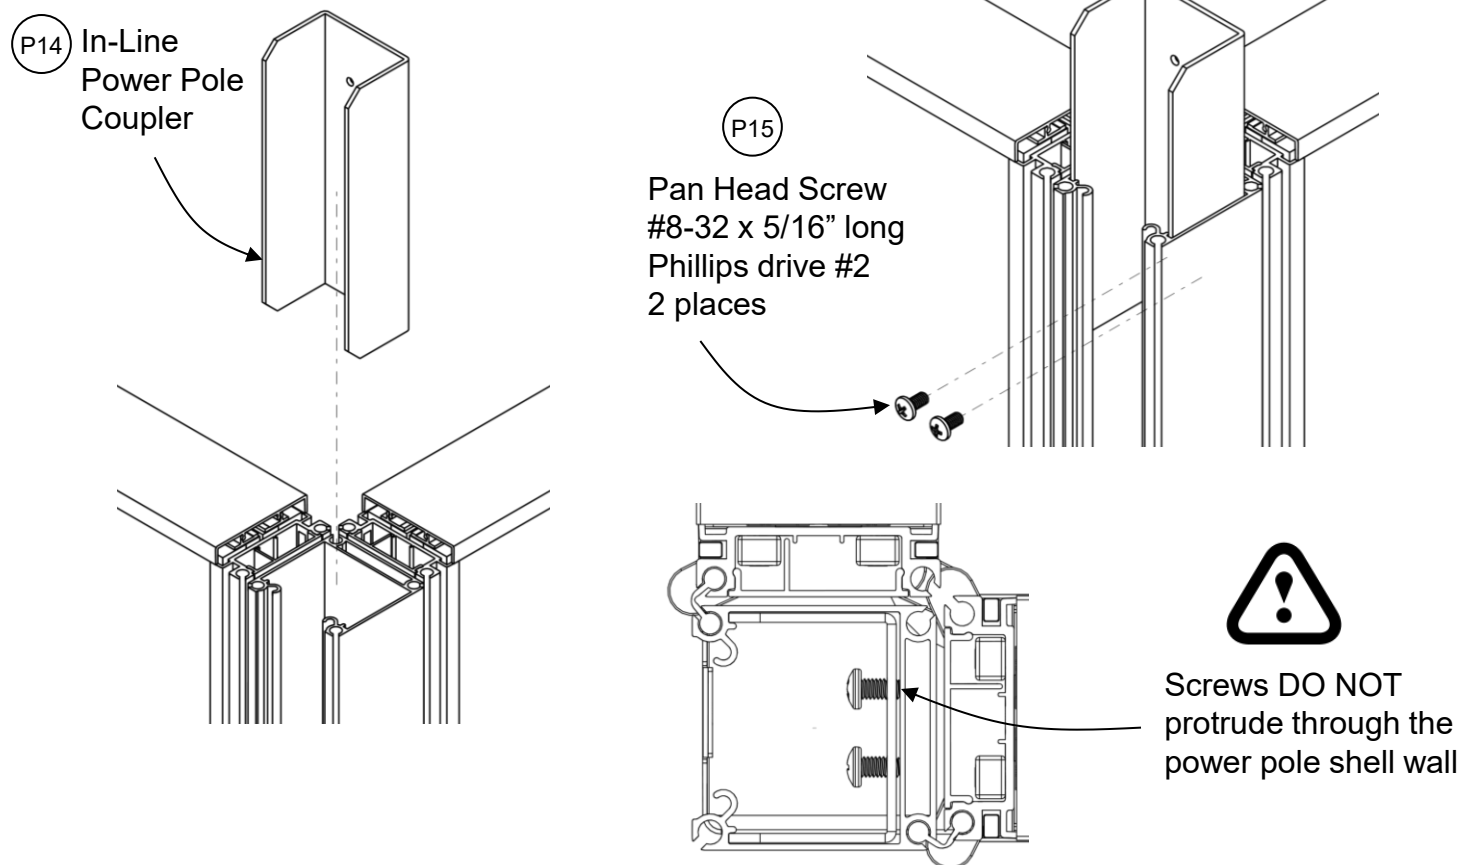


Step 4: Slide the top power pole shell over the coupler and secure using (2) #8-32 x 5/16" screws.

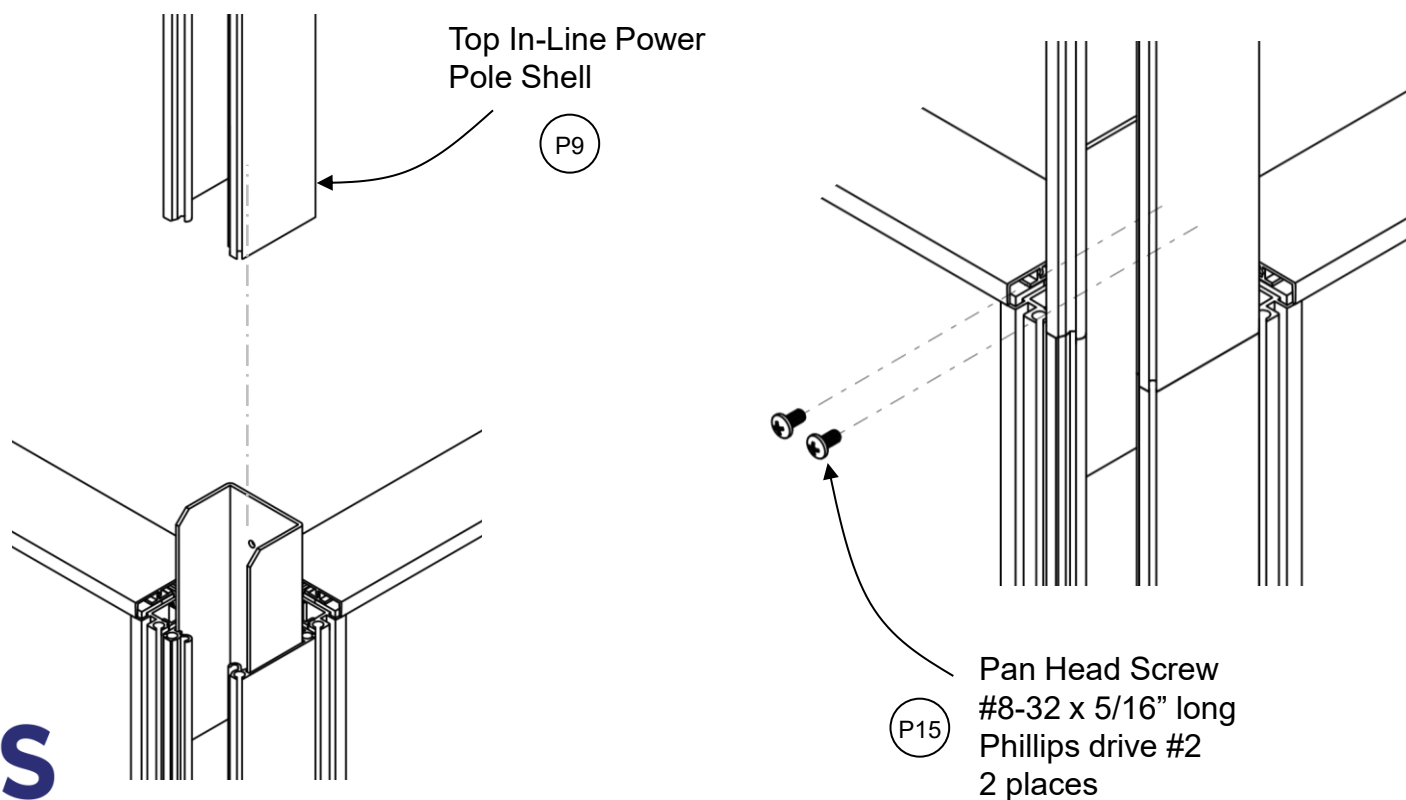

Step 5: Install power pole dividers inside the power pole body using #8 x 3/8" pan head drilling screws.

Bottom In-Line Power Pole Divider

P16

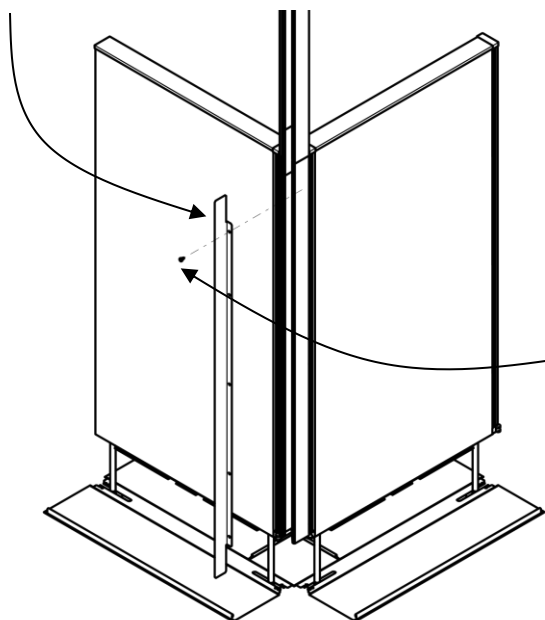


Top In-Line Power Pole Divider


P16

Pan Head Drilling Screw #8 x 3/8" long Phillips drive #2


P17

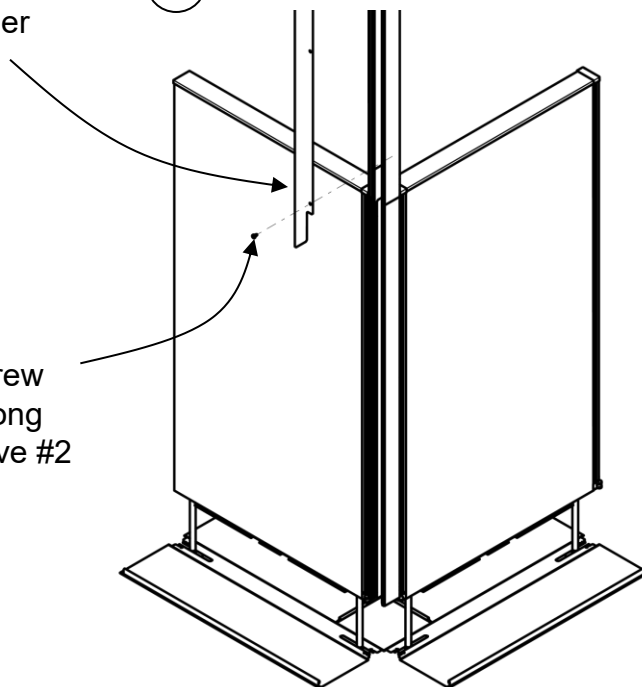


Step 6: Install the 2-way power pole shroud.

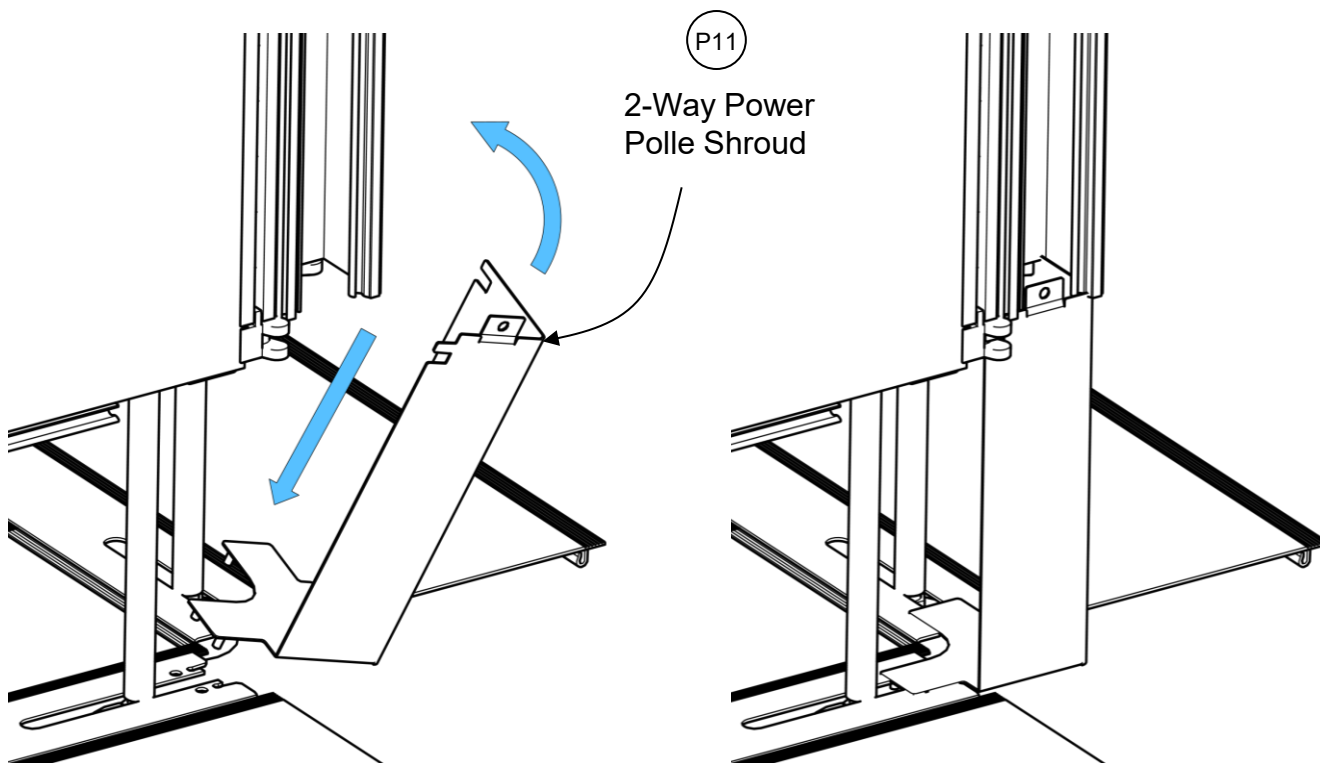


Step 7: Snap power pole covers onto the power pole, making sure they are flush with no gaps.

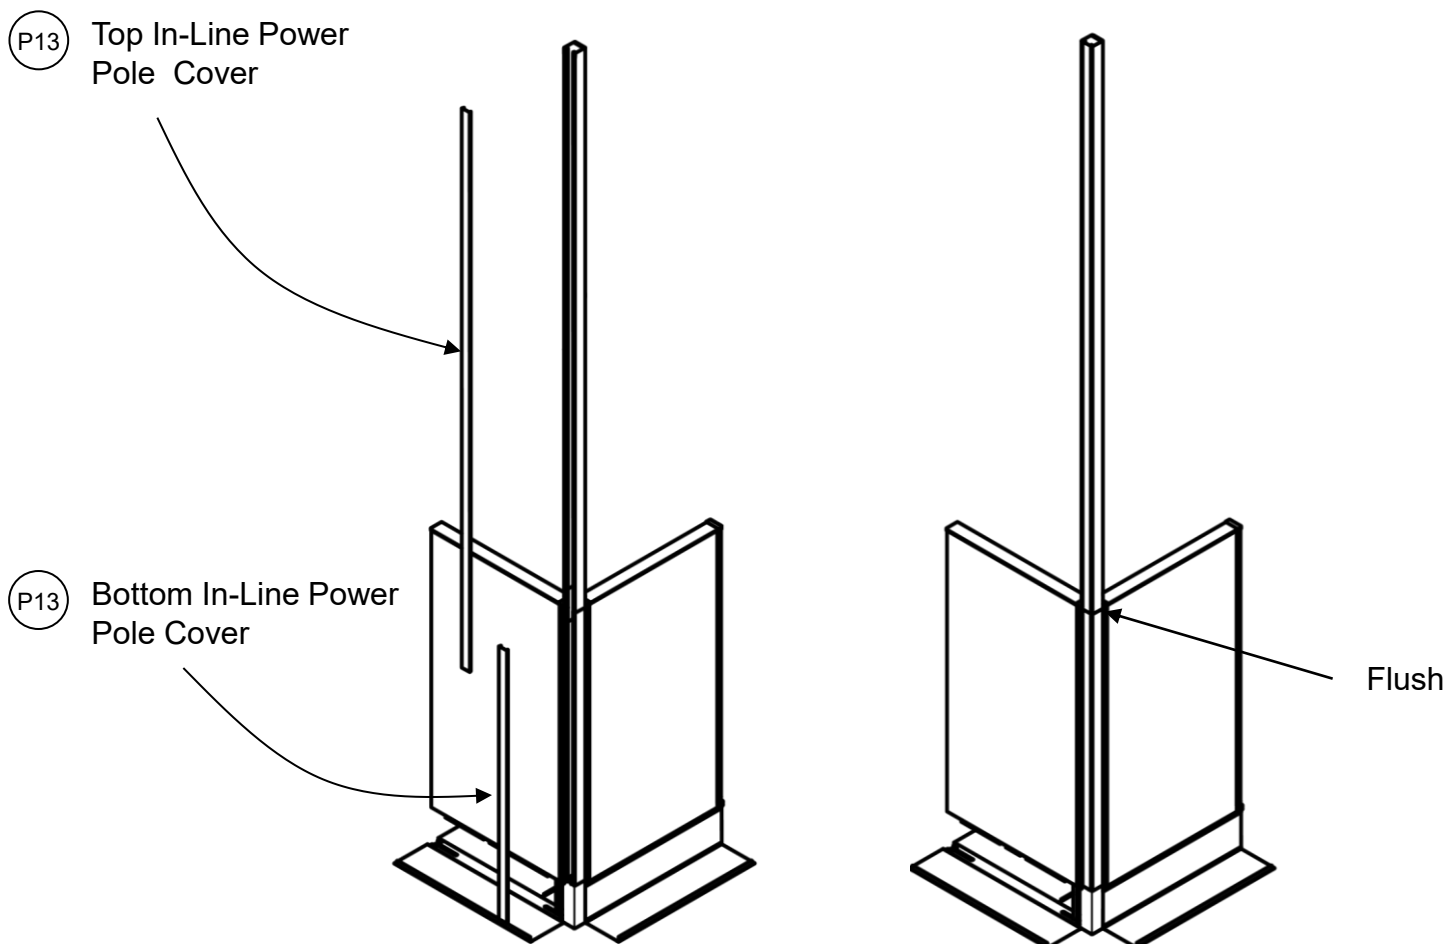


Step 8: Close raceway covers.

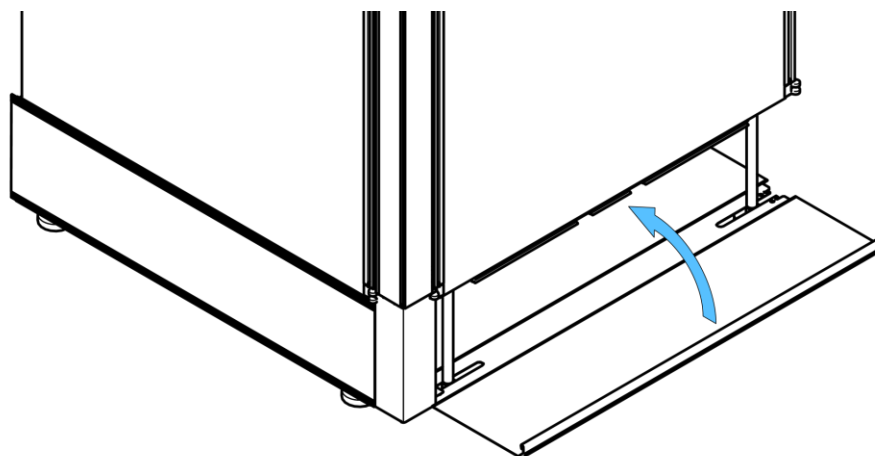


Step 9: Install ceiling shrouds.

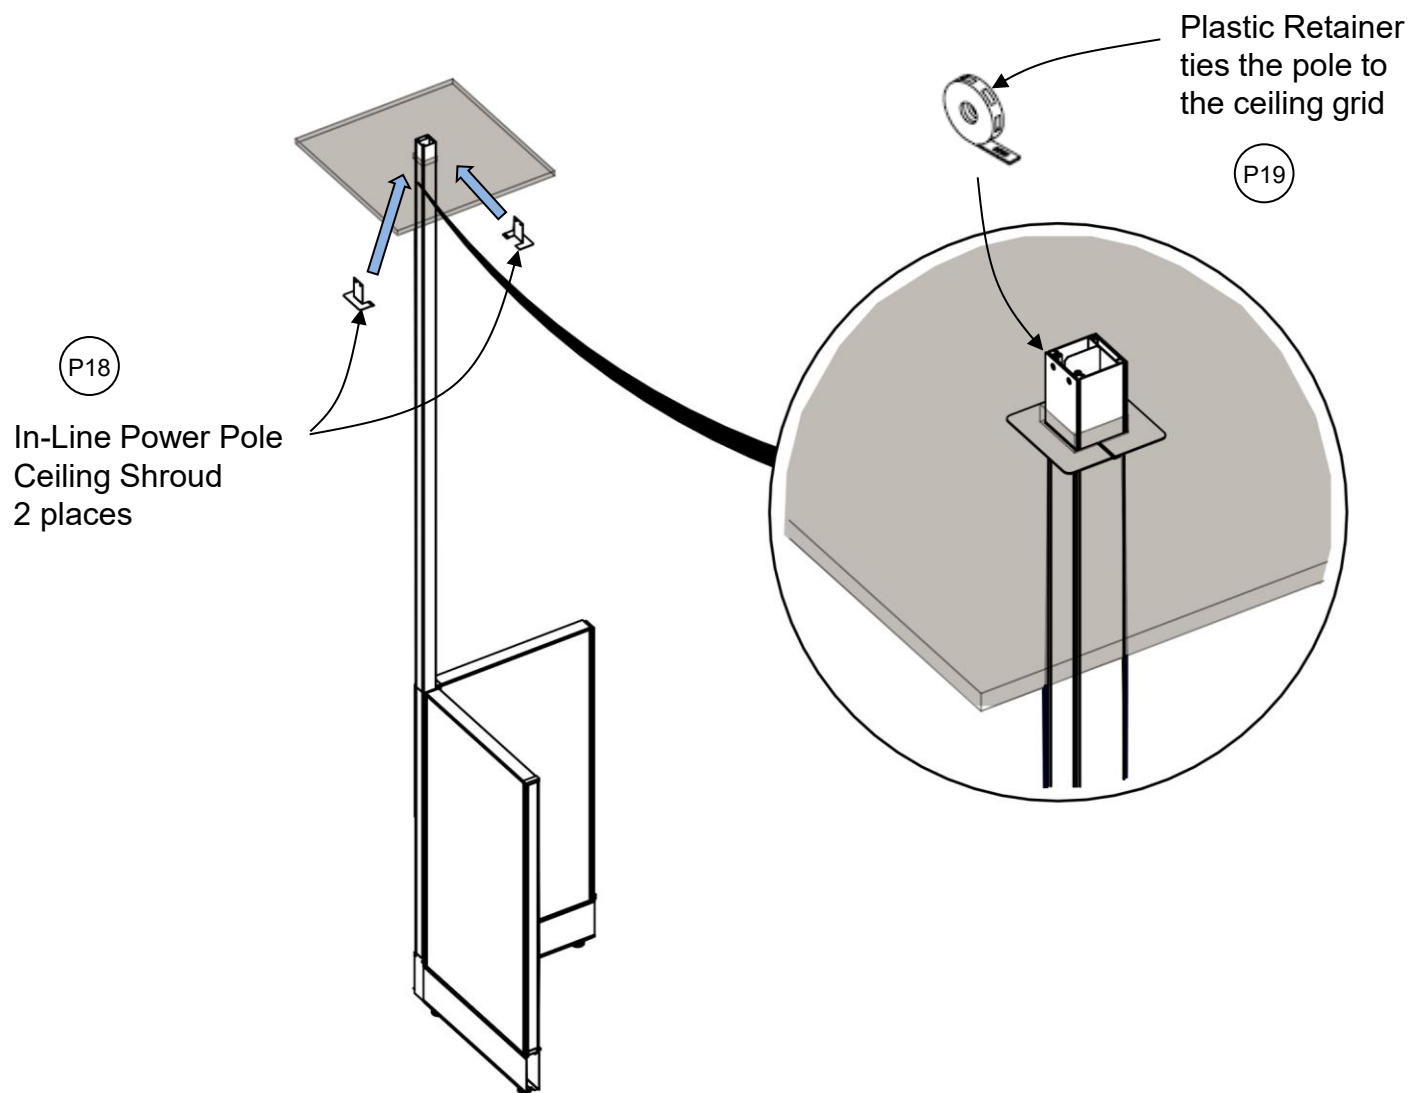


Step 9: Re-install endcap topcaps.

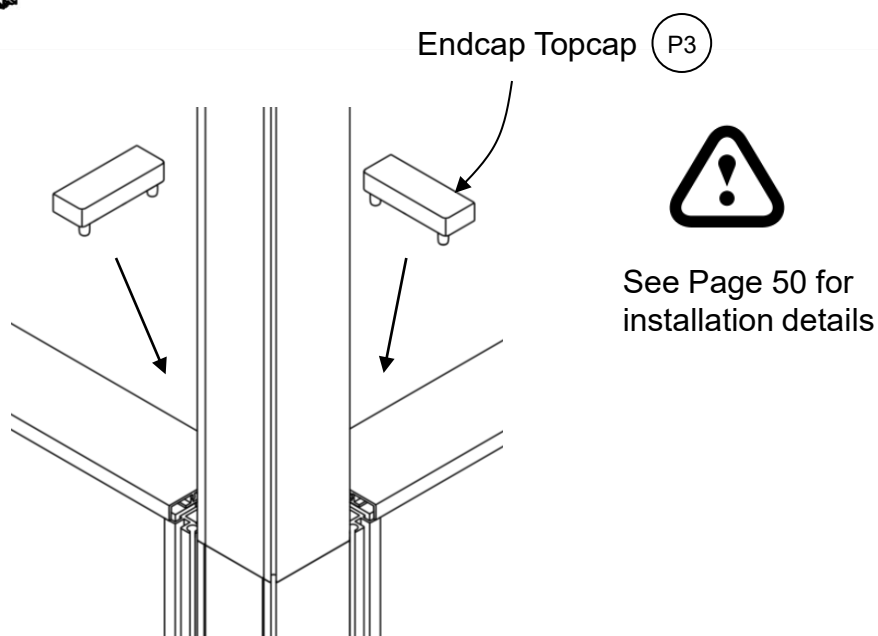

Step 1: Remove endcap topcaps.

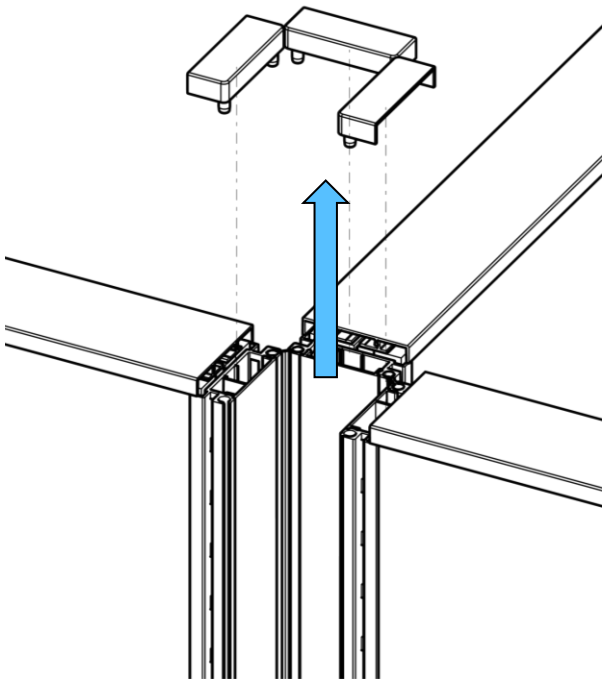


Step 2: Install the power pole shell to the hanger frames using hinges as specified below.

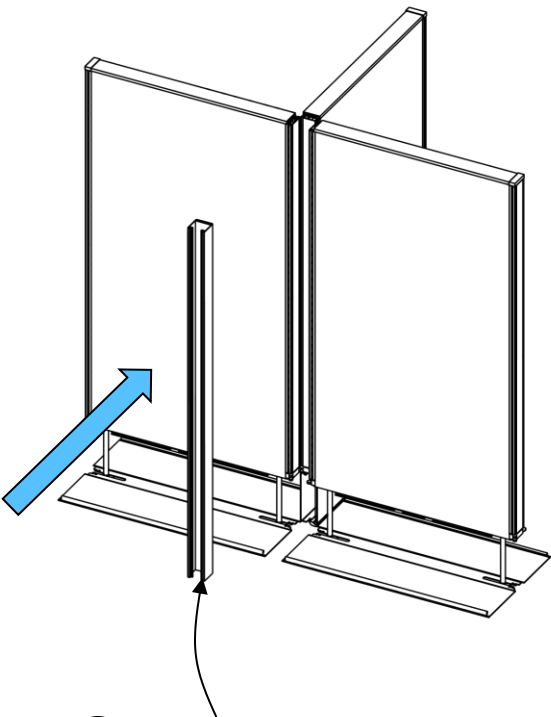

P4

Hinge
2 places

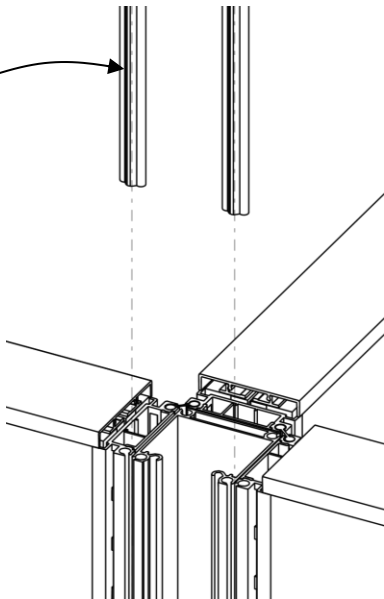


P9


Bottom In-Line Power
Pole Shell

	HINGE LENGTH AND NUMBER OF HINGE SEGMENTS REQUIRED PER PANEL HEIGHT (NOTE: QUANTITIES FOR EACH SIDE OF PANEL)				
PANEL HEIGHT	12 3/4"	20 3/4"	28 3/4"	36 3/4"	52 3/4"
42"	1	1			
50"		2			
58"		1	1		
66"		1		1	
82"		1			1

Step 3: Slide the coupler into the power pole shell as shown and secure using (2) #8-32 x 5/16" screws.

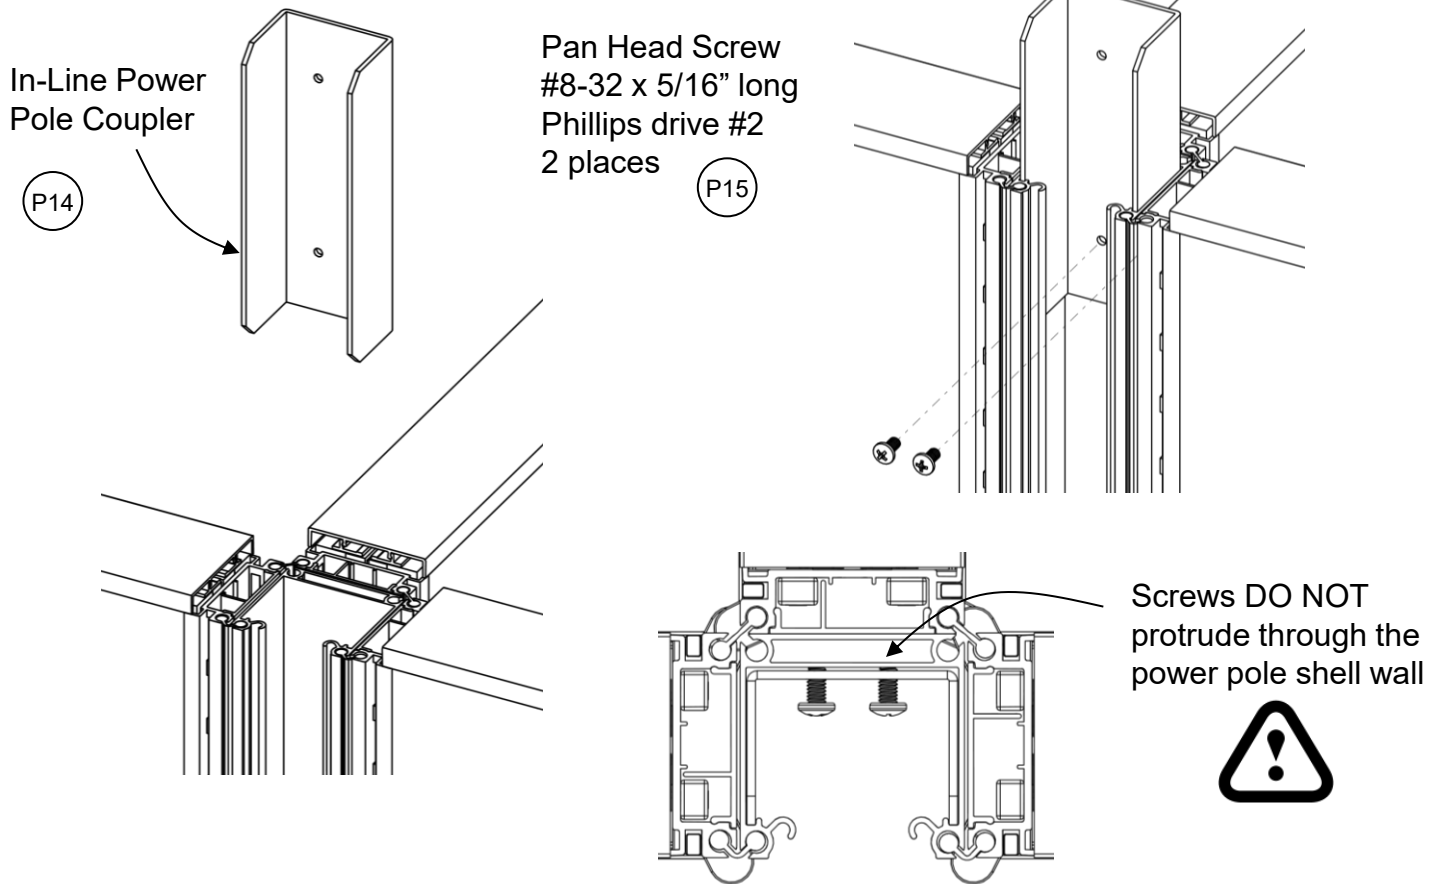


Step 4: Slide the top power pole shell over the coupler and secure using (2) #8-32 x 5/16" screws.

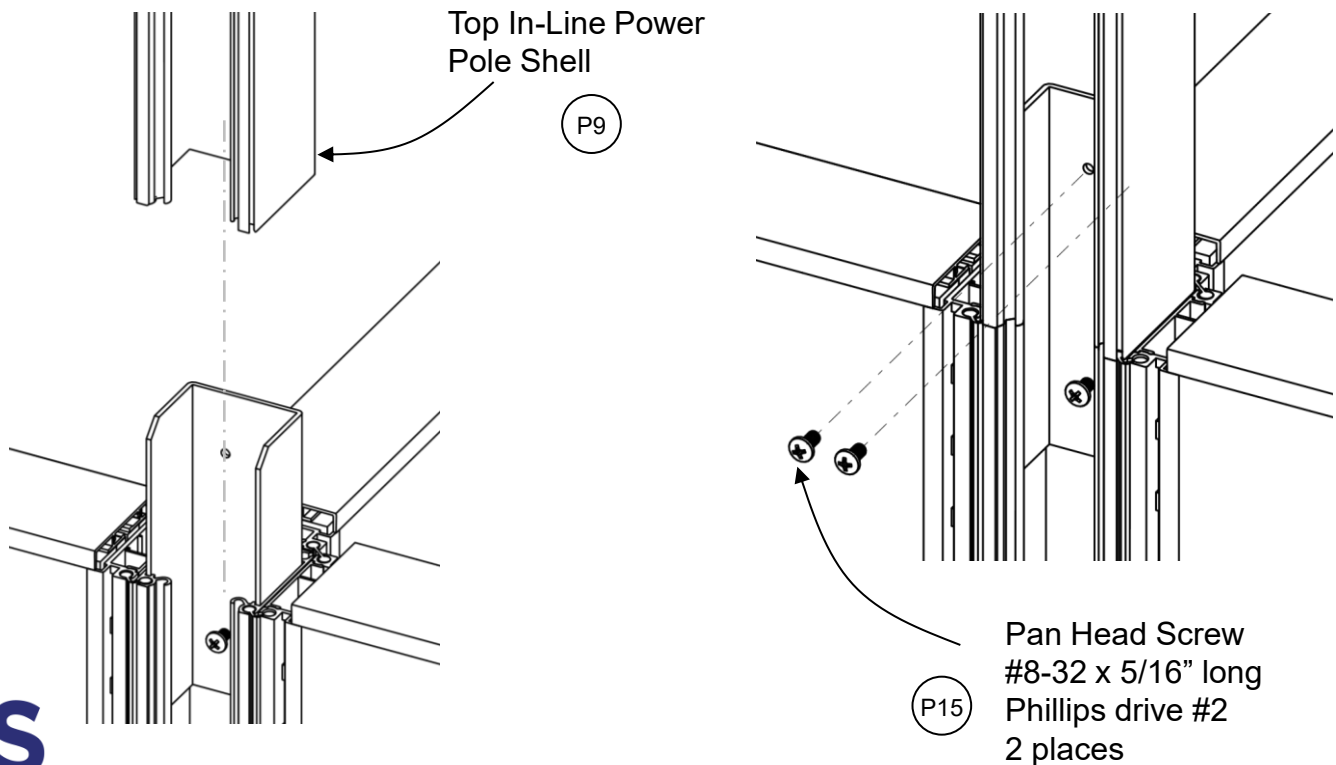

Step 5: Install power pole dividers inside the power pole body using #8 x 3/8" pan head drilling screws.


Bottom In-Line Power
Pole Divider

Top In-Line Power
Pole Divider

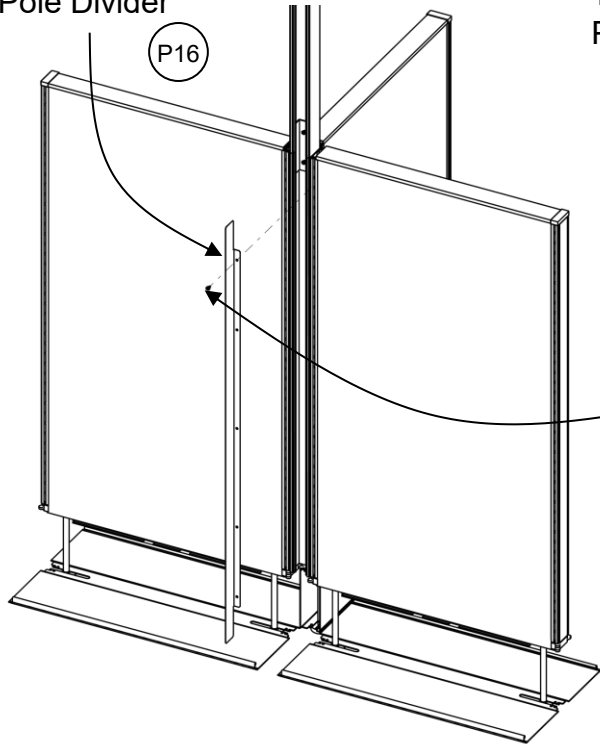

Pan Head
Drilling Screw
#8 x 3/8" long
Phillips drive #2



(P17)

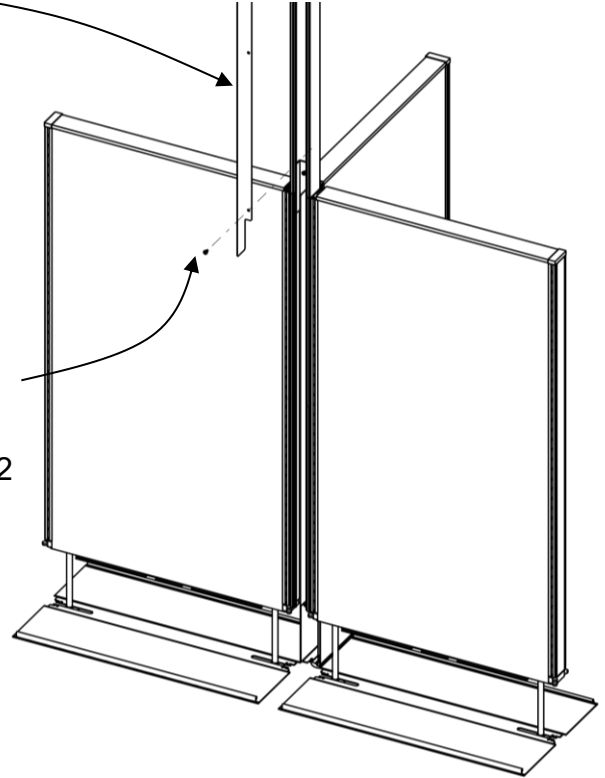


Step 6: Install the 3-way power pole shroud.

3-Way Power
Pole Shroud


(P12)

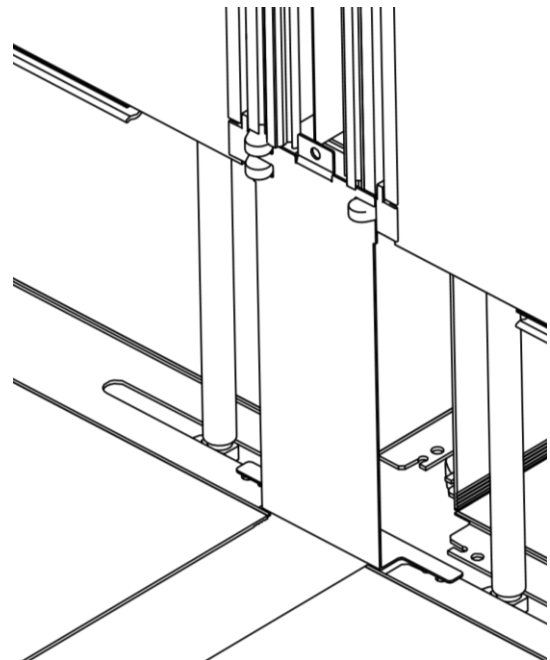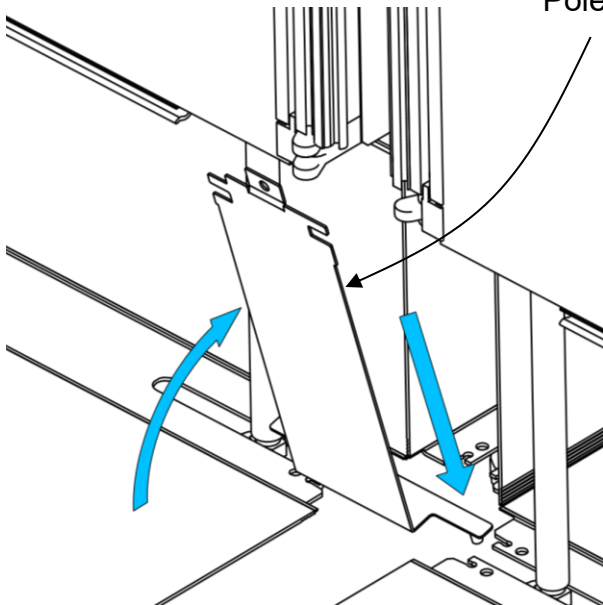


Step 7: Snap power pole covers onto the power pole, making sure they are flush with no gaps.

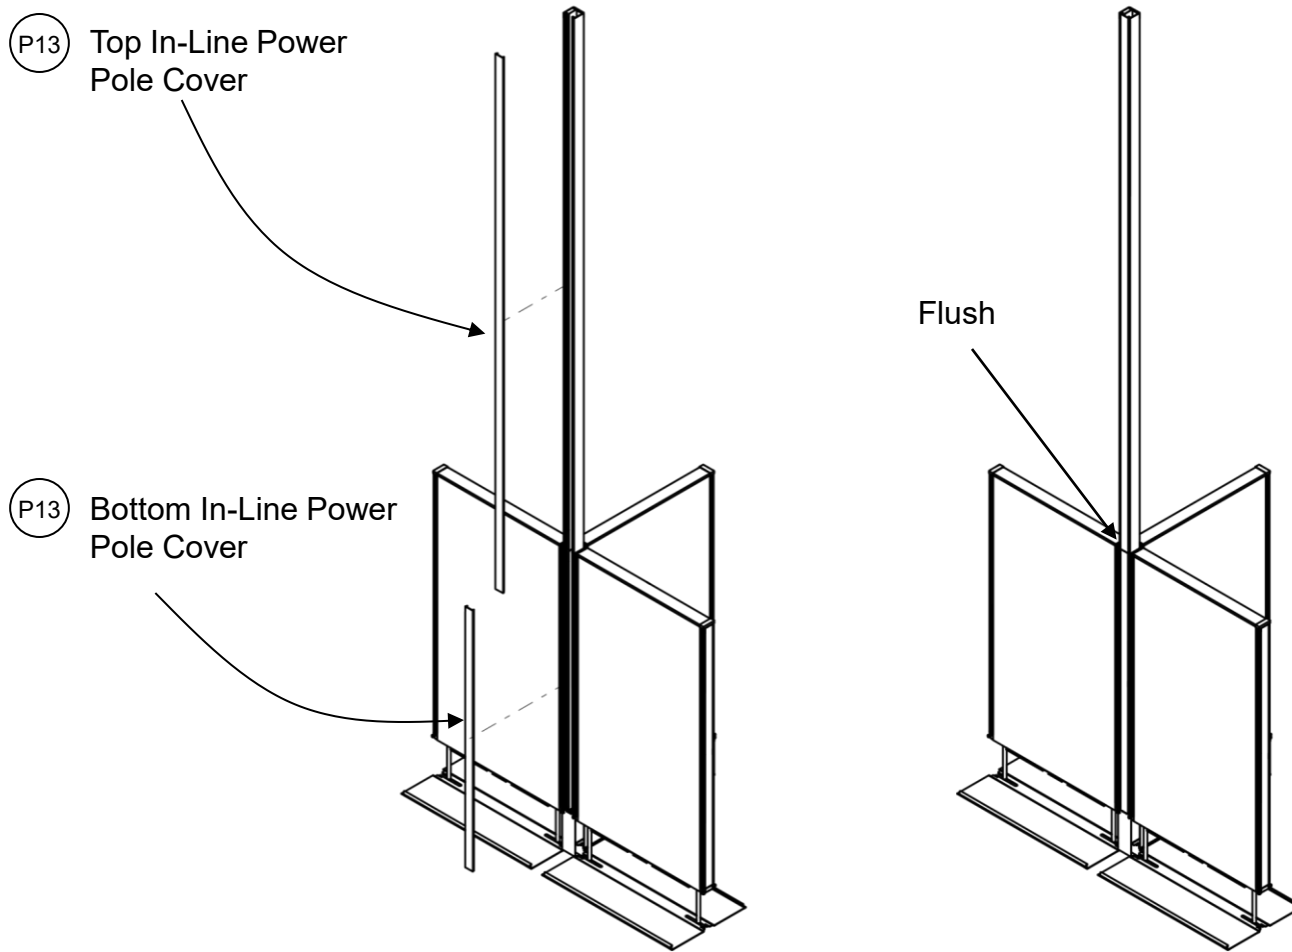


Step 8: Close raceway covers.

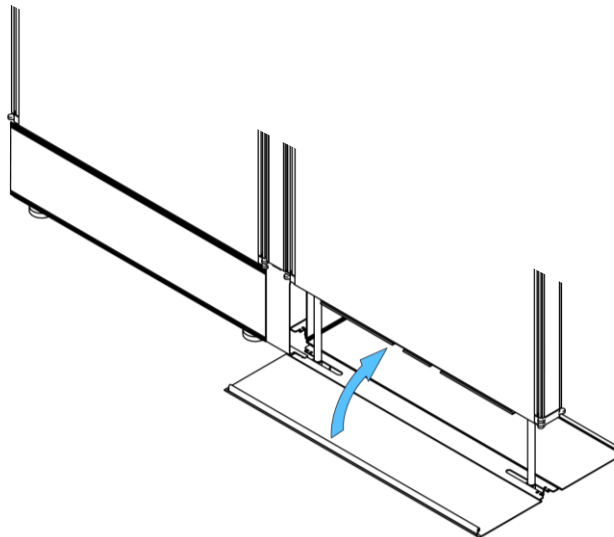


Step 9: Install ceiling shrouds.

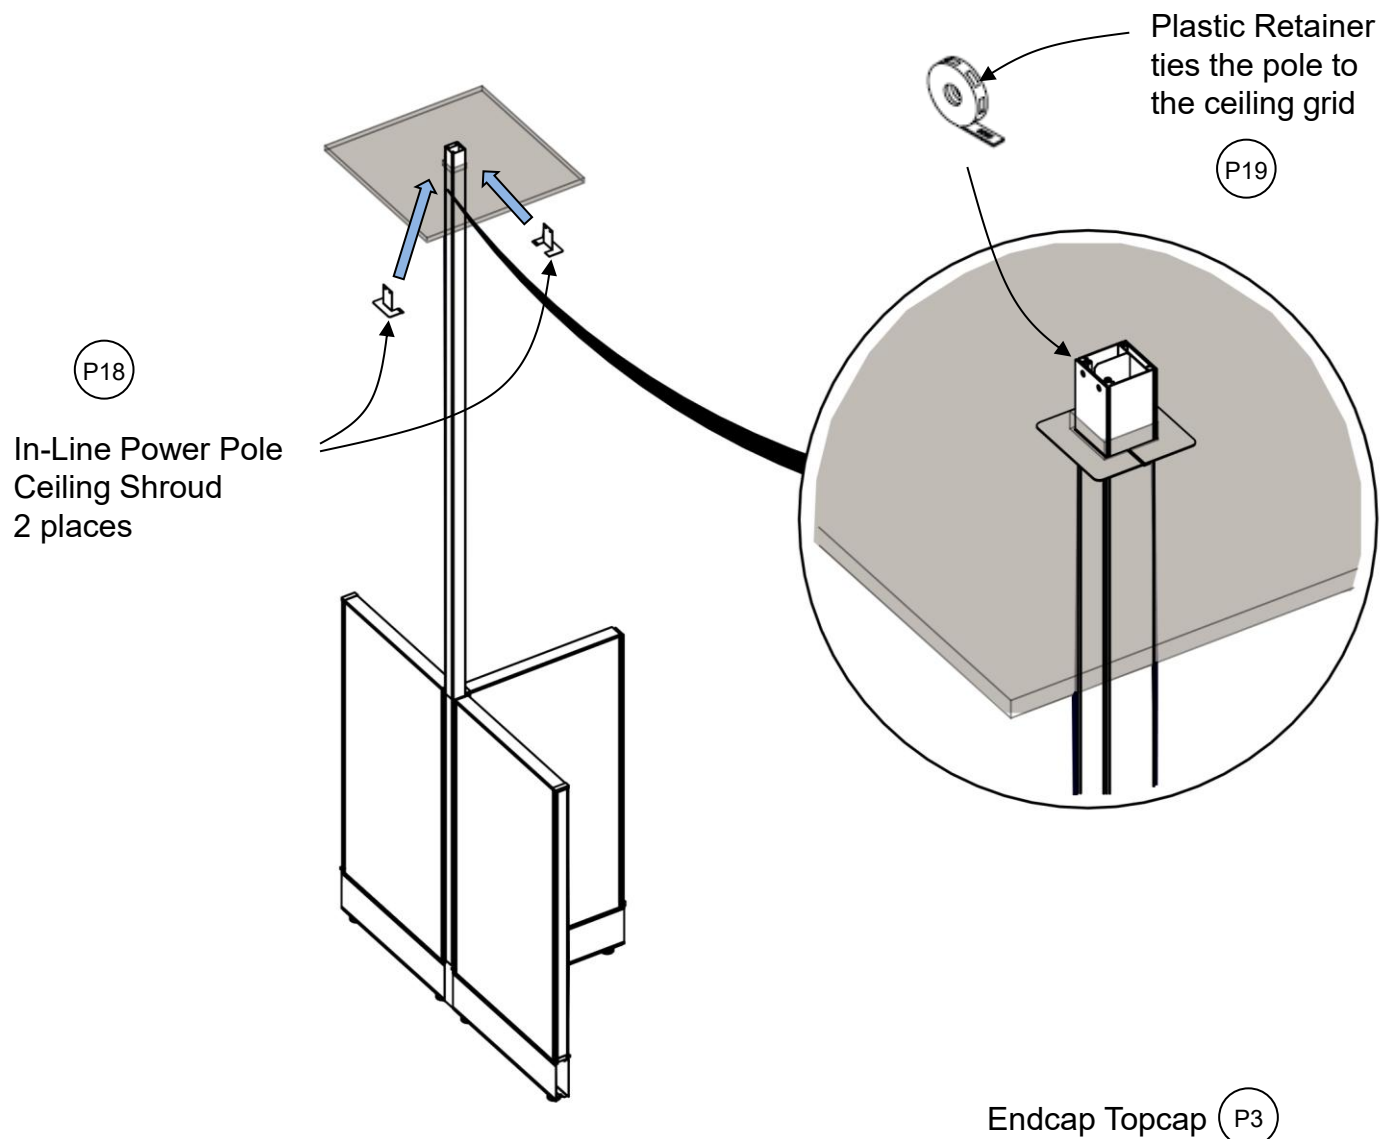


Step 9: Re-install endcap topcaps

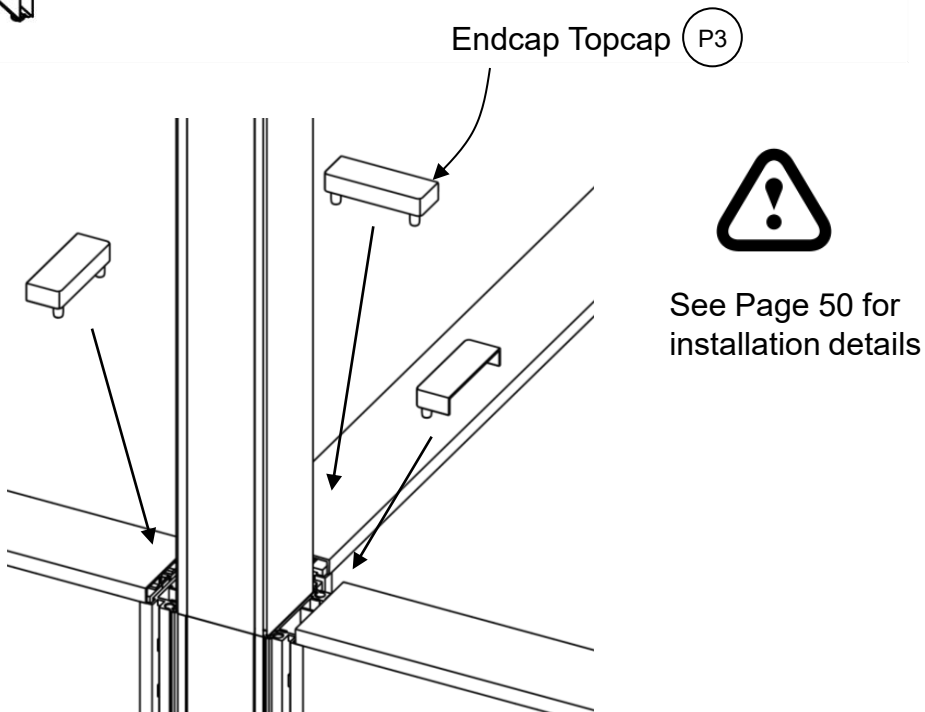


Step 1: Slide coupler into the bottom power pole shell as shown and secure using (2) #8-32 x 5/16" screws.

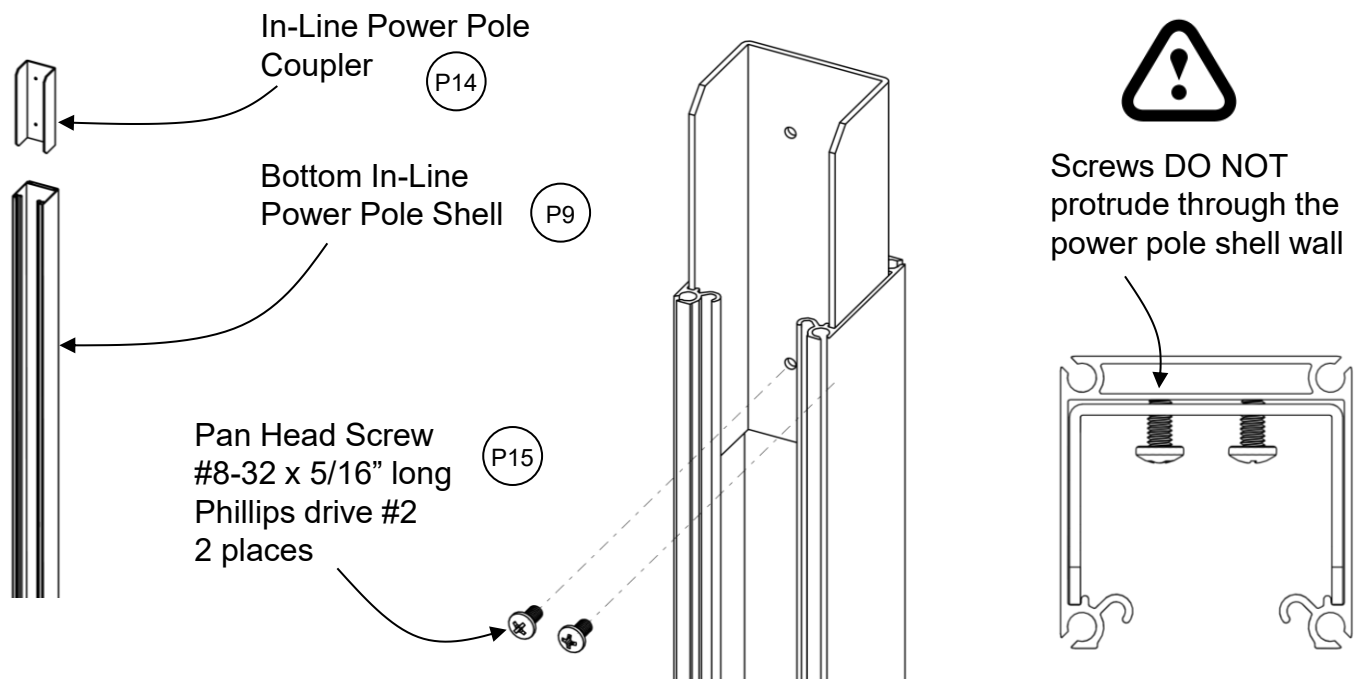


Step 2: Install the power pole divider inside the power pole shell using (2) #8 x 3/8" pan head drilling screws.

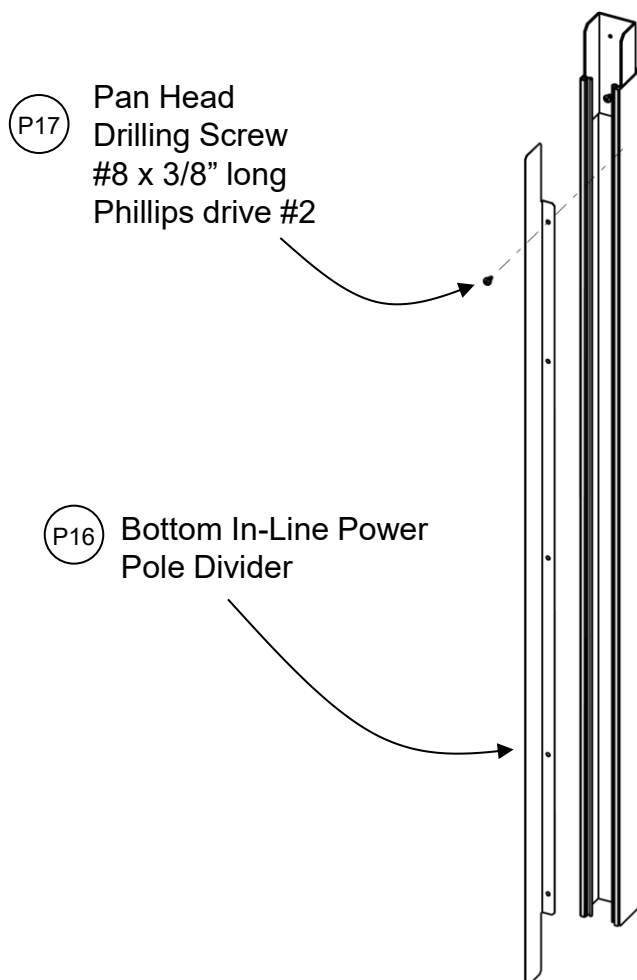


Step 3: Snap power pole cover onto the power pole.

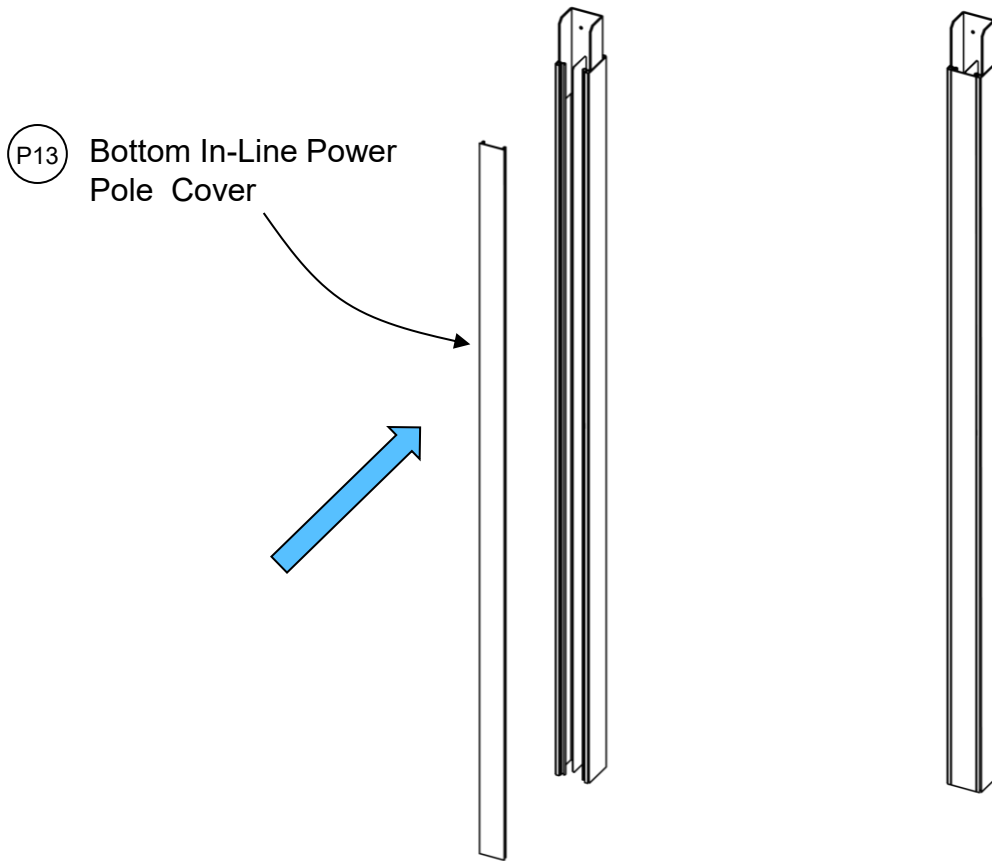


Step 4: Remove endcap topcaps from 4-way panels.

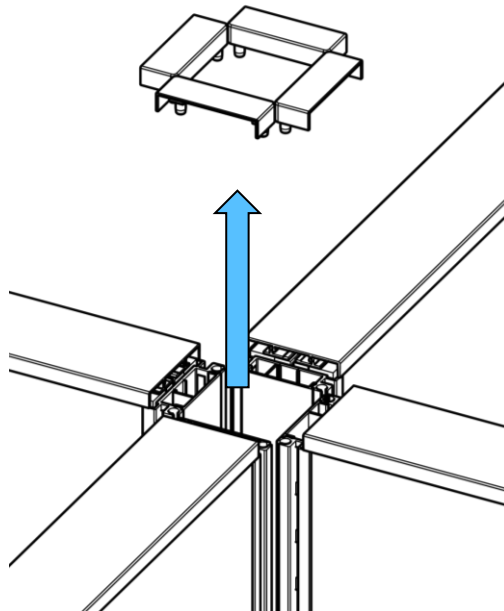


Step 5: Slide power pole into the 4-way channel.

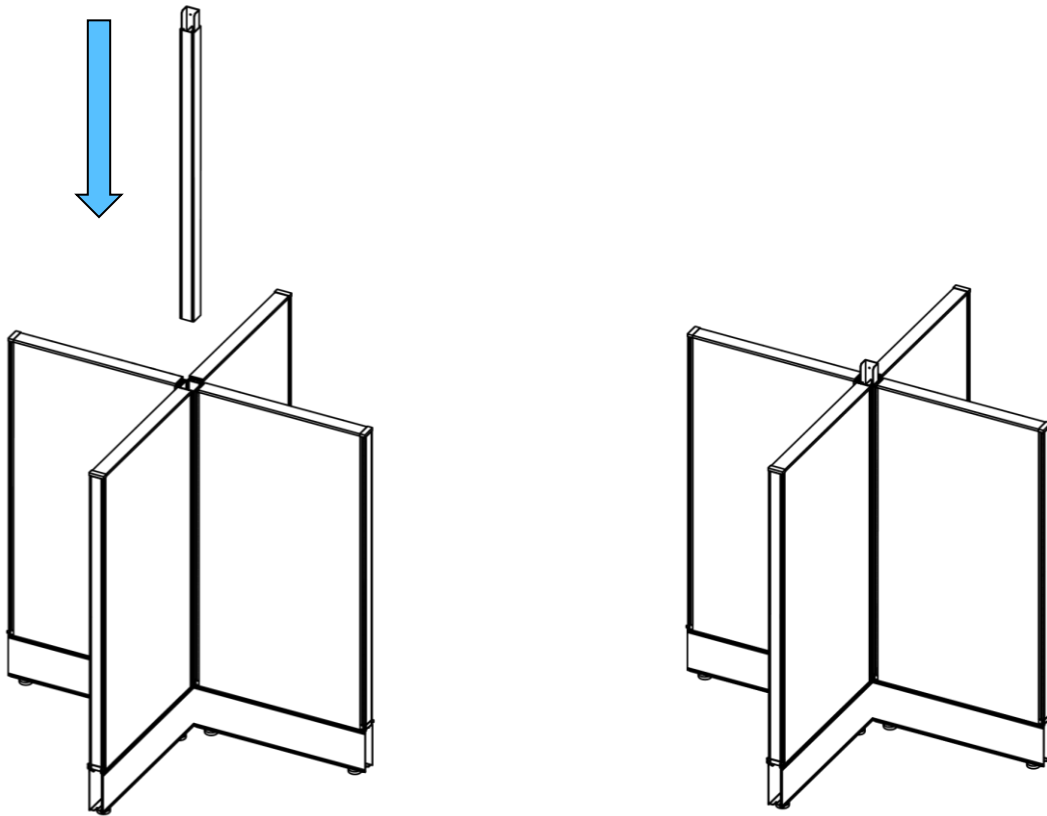


Step 6: Slide the top power pole shell over the coupler and secure using (2) #8-32 x 5/16" screws.

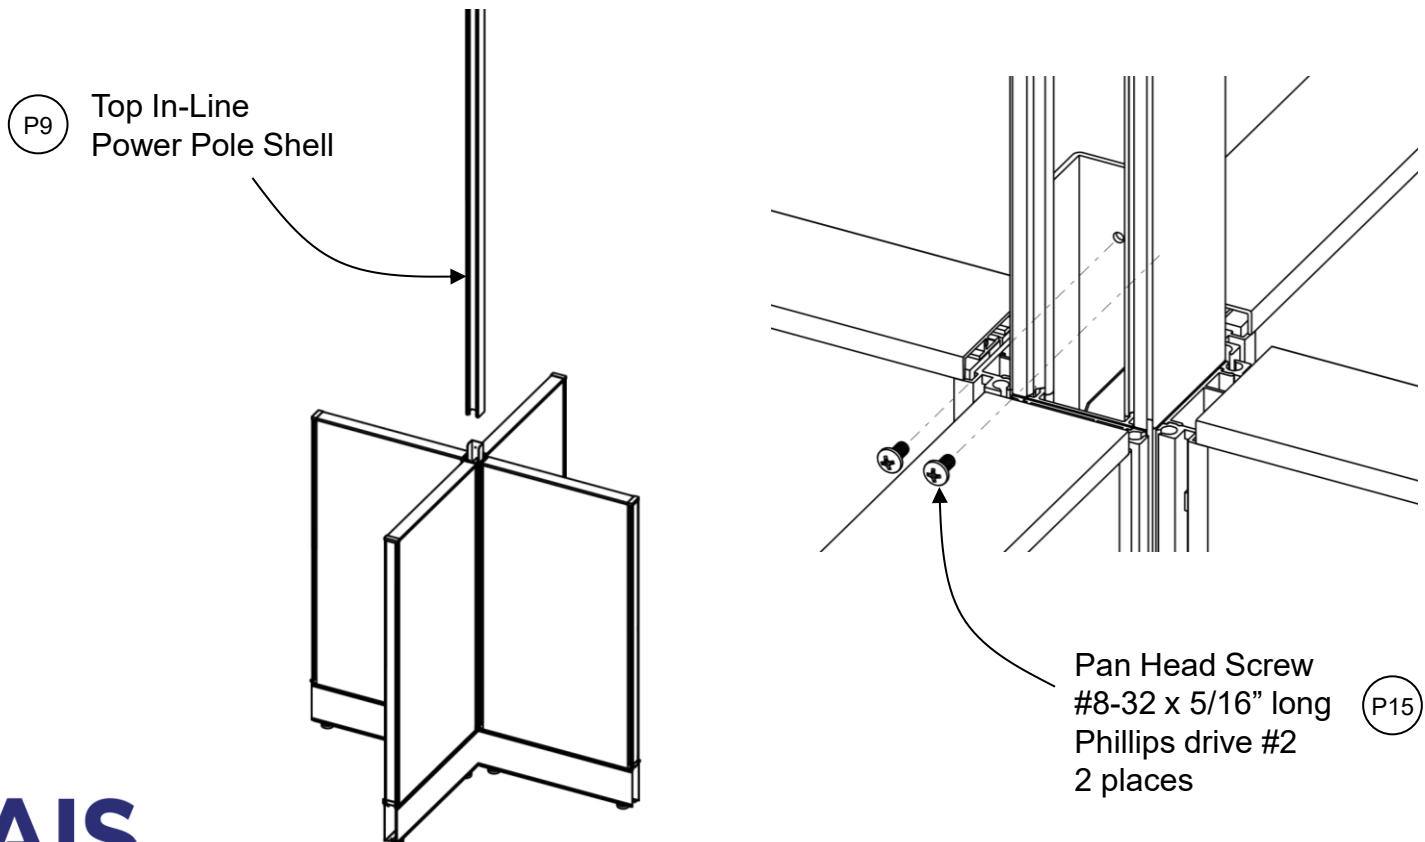

Step 7: Install top power pole divider inside the power pole shell using (2) #8 x 3/8" pan head drilling screws.

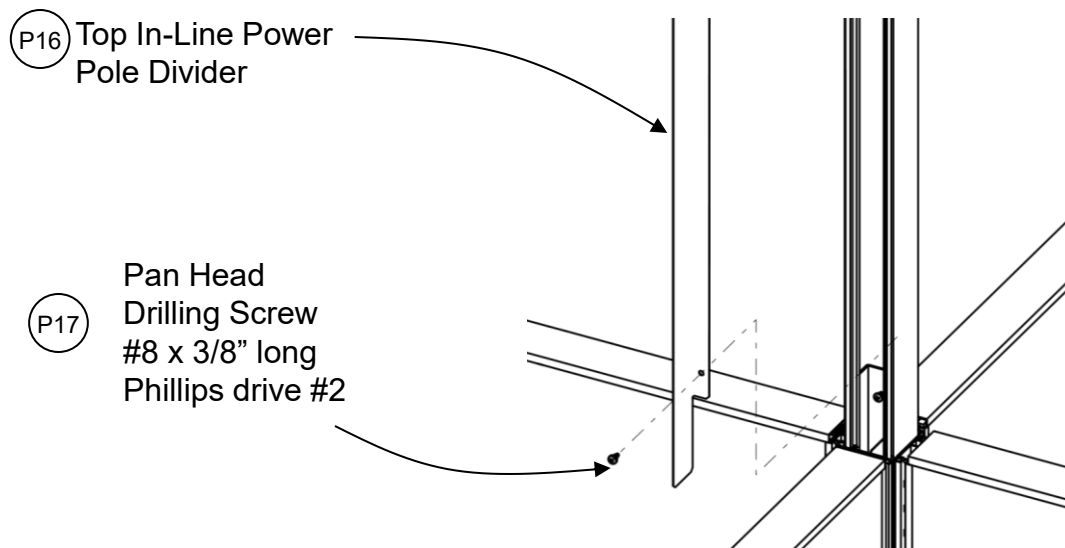


Step 8: Snap the top power pole cover onto the power pole.

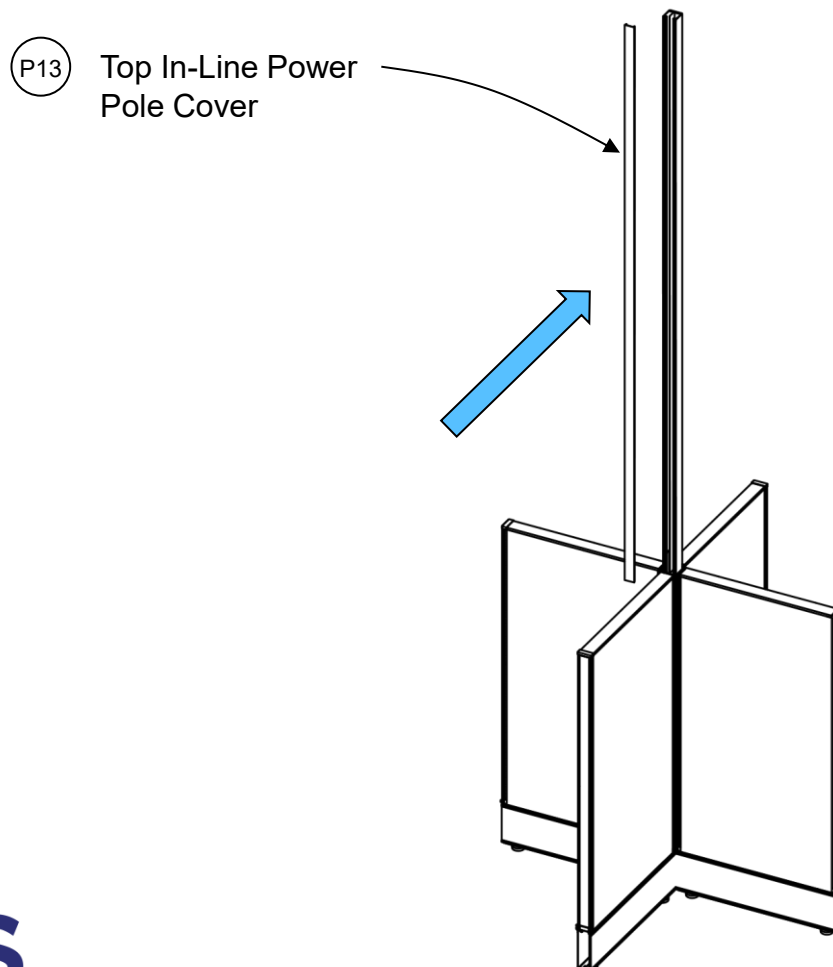


Divi System Main Installation

4-Way In-Line Power Poles


Step 9: Install ceiling shrouds.

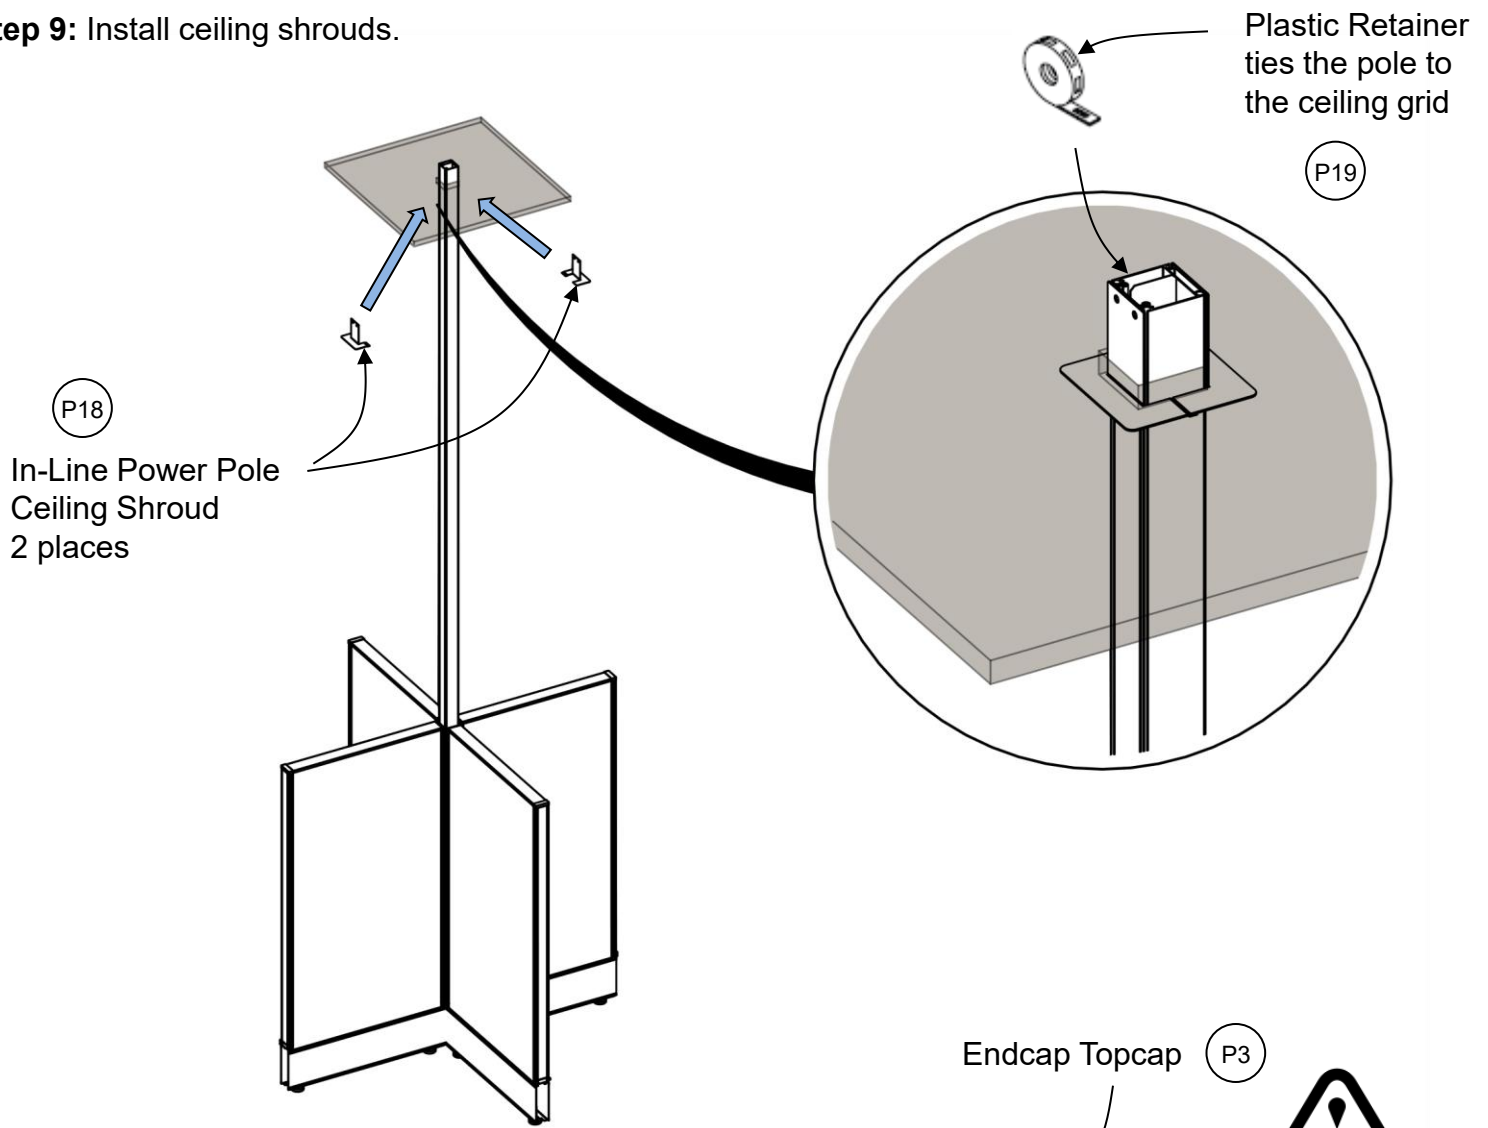


Step 10: Re-install endcaps.

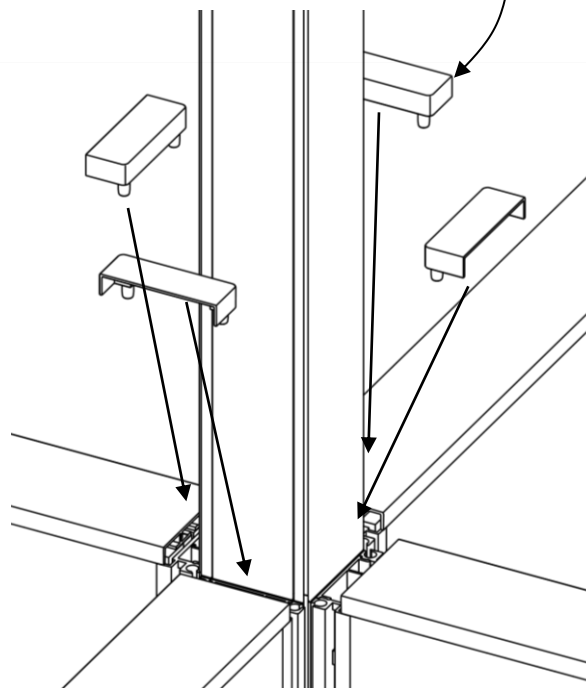


Step 1: Prepare the bottom power pole shell for installation by knocking out the punchouts as specified below using a screwdriver and soft mallet.

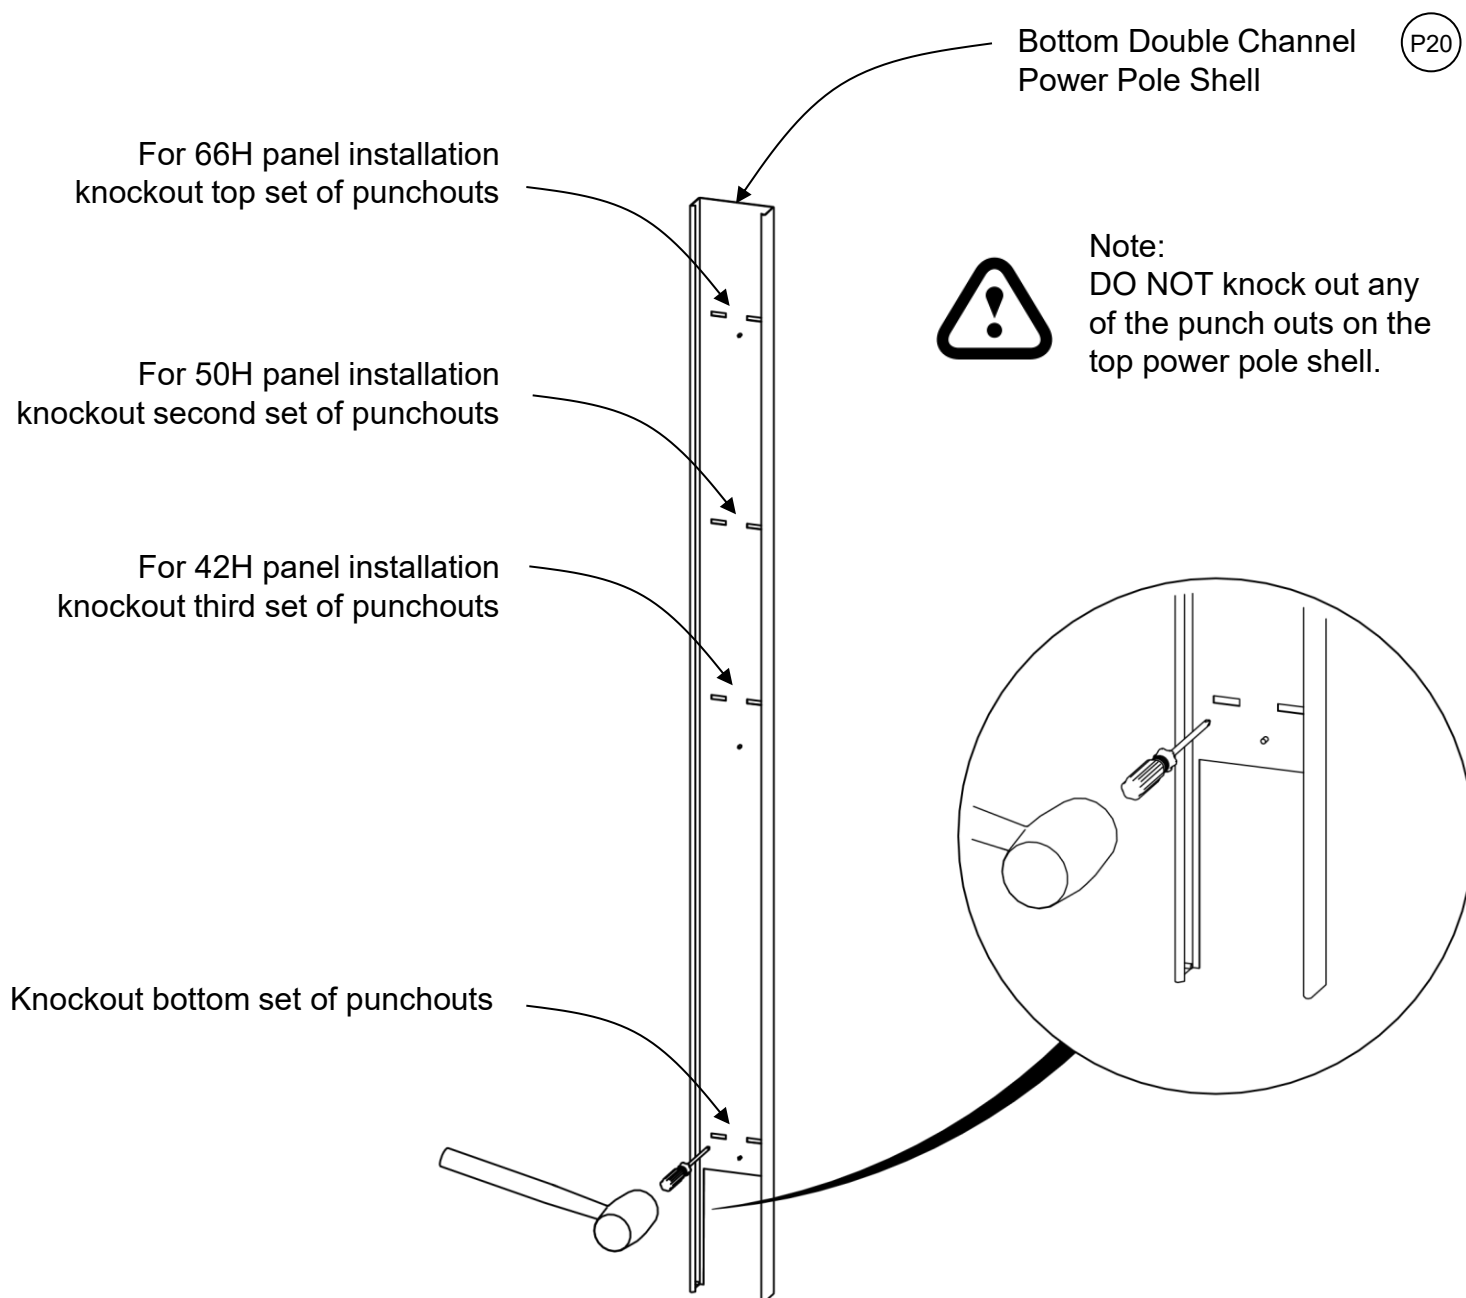


Step 2: Install (4) power pole mounting brackets into the top and bottom slots of the hanger frame as shown below.

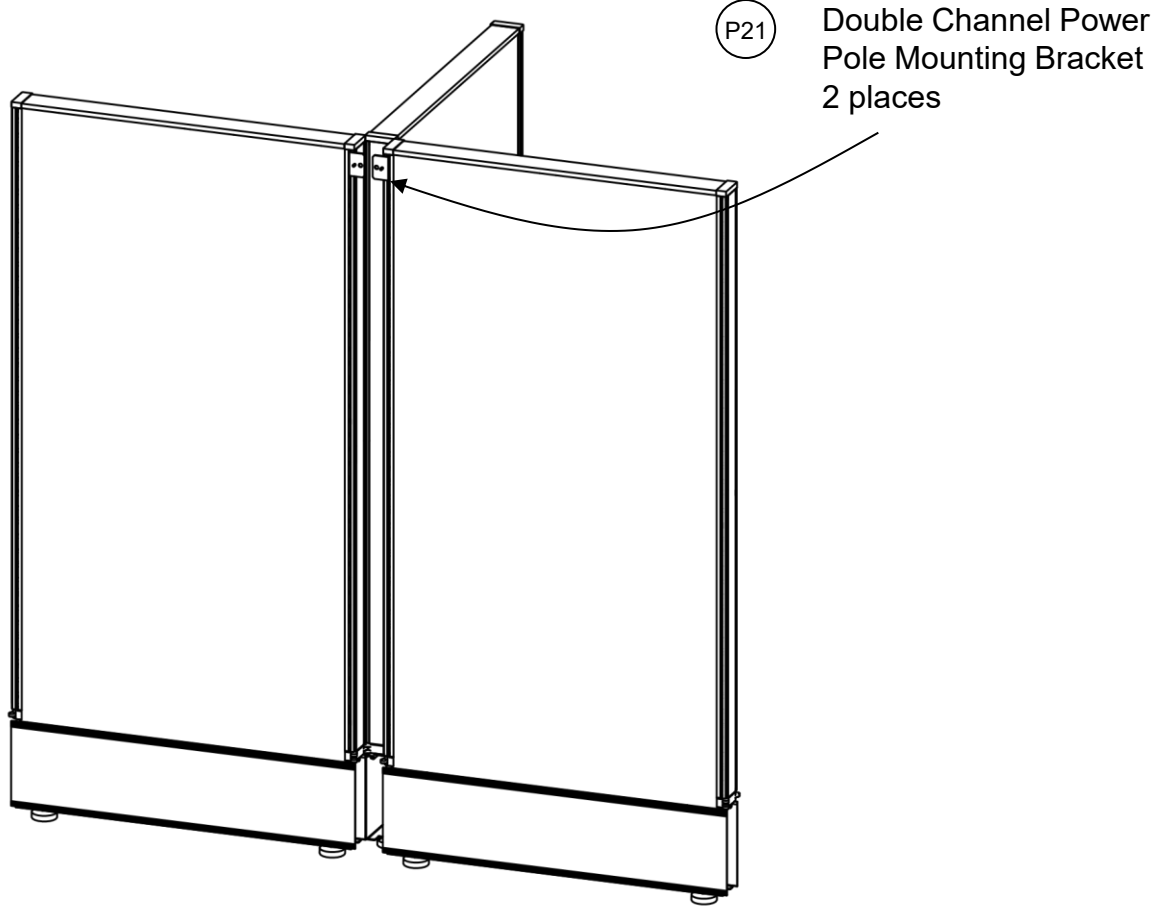


Hook mounting brackets **DOWN** into the slots of the hanger frame making sure the holes are facing inward as shown.

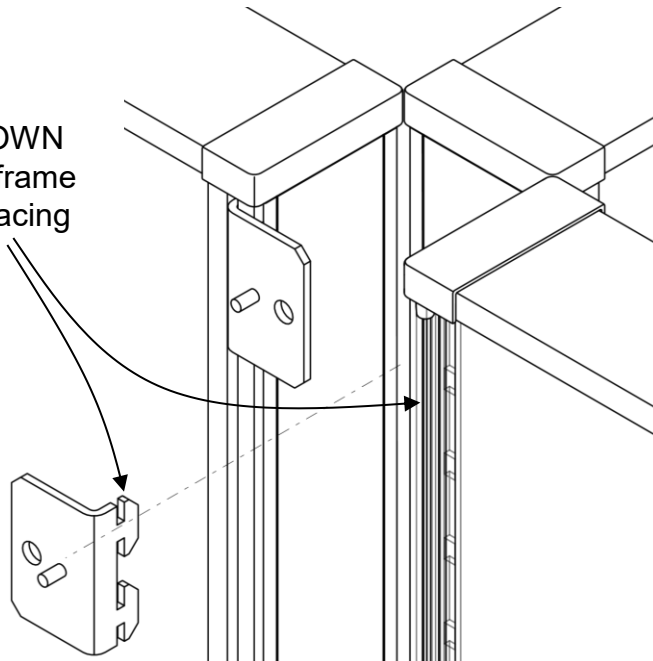


Step 3: Hang the bottom power pole shell on the threaded studs on the (2) top mounting brackets and loosely secure in place with (2) #8-32 Acorn Nuts.

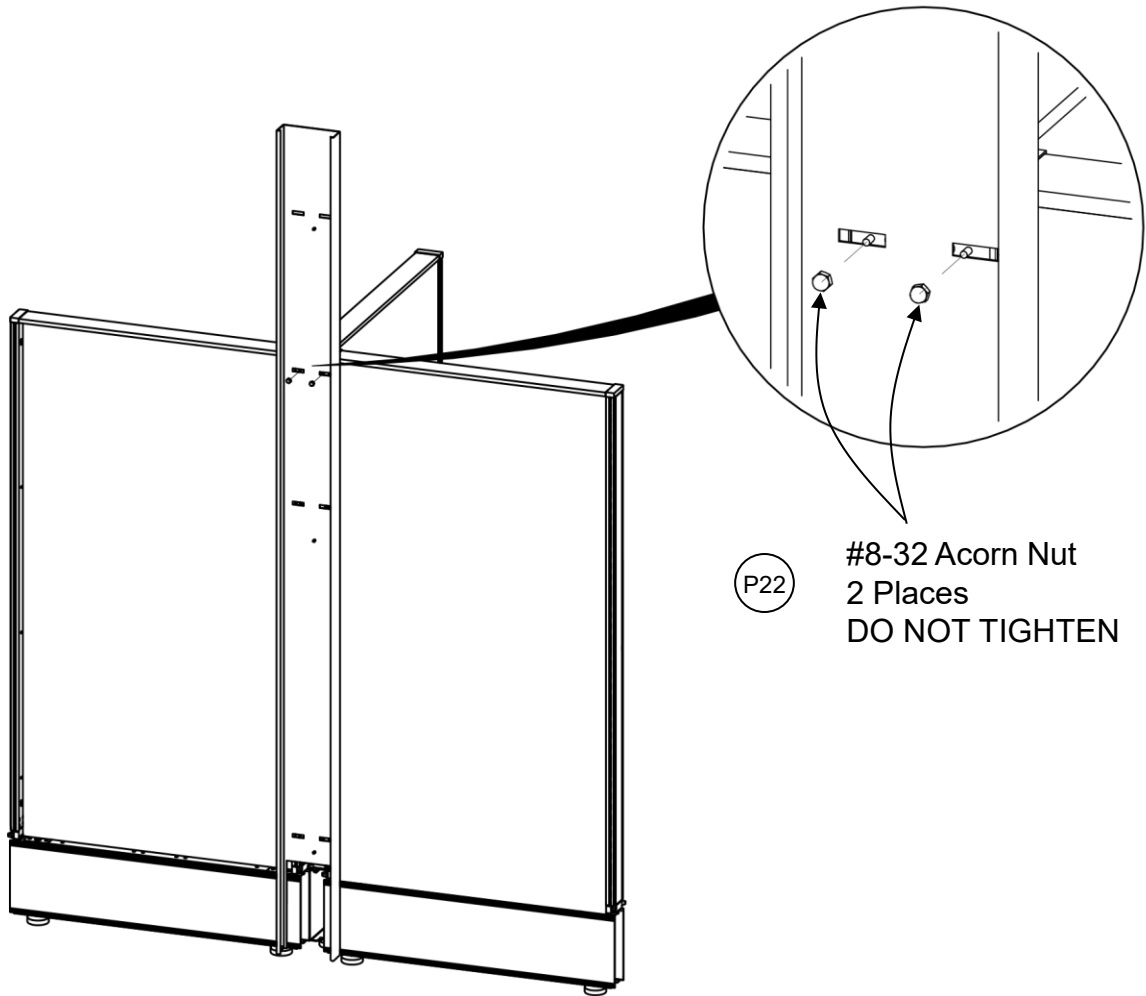


Step 4: Temporarily rotate the power pole shell and install the (2) bottom mounting brackets into the hanger frame slots.

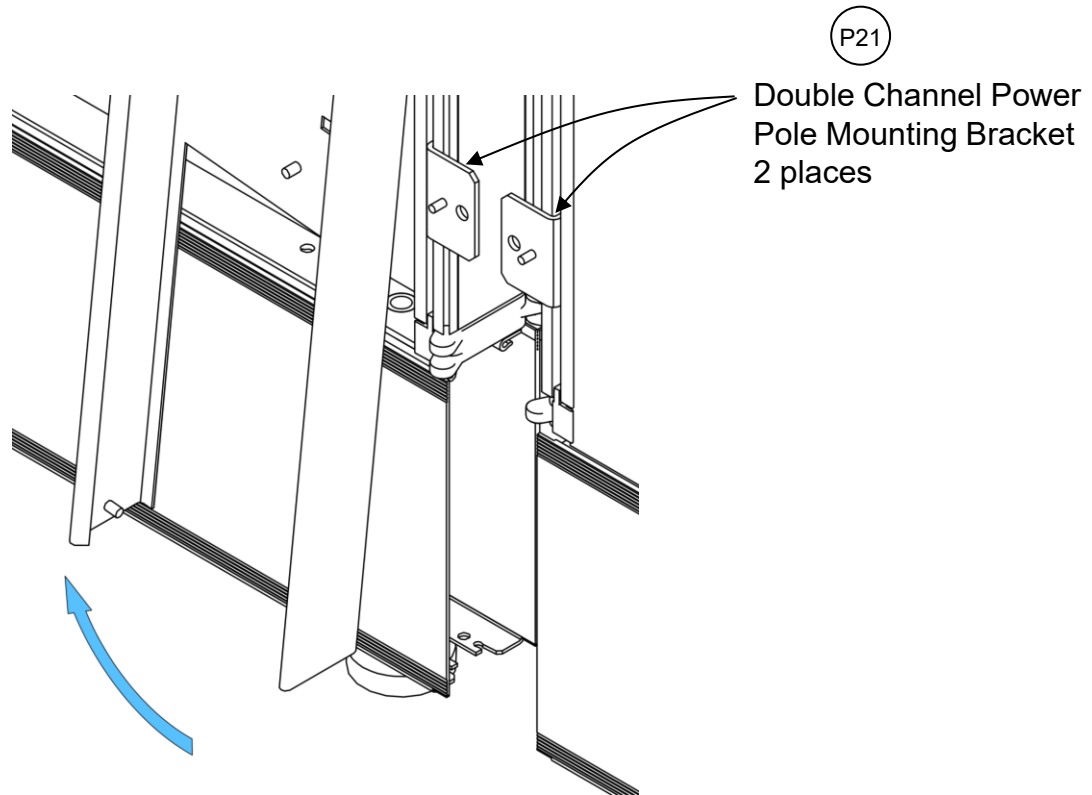

Step 5: Align mounting bracket studs into the bottom slots of the power pole shell. Using a screwdriver, lift the mounting bracket up and secure in place using (2) #8-32 Acorn Nuts.

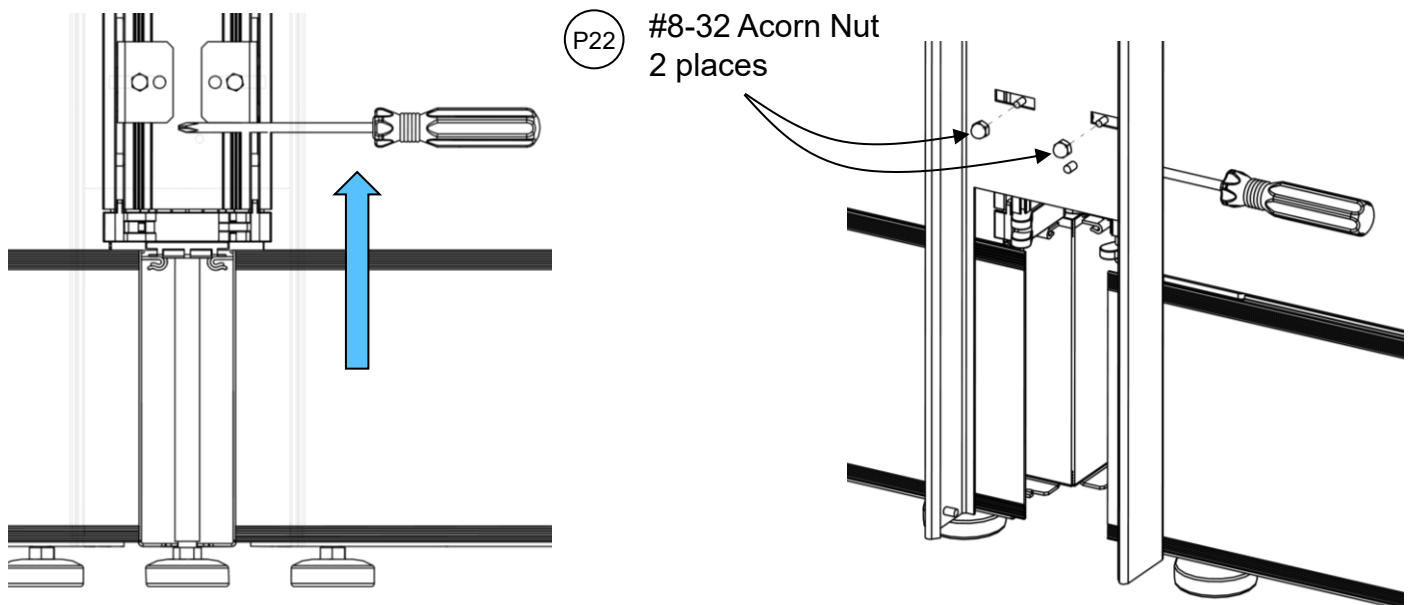


Step 6: Plumb and level the power pole shell and tighten all acorn nuts.

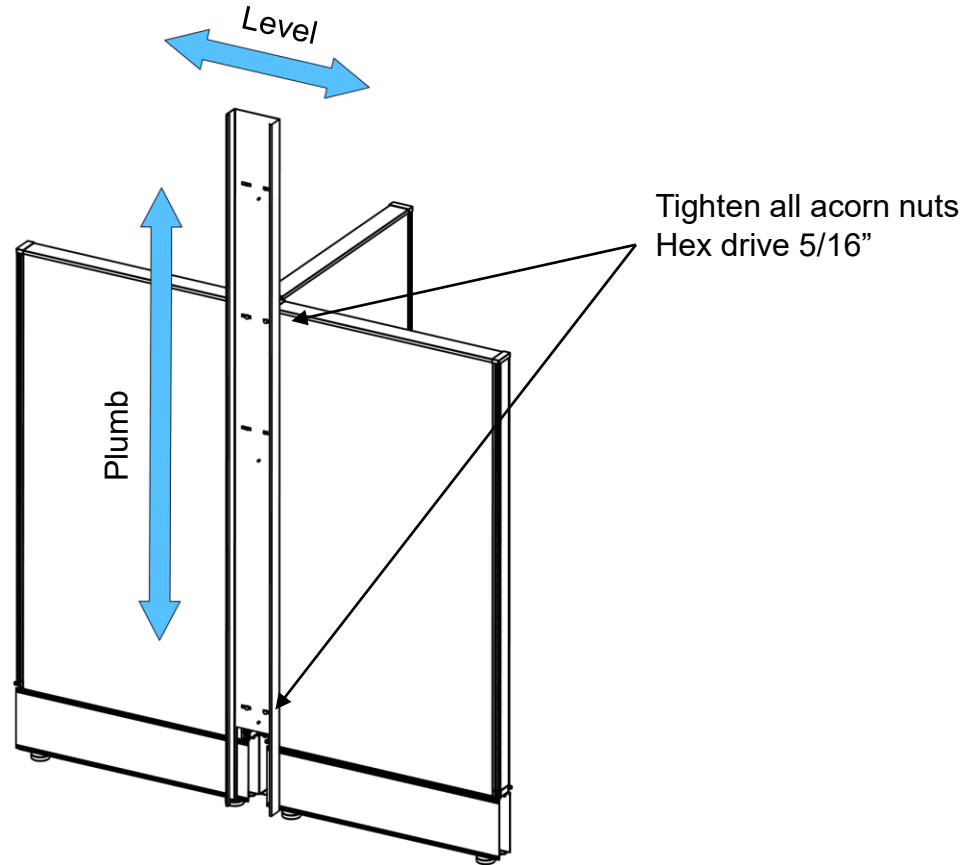

Step 7: Install the coupler into the bottom pole shell as shown and secure with (2) #8-32 x 5/16" screws.


Double Channel
Power Pole Coupler

P23

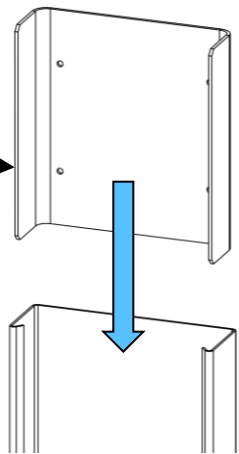


P15


Pan Head Screw
#8-32 x 5/16" long
Phillips drive #2
2 places

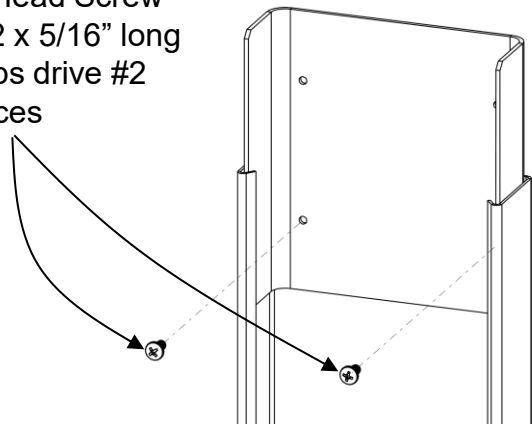


Screws DO NOT
protrude through the
power pole shell wall

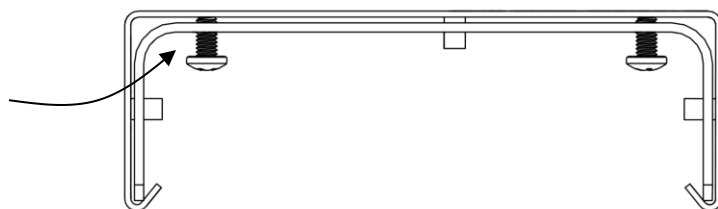


Step 8: Slide top power pole shell over the coupler and secure in place using (2) #8-32 x 5/16" screws.

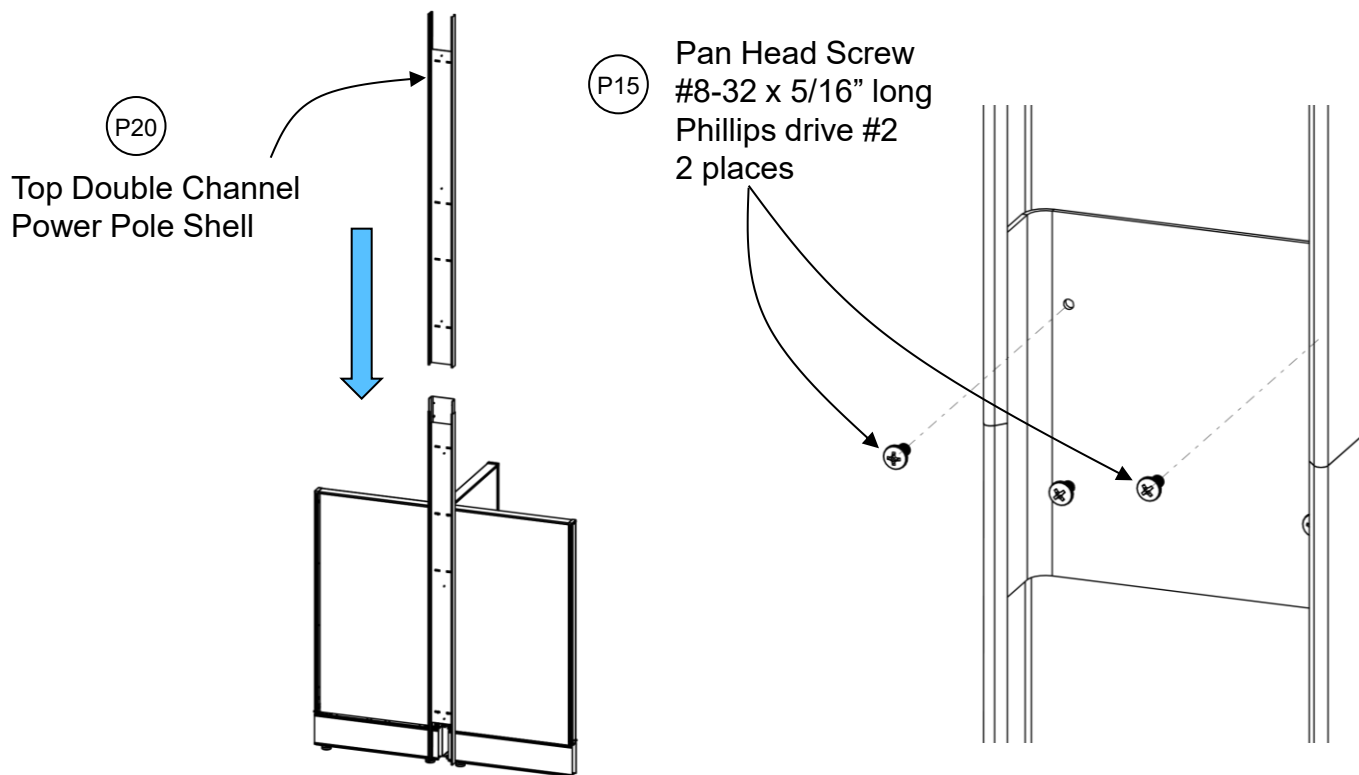


Step 9: Install the dividers as shown into the pole shells using the #8-32 acorn nuts.

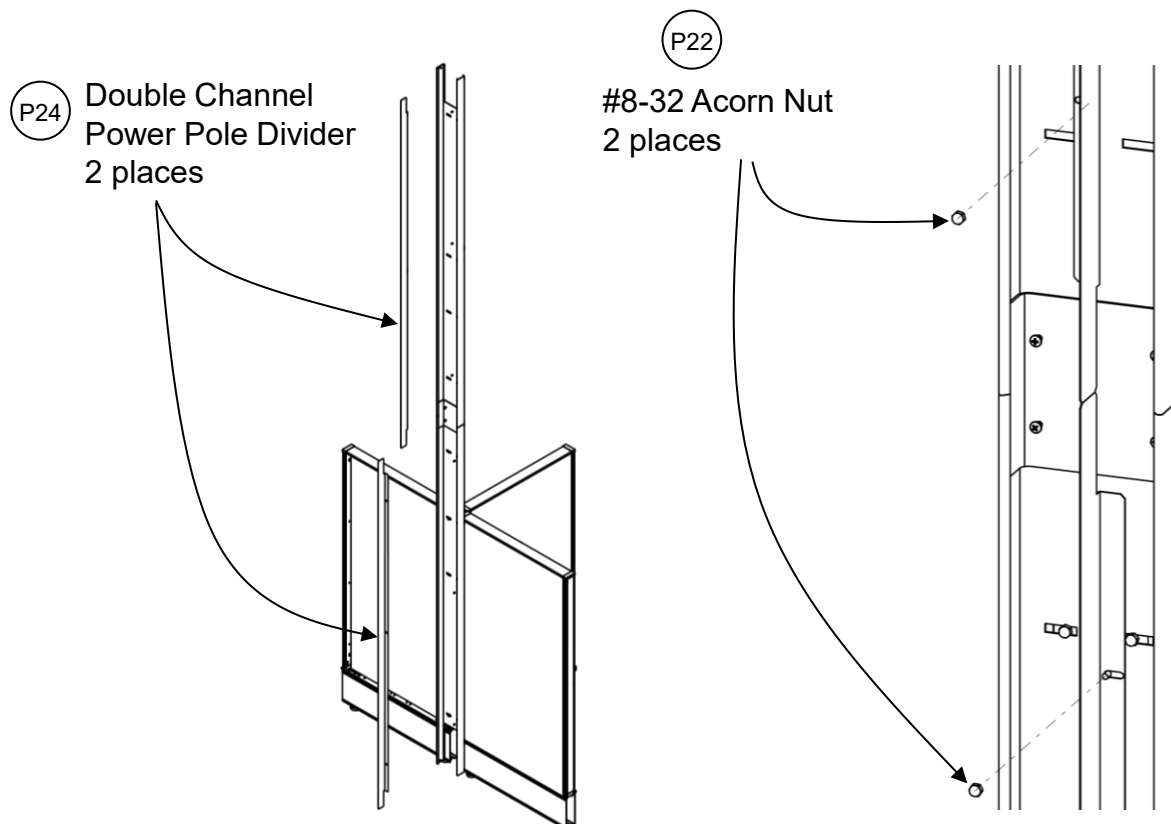

Step 10: Snap top and bottom power pole covers onto the shells, making sure they are flush with no gaps.

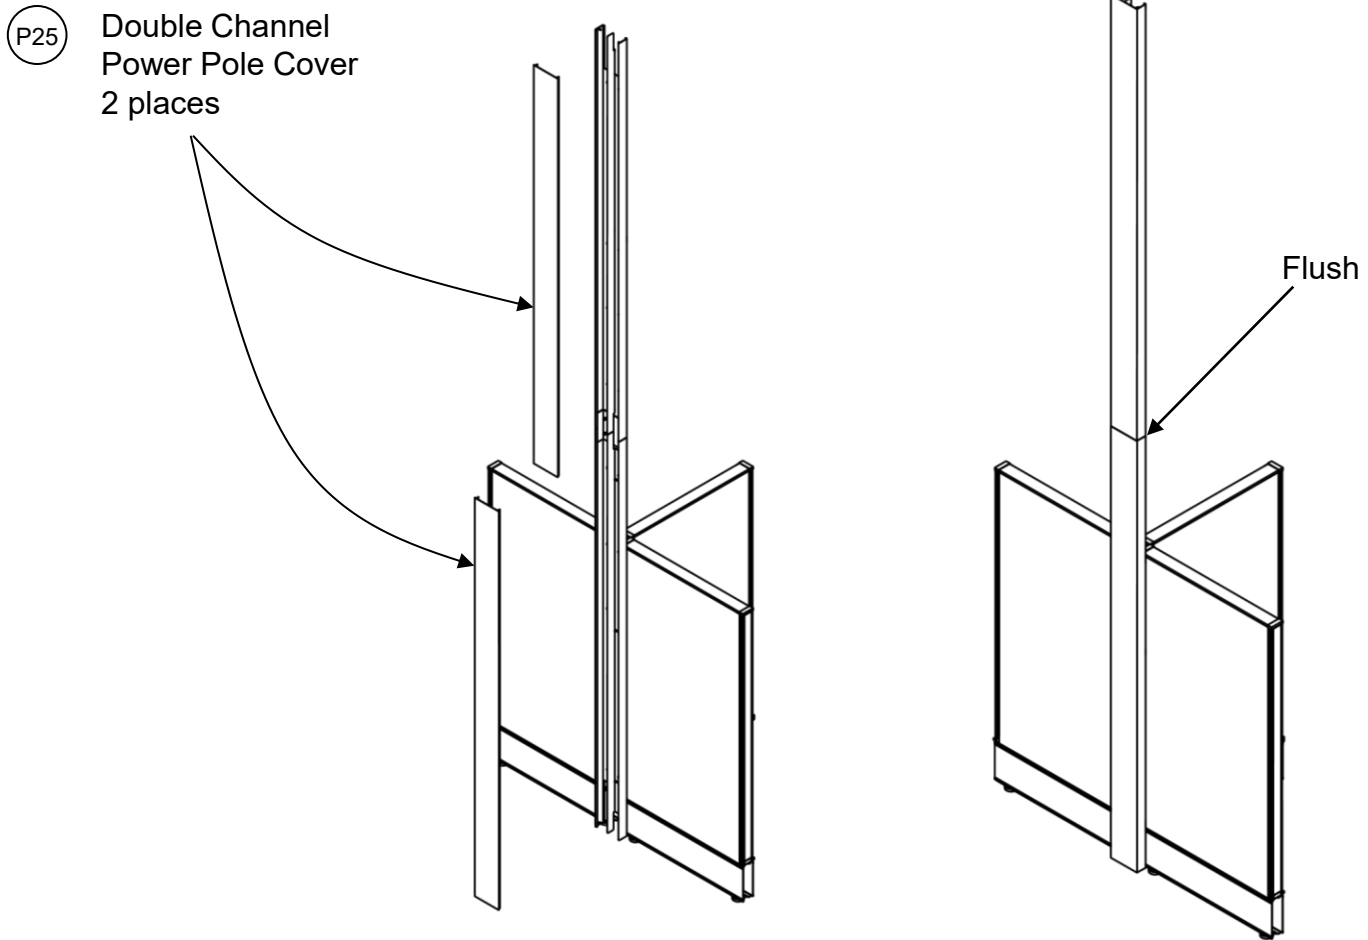


Step 11: Install ceiling shrouds.

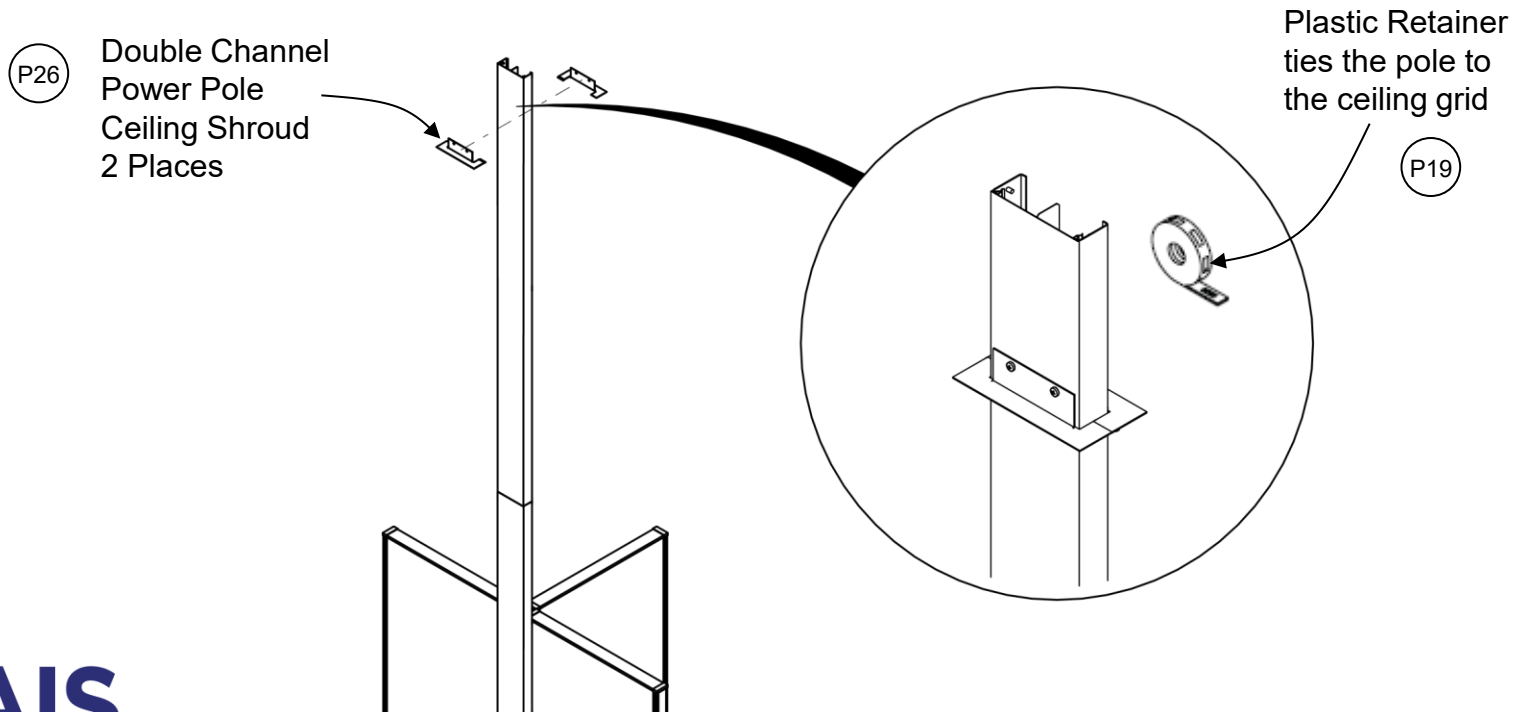


Divi System Main Installation

Electrical – Receptacle Mount Base In Feed

1. Install base in-feed to powerway.

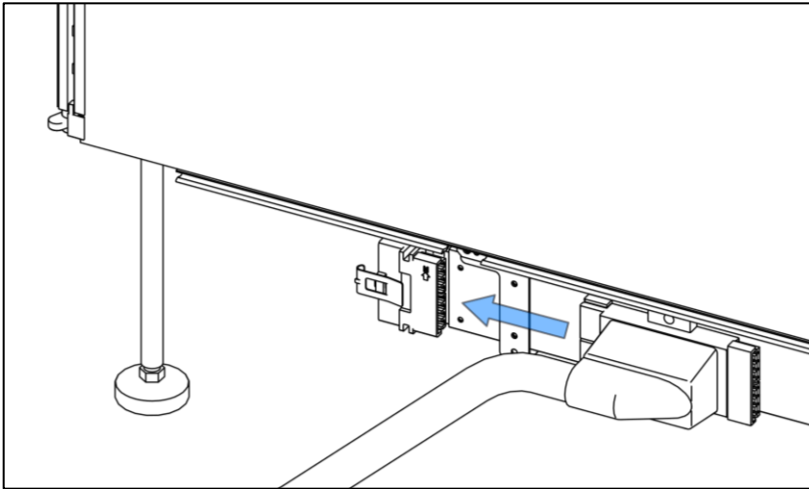



2. Install (2) #10-24 x 5/8" pan head screws.

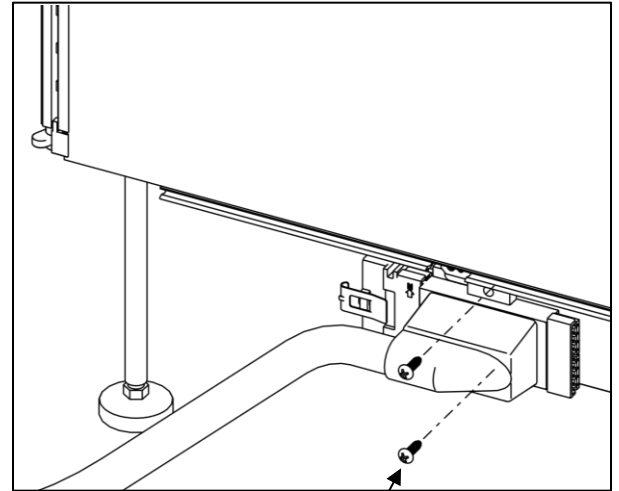


P8

#10-24 x 5/8 long
Pan Head Thread
Cutting Screw
#2 Phillips Drive
2 places


3. End of in-feed MUST be run through the base cover before hardwiring to building power source.

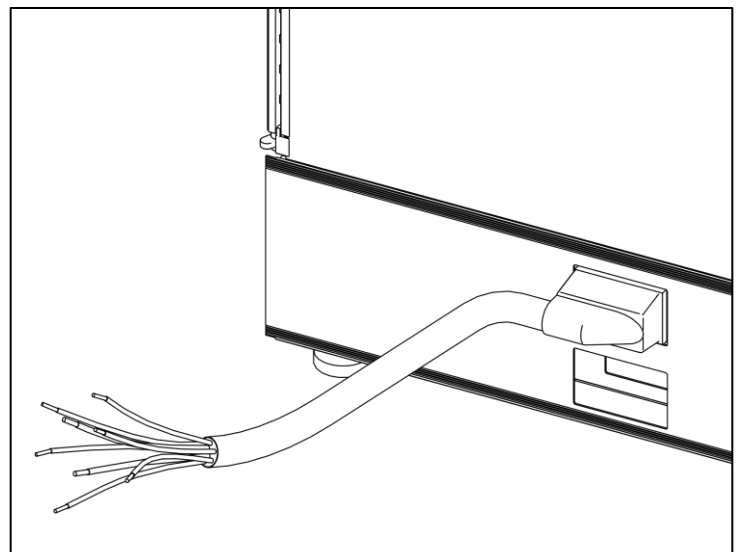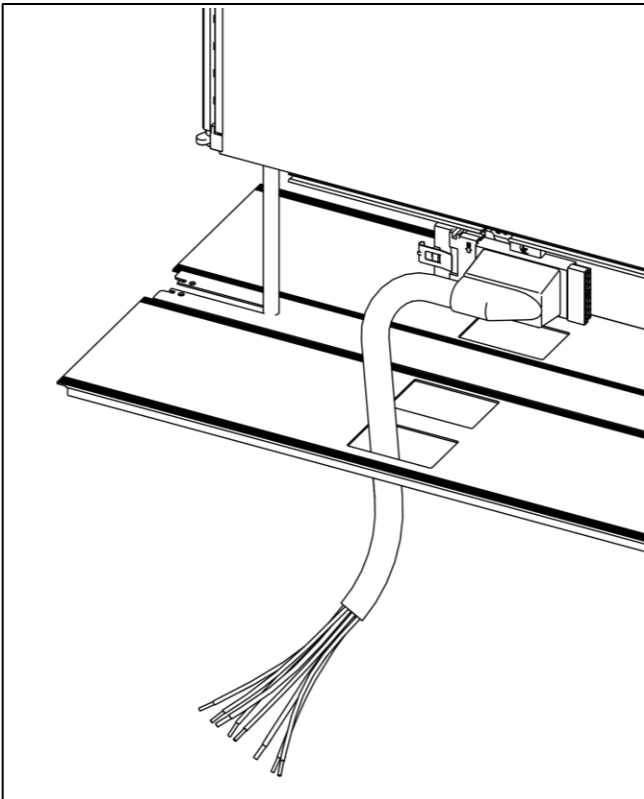

1. Install outlet to powerway.

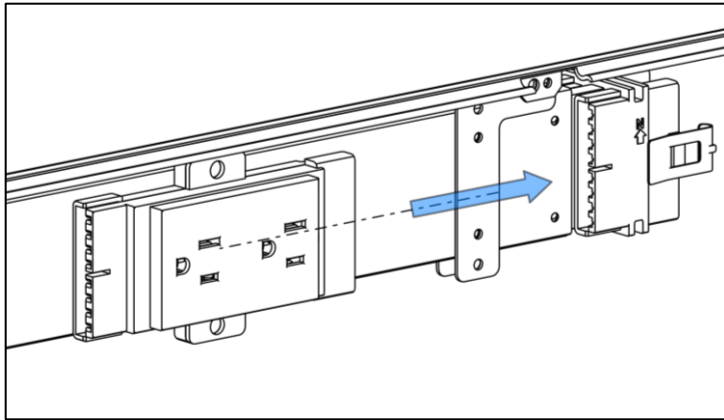

2. Install (1) #10-24 x 5/8" screw.

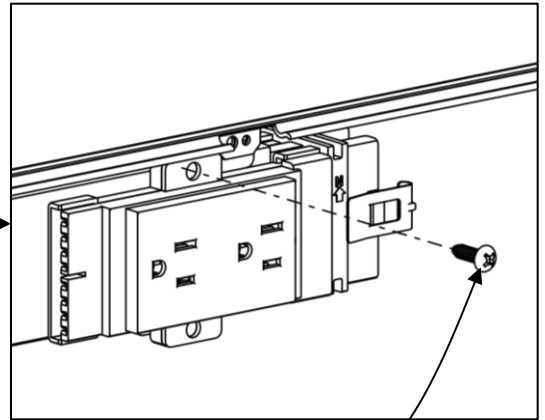


P8

#10-24 x 5/8" Pan Head
Thread Cutting Screw
#2 Phillips drive
1 place per outlet

Plug jumper into powerway


Note UP arrow



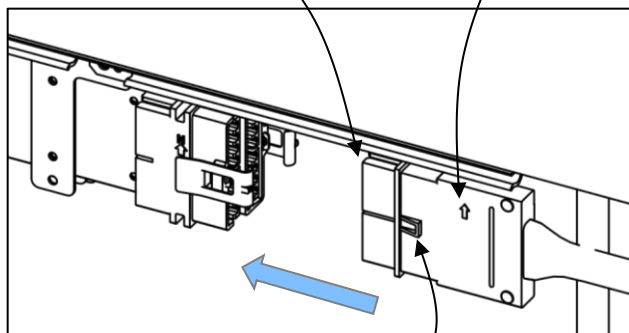


Engage clip HERE




Fully engage locking clip

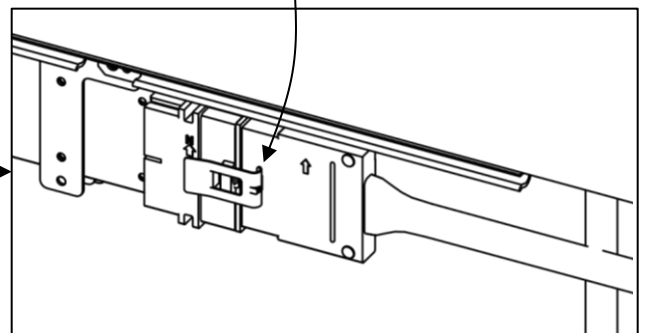


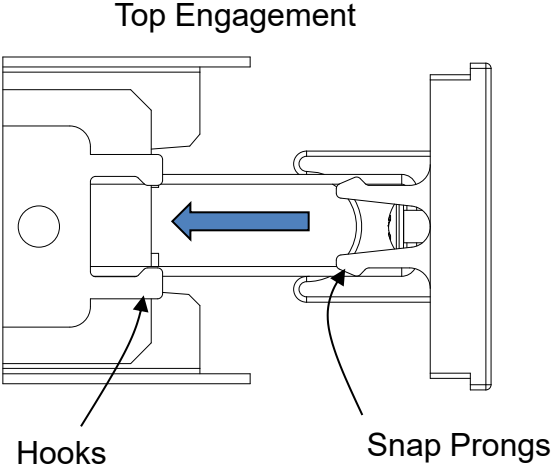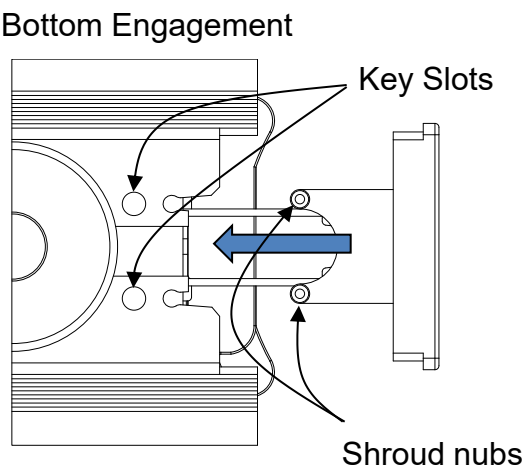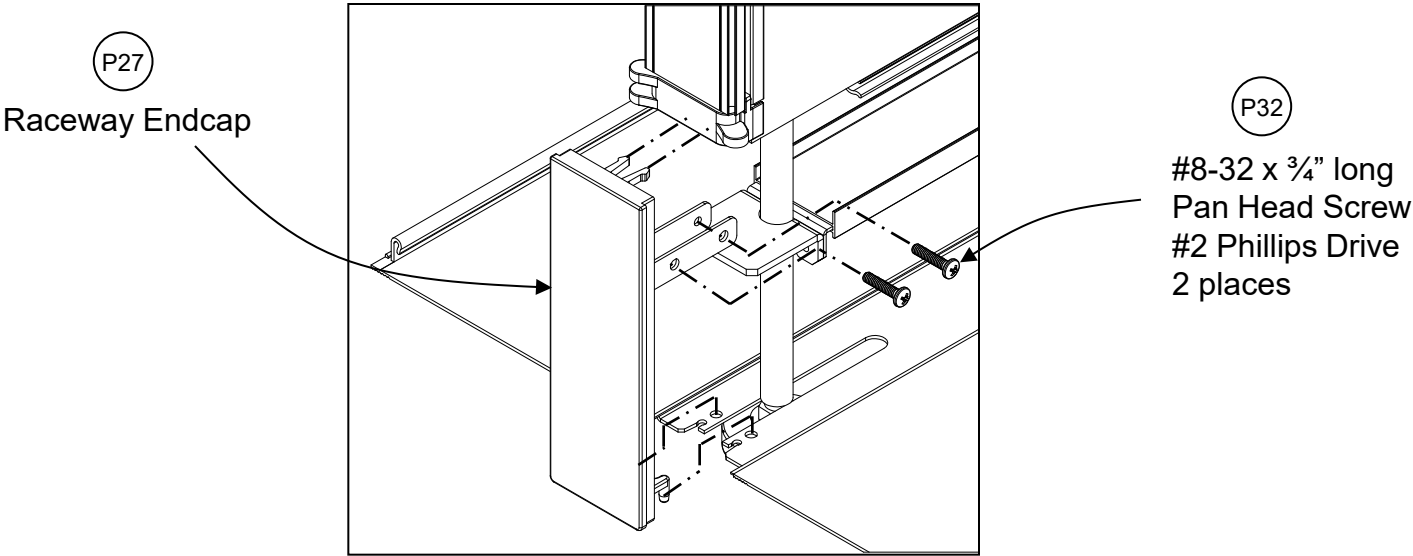


3 way 90° Raceway Shroud (P28)

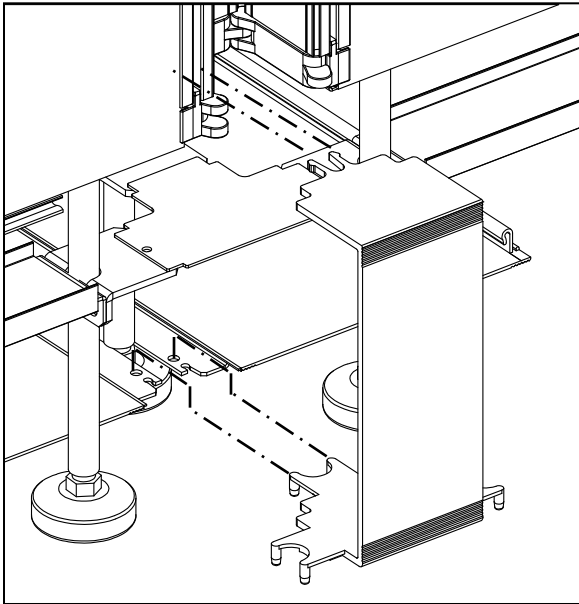

2 way 90° Raceway Shroud (P29)

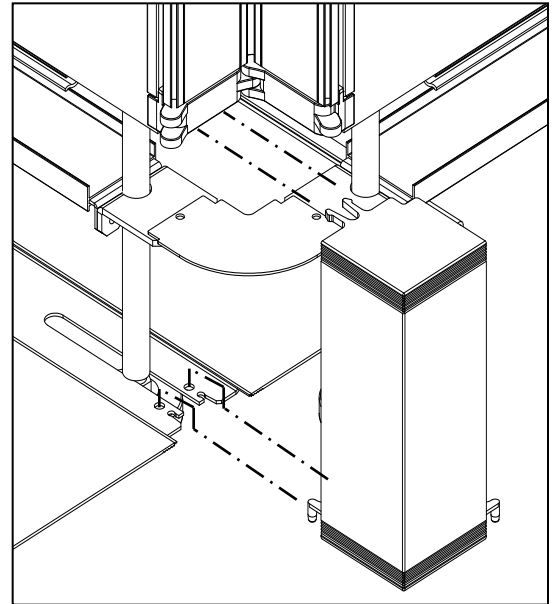


2 way 45° or 60° Raceway Shroud (P30) (P31)

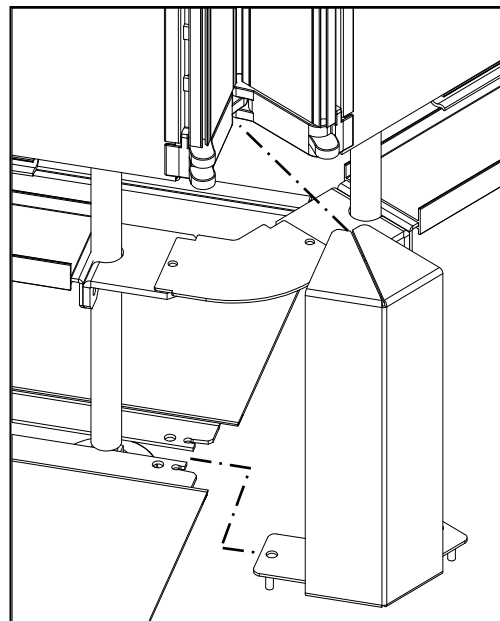


Divi System Main Installation

Closing Raceway Cover

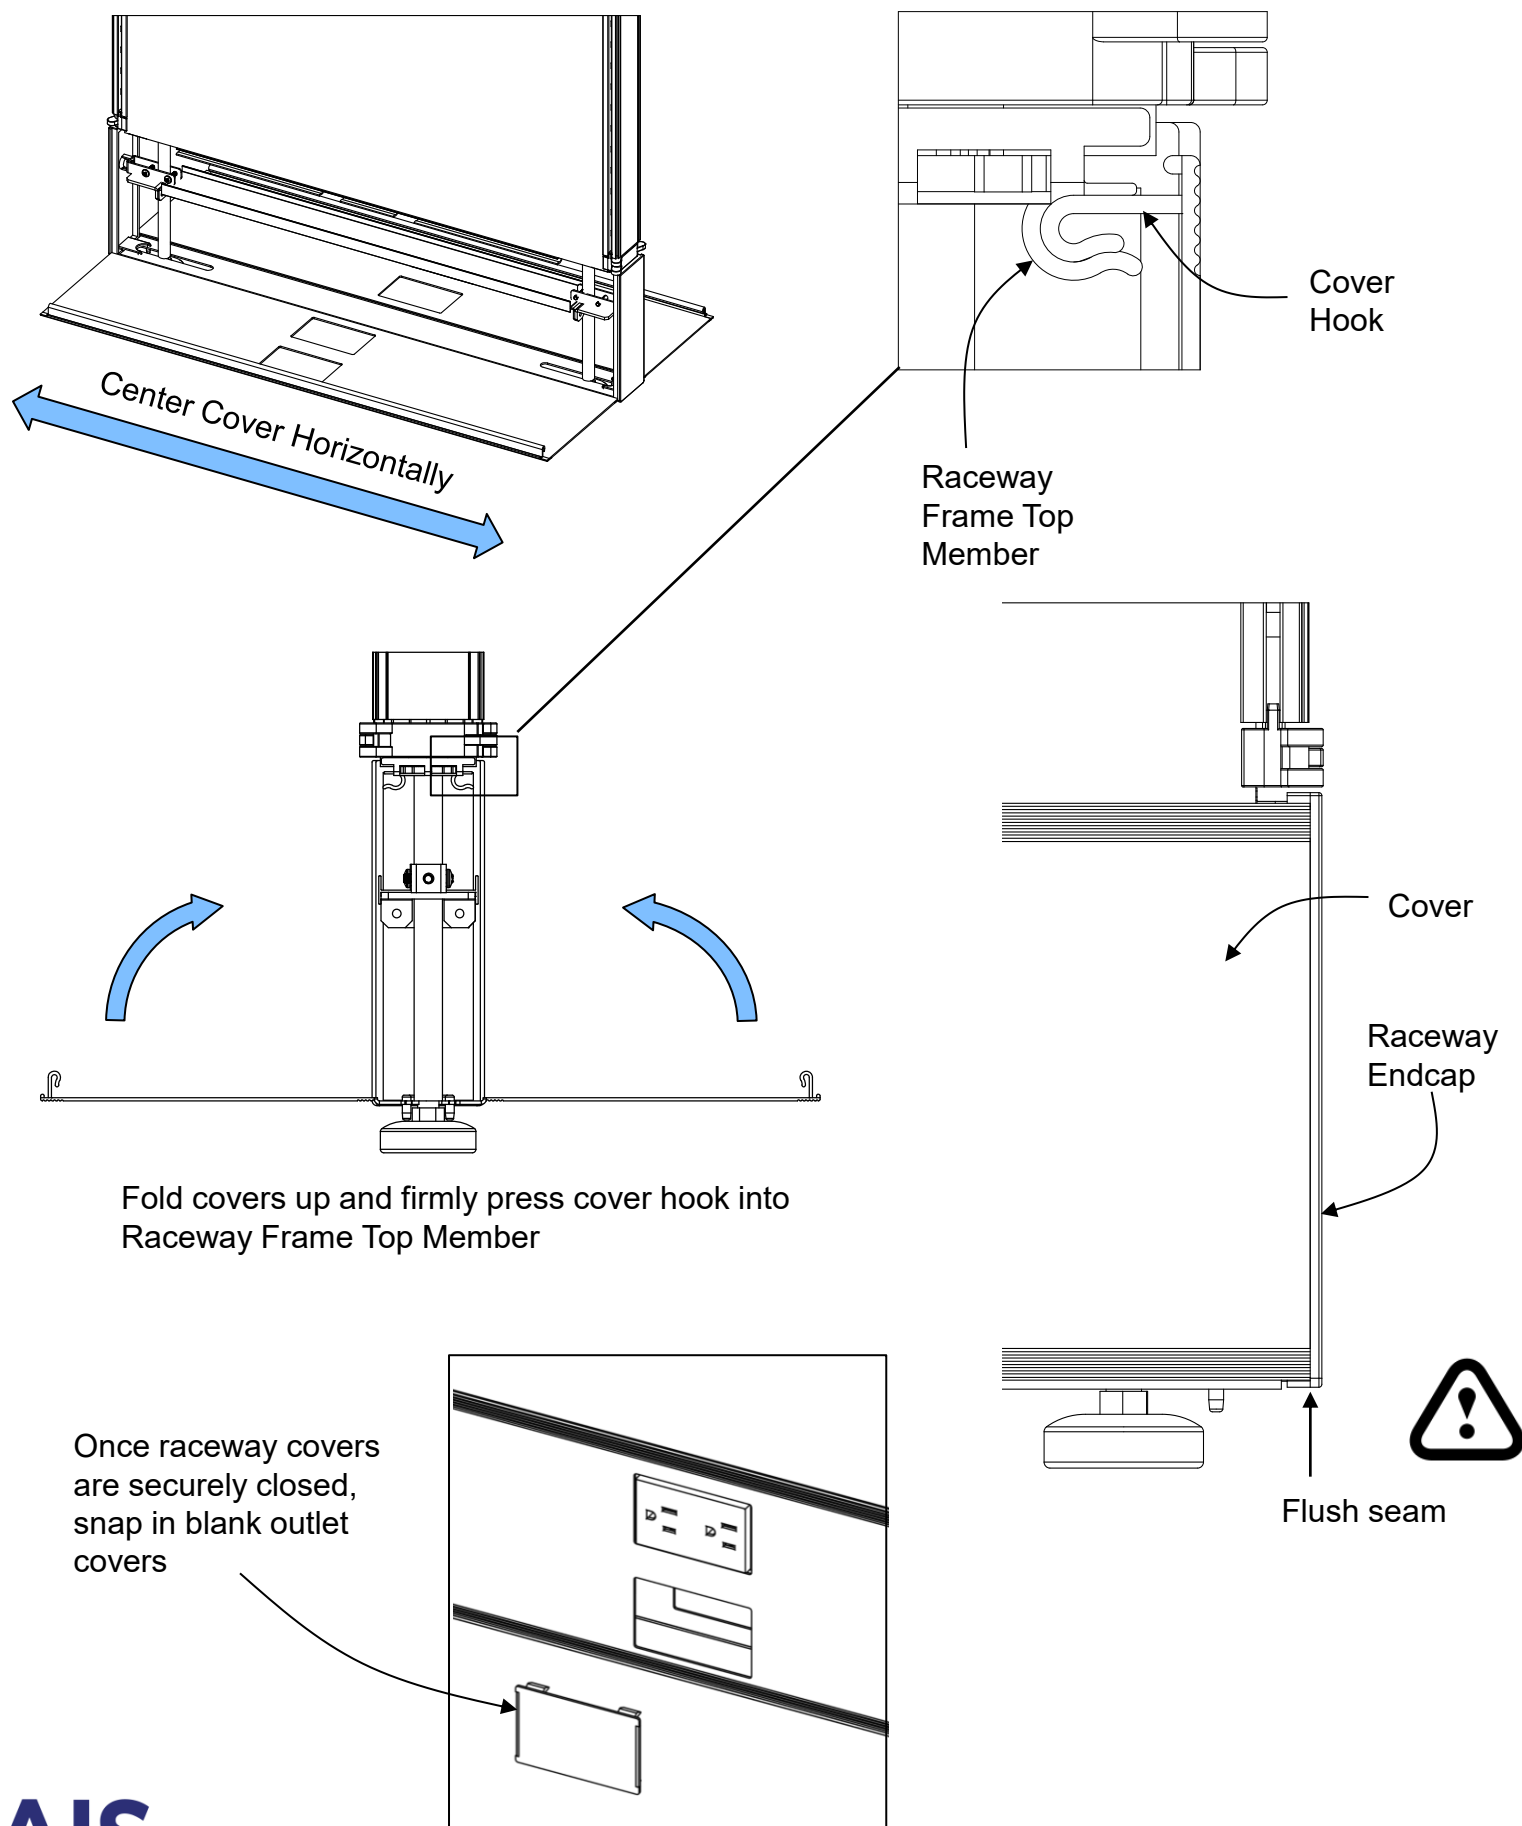

3-Way Door Shroud (P47)

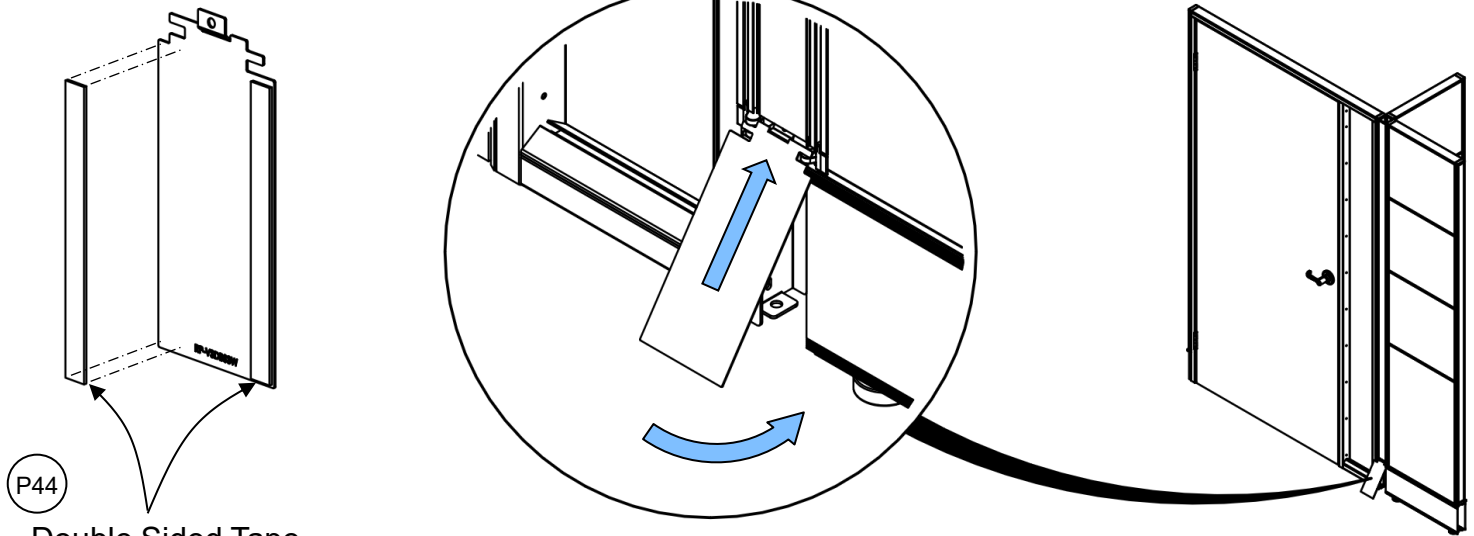


Double Sided Tape

- Supplied in 12" strips.
- Cut each strip in half.
- Remove backing from one side.
- Apply 2 strips of tape as shown.
- Remove backing from second side.

Slide top tab of shroud under the bottom edge of connector. Then, firmly press shroud to adhere in place.

2-Way Door Shroud (left hand shown) (P45) (P46)

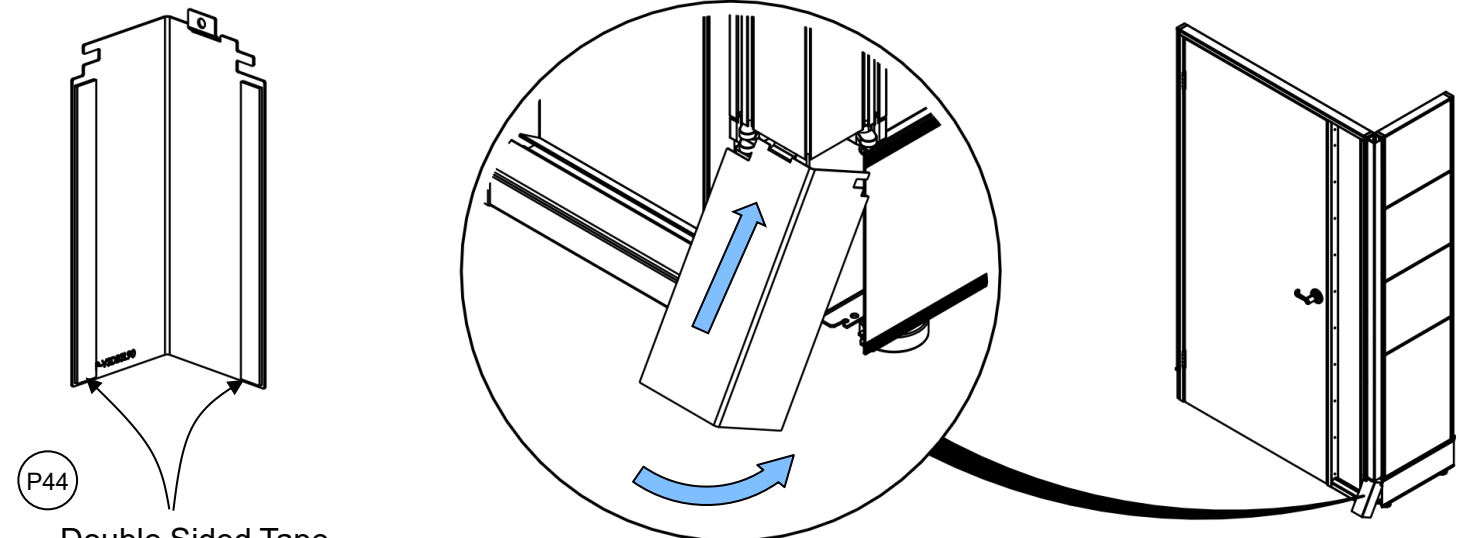


Double Sided Tape


- Supplied in 12" strips.
- Cut each strip in half.
- Remove backing from one side.
- Apply 2 strips of tape as shown.
- Remove backing from second side.

Slide top tab of shroud under the bottom edge of connector. Then, firmly press shroud to adhere in place.


Use a non-marring mallet to GENTLY tap into place

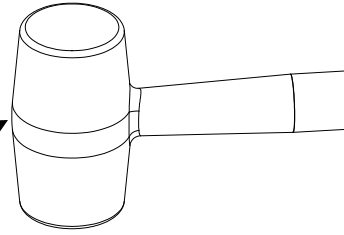


P3 Endcap Topcap

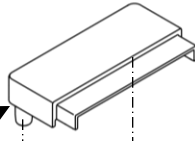



Slide topcap back and install first topcap endcap into the hanger frame

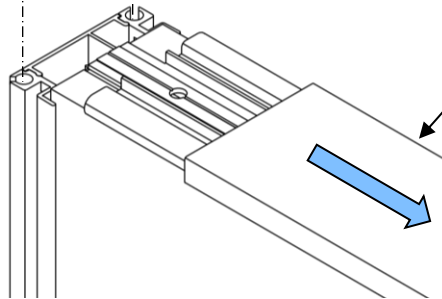

Use a non-marring mallet to GENTLY tap into place

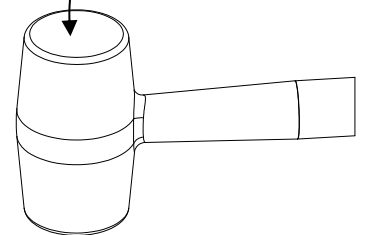

Lift end of topcap up ½" max.
Do not bend or crease topcap.
Install the second topcap endcap
under the topcap.

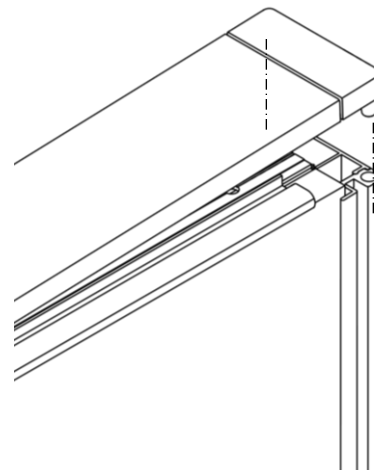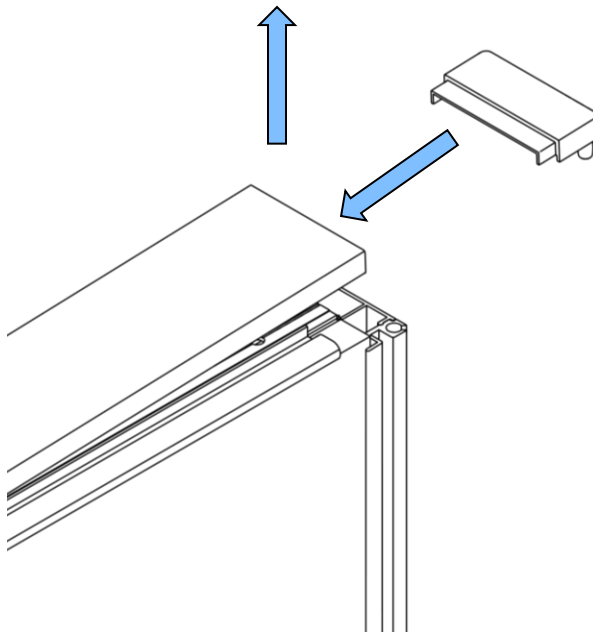

- Install cantilevers into hanger frames per the design spec,
- Position worksurfaces and secure to cantilevers using #9 x 7/8" screws.

Install cantilevers at an angle
UP – IN – DOWN
Into hanger frame slots

