




Rhett Installation Instructions

Date	Page No.	Description of change	Name
08/13/2026	1-9	Released	S. Powers


Item	Replacement Part number	Circle Sheet Part Number	Description	Image
P1	P-CPSFSP	RH-CPSFSP	Foot Plate	
P2	RH-WSFP1034-C	RH-WSFP1034-C	#10 X 3/4" Flat Head Screw	
P3	P-CPP	RH-CPP	Tapered Foot	
P4	P-CPG	RH-CPG	5/16-18 Glide	
P5	WPS-HSxx	RWPS-HSxx	U-Channel	
P6	RC-HDST	RC-HDST	Double Sided Tape	

Recommended Tools				
Cordless drill	#2 Phillips insert bit	Small Ratchet	3/8" Hex tip	Level
	 			

Rhett Installation Instructions

Step 1: Prepare to install legs by carefully placing unit back side on the floor.


Carefully place unit
back side on the floor

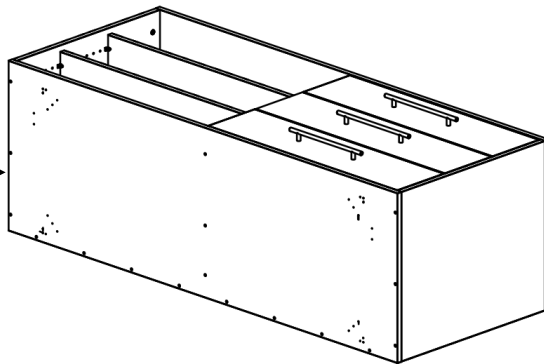


Step 2: Align foot plate to the pre-drilled holes and secure using #10 x $\frac{3}{4}$ " screws.

P1 Foot Plate

Align foot plate with the
6 pre-drilled holes

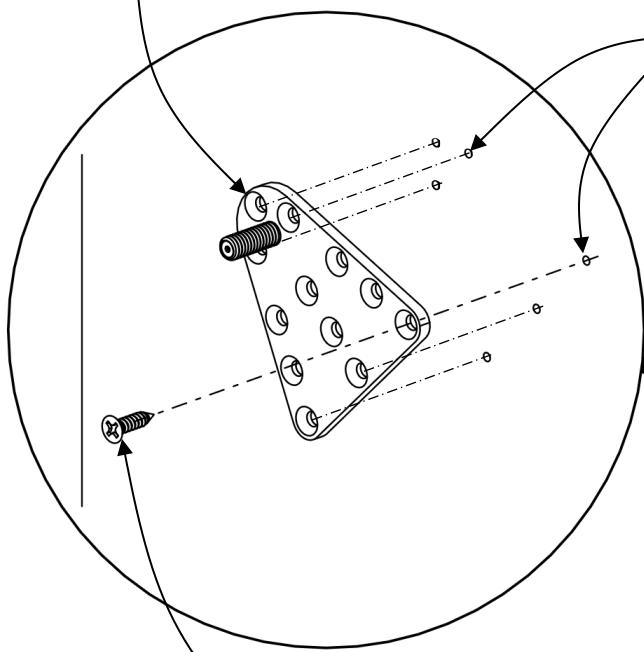


P2 #10 x $\frac{3}{4}$ " long
Flat head screw
12 places per foot
(6 pre-drilled, 6 not pre-drilled)

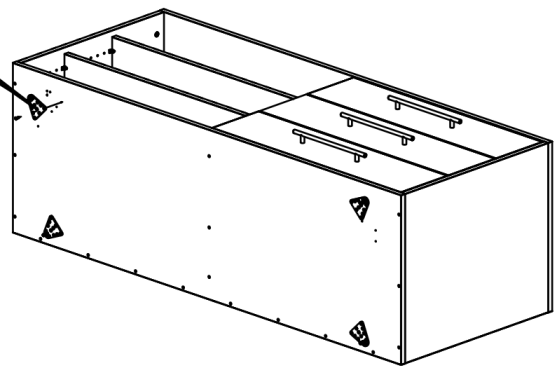


Rhett Installation Instructions

Step 3: Install tapered foot and 5/16-18 glides to each foot plate.



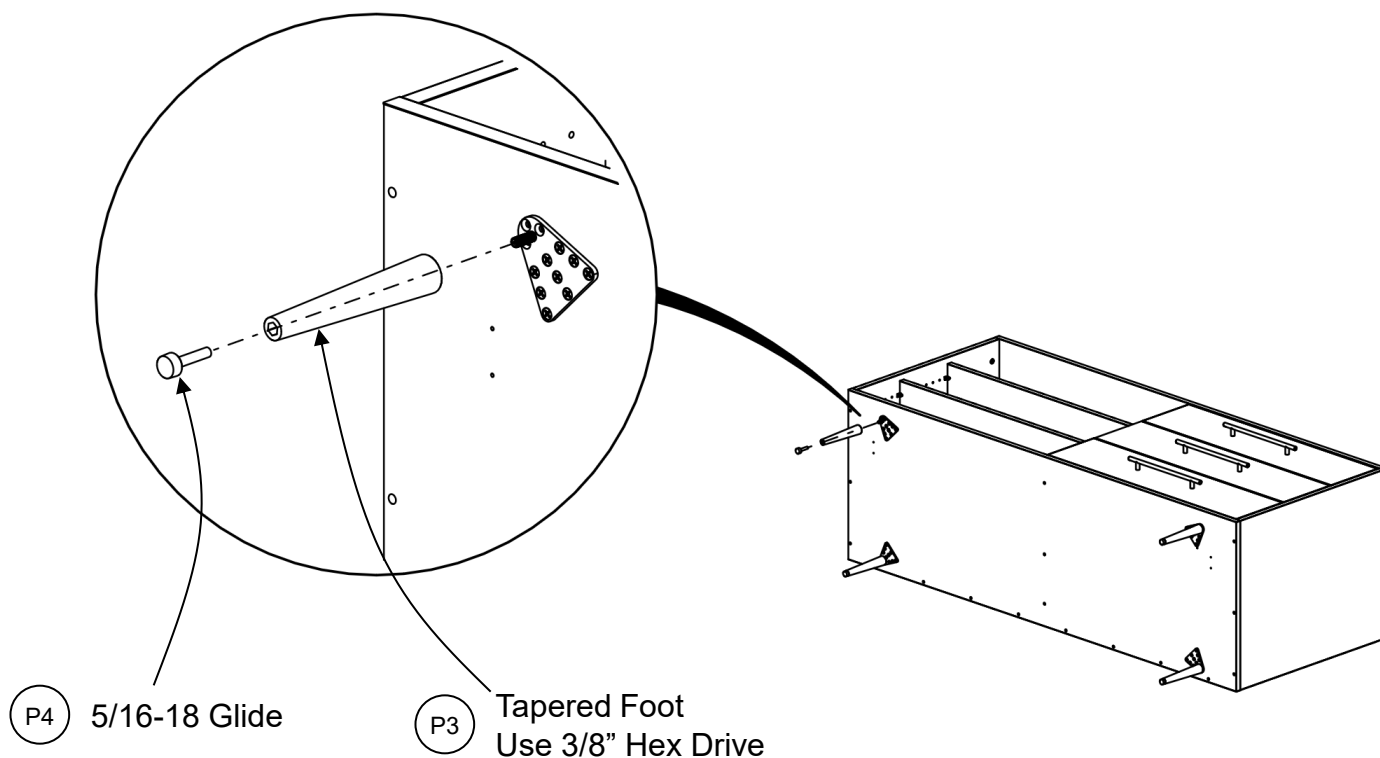


Step 4: Install u-channel, if applicable.

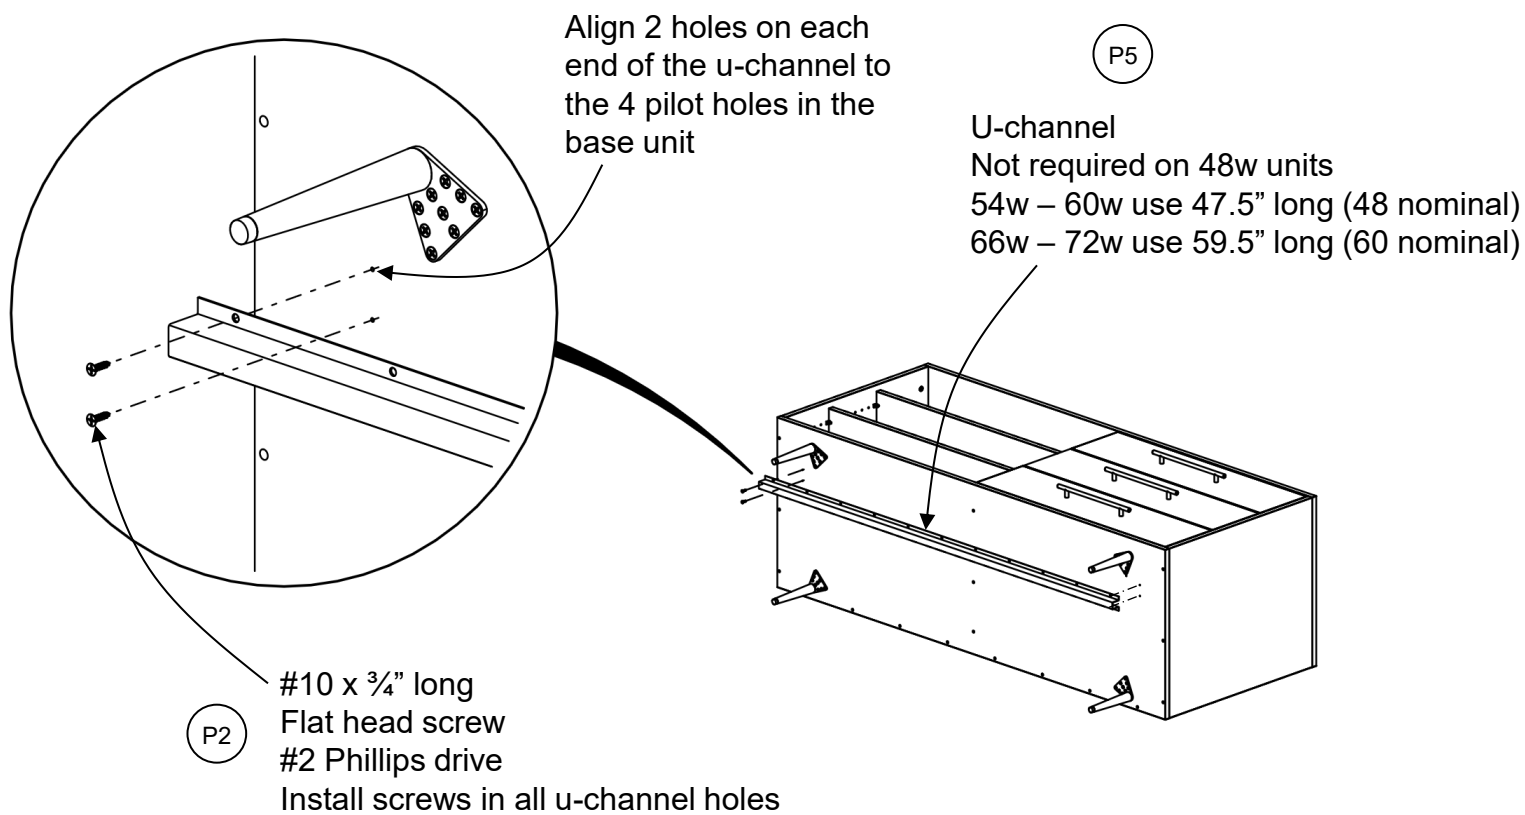

Rhett Installation Instructions



Step 5: Carefully turn unit right side up and level by adjusting glides as necessary.

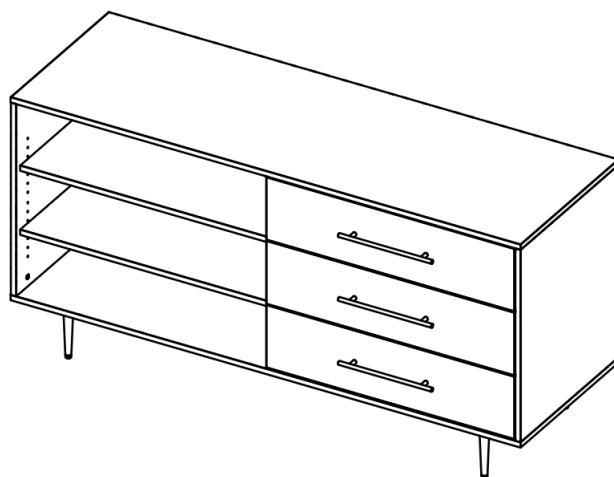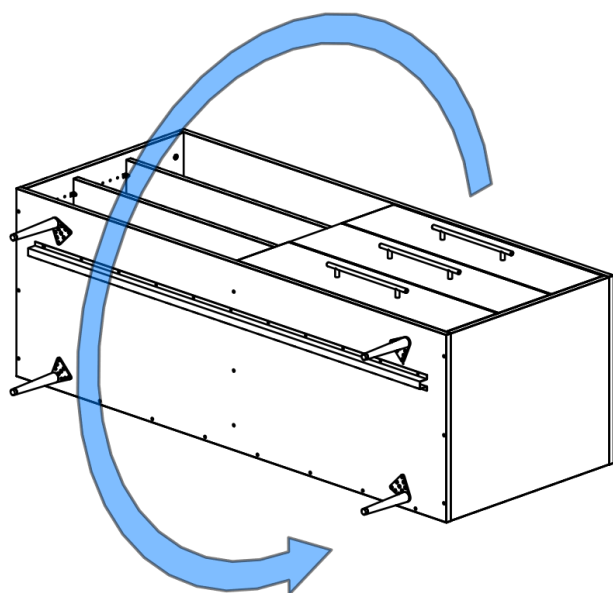

Adjust glides
as necessary





Step 5: Install hutch using double sided tape.

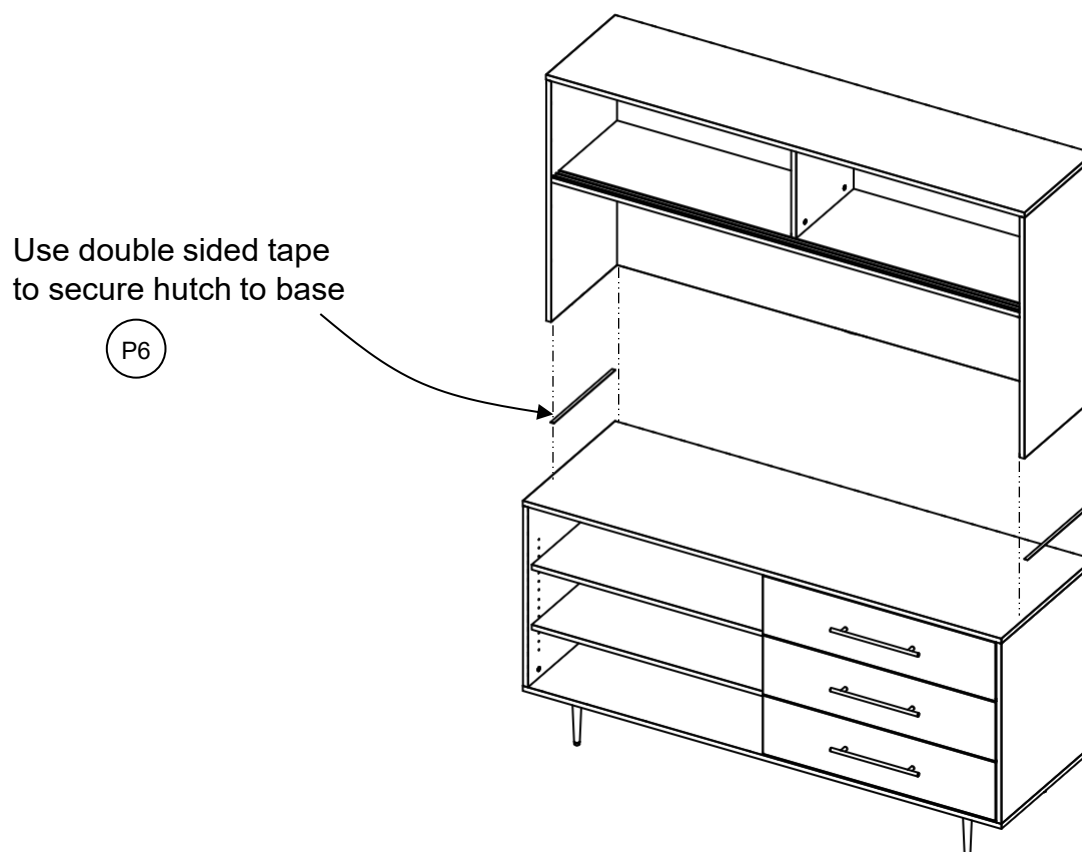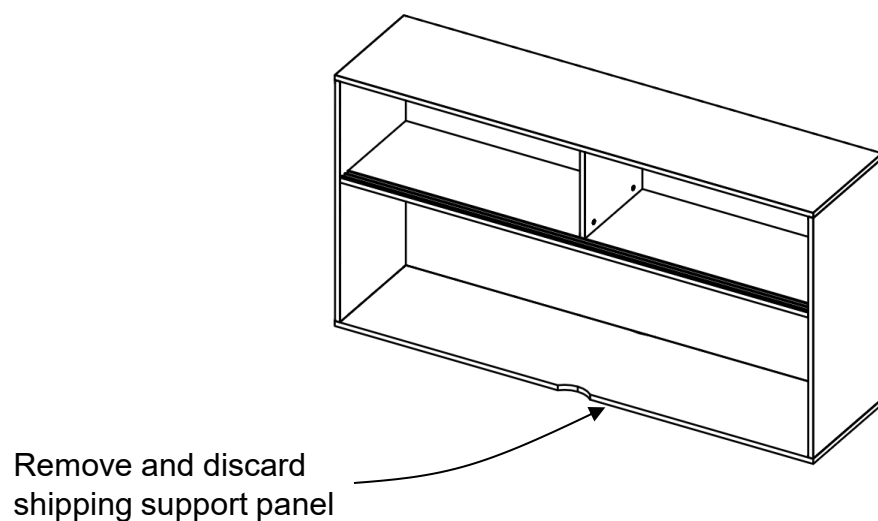

Rhett Installation Instructions

PET Sliding Door Units


Step 6: Install hutch using double sided tape.

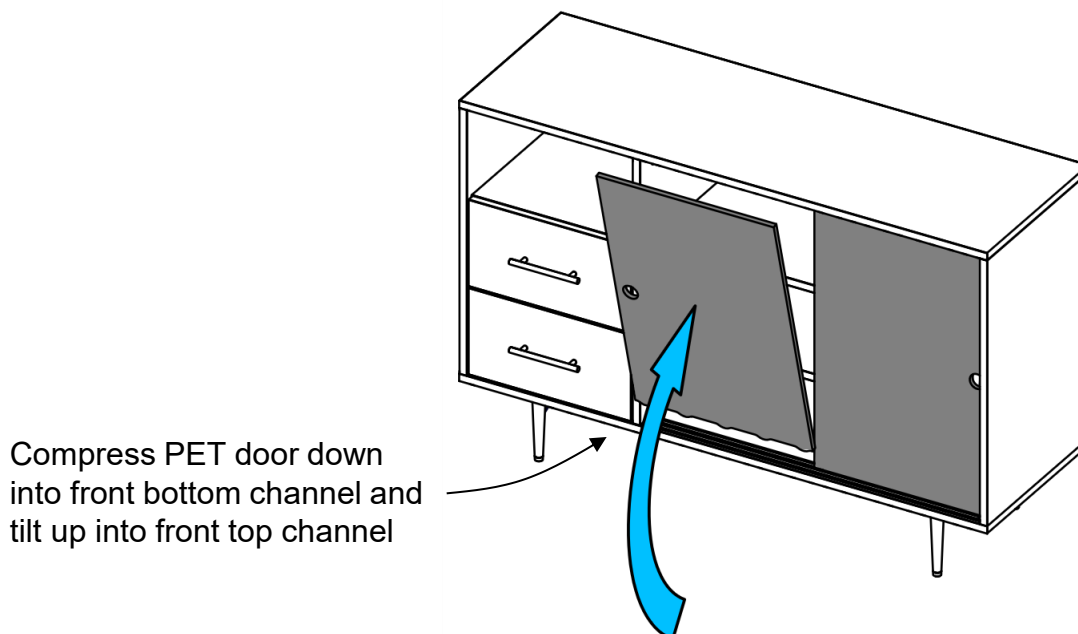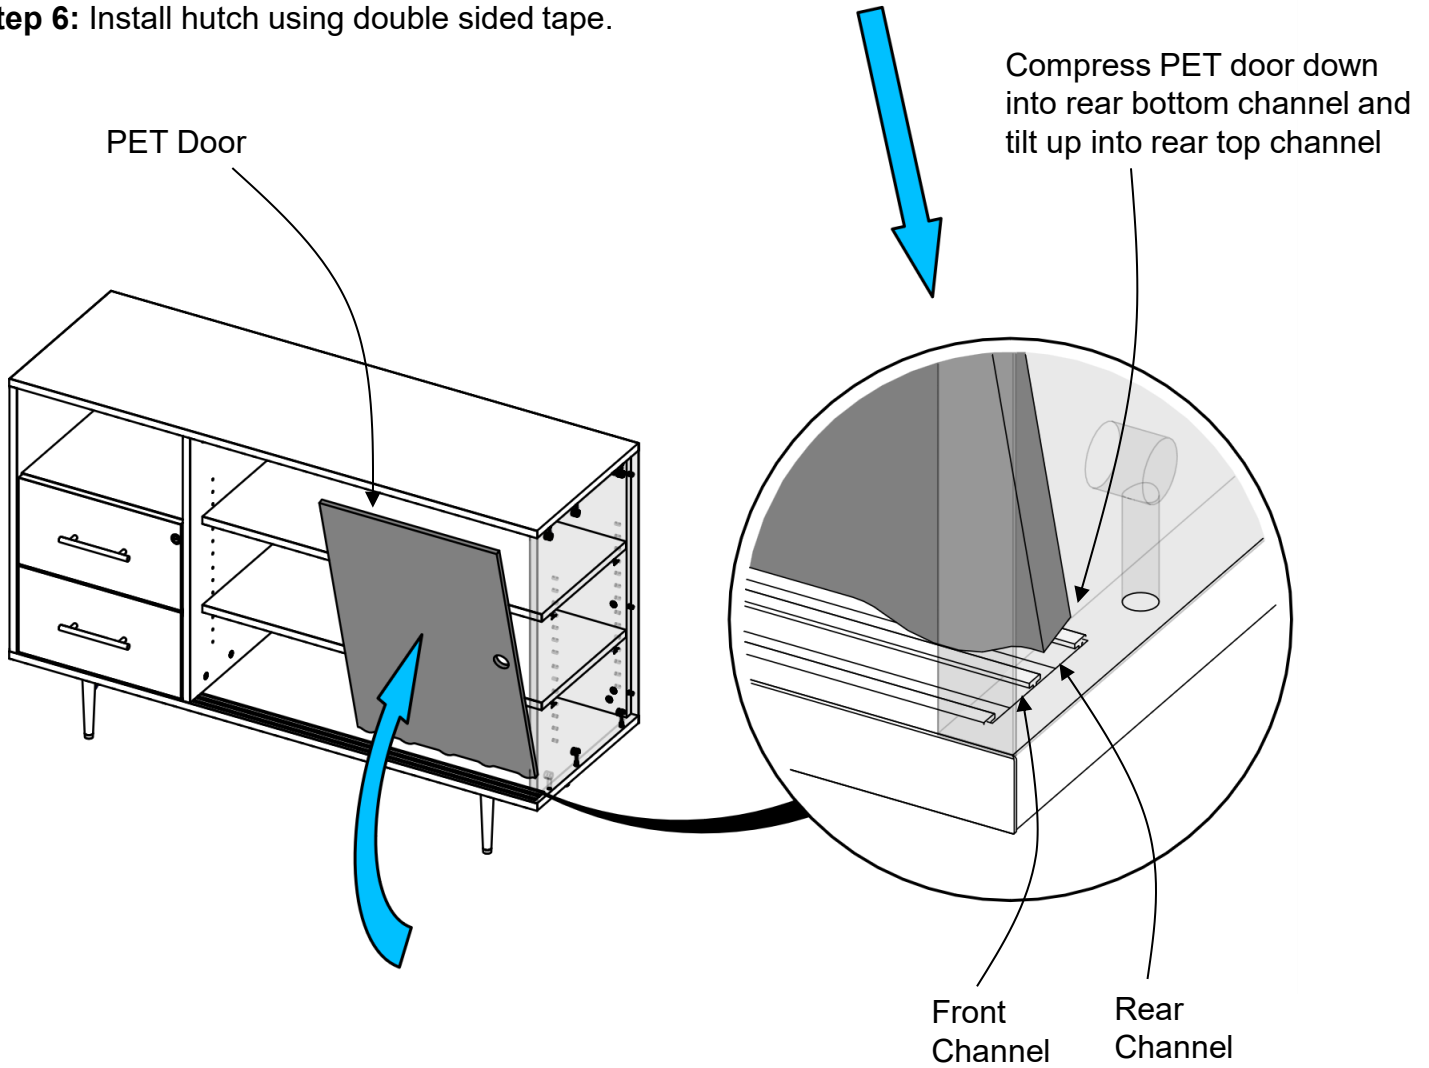

Rhett Installation Instructions

Step 7: Install handles.


Bar Pull #X-BARHANDLE

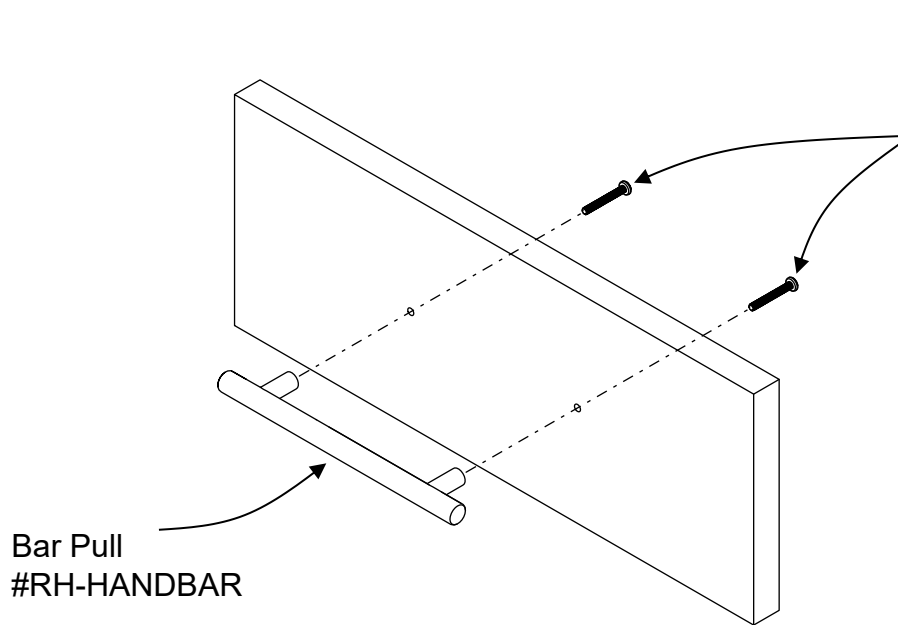

For door installation:
M4 x 25mm Pan Head Screw
#RH-MSZPPM425-A

For drawer installation:
M4 x 40mm Pan Head Screw
#RH-92005A236

Rectangle Pull #X-RECTHANDLE

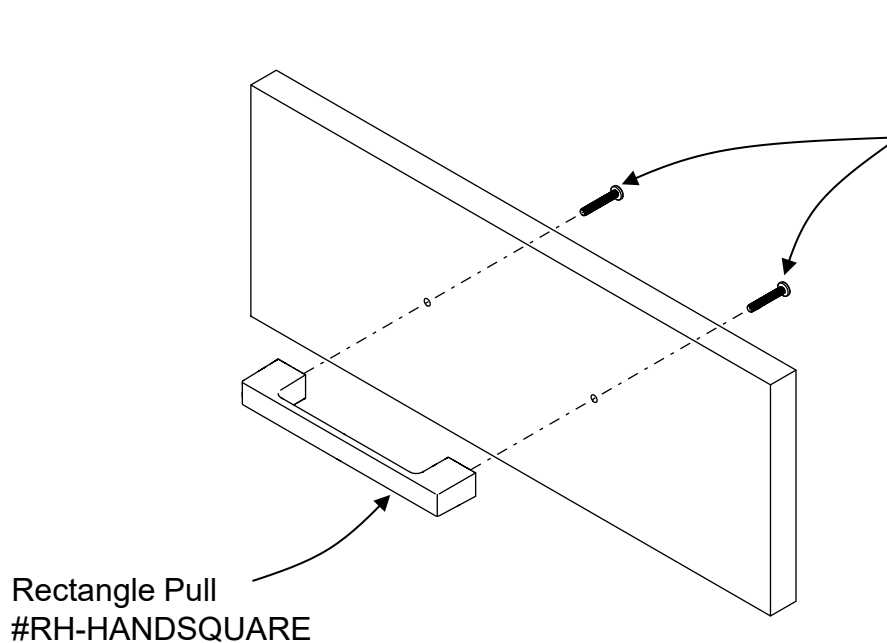


For door installation:
#8-32 X 1" Pan Head Screw
#RH-90272A199

For drawer installation:
#8-32 X 1 1/2" Round Head Screw
#RH-90279A203

Rhett Installation Instructions


L-Pull #X-L-PULLHANDLE

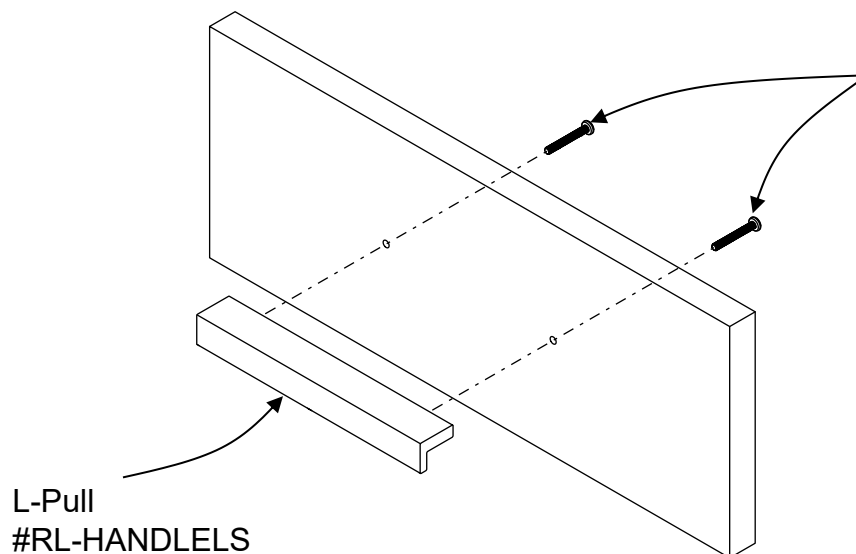

For door installation:
M4 x 25mm Pan Head Screw
#RH-MSZPPM425-A

For drawer installation:
M4 x 40mm Pan Head Screw
#RH-92005A236

Loop Pull #X-LOOPHANDLE

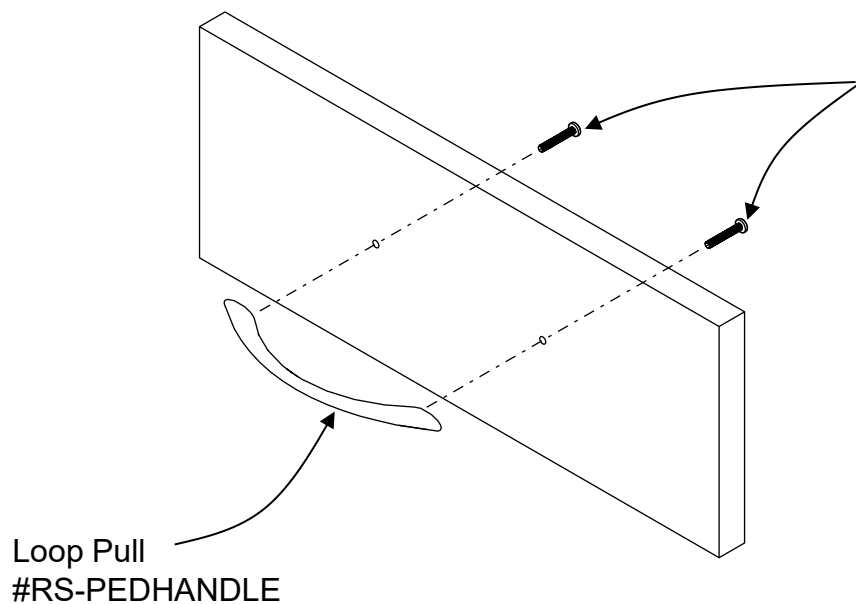


For door installation:
M4 X 22mm Pan Head Screw
#RH-92005A734-I

For drawer installation:
M4 X 35mm Pan Head Screw
#RH-92005A234

Rhett Installation Instructions


13" Bar Pull #X-BARHANDLE13

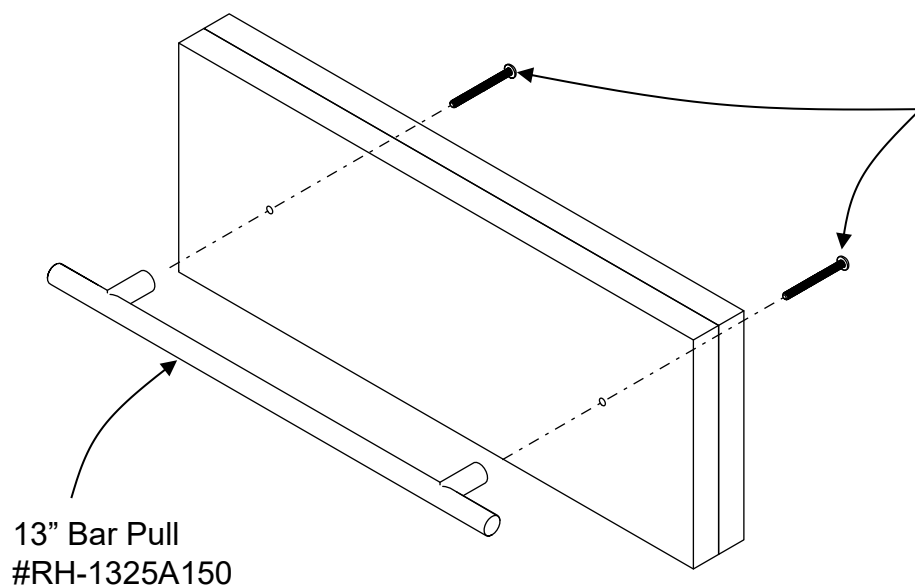

For door installation:
#8-32 x 1" Pan Head Screw
#RH-90272A199

For drawer installation:
#8-32 X 1 1/2" Round Head Screw
#RH-90279A203

Knob Pull #X-ROUND_KNOB

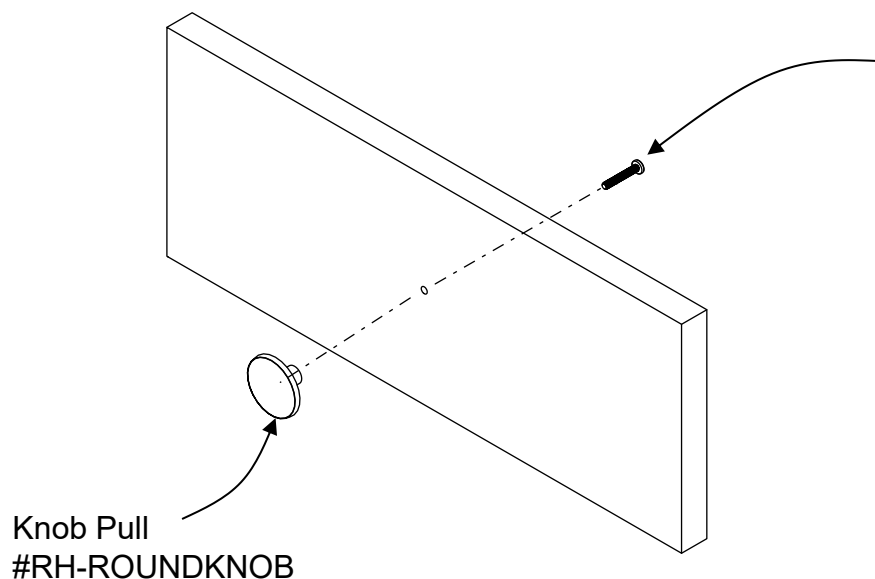

For door installation:
M4 x 25mm Pan Head Screw
#RH-MSZPPM425-A

For drawer installation:
M4 x 40mm Pan Head Screw
#RH-92005A236